QnPRHCPU

MITSUBISHI

User's Manual

(Redundant System)



Mitsubishi Programmable Controller







(Read these precautions before using this product.)

Before using this product, please read this manual and the relevant manuals carefully and pay full attention to safety to handle the product correctly.

In this manual, the safety precautions are classified into two levels: " / WARNING" and " / CAUTION".

<u>∕</u> WARNING

Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.

! CAUTION

Indicates that incorrect handling may cause hazardous conditions, resulting in minor or moderate injury or property damage.

Under some circumstances, failure to observe the precautions given under " \(\hat{\text{!}} \) CAUTION" may lead to serious consequences.

Observe the precautions of both levels because they are important for personal and system safety. Make sure that the end users read this manual and then keep the manual in a safe place for future reference.

[Design Precautions]

MARNING

- Configure safety circuits external to the programmable controller to ensure that the entire system operates safely even when a fault occurs in the external power supply or the programmable controller. Failure to do so may result in an accident due to an incorrect output or malfunction.
 - (1) Configure external safety circuits, such as an emergency stop circuit, protection circuit, and protective interlock circuit for forward/reverse operation or upper/lower limit positioning.
 - (2) The programmable controller stops its operation upon detection of the following status, and the output status of the system will be as shown below.

Status	Output
Overcurrent or overvoltage protection of the power supply module is activated.	All outputs are turned off.
The CPU module detects an error such as a watchdog timer error by the self-diagnostic function.	All outputs are held or turned off according to the parameter setting.

All outputs may turn on when an error occurs in the part, such as I/O control part, where the CPU module cannot detect any error. To ensure safety operation in such a case, provide a safety mechanism or a fail-safe circuit external to the programmable controller. For a fail-safe circuit example, refer to Chapter 10 LOADING AND INSTALLATION in the QCPU User's Manual (Hardware Design, Maintenance and Inspection).

(3) Outputs may remain on or off due to a failure of an output module relay or transistor. Configure an external circuit for monitoring output signals that could cause a serious accident.

[Design Precautions]

MARNING

- In an output module, when a load current exceeding the rated current or an overcurrent caused by a load short-circuit flows for a long time, it may cause smoke and fire. To prevent this, configure an external safety circuit, such as a fuse.
- Configure a circuit so that the programmable controller is turned on first and then the external power supply.
 - If the external power supply is turned on first, an accident may occur due to an incorrect output or malfunction.
- For the operating status of each station after a communication failure, refer to relevant manuals for the network.
 - Incorrect output or malfunction due to a communication failure may result in an accident.
- When changing data of the running programmable controller from a peripheral connected to the CPU module or from a personal computer connected to an intelligent function module, configure an interlock circuit in the sequence program to ensure that the entire system will always operate safely. For program modification and operating status change, read relevant manuals carefully and ensure the safety before operation.
 - Especially, in the case of a control from an external device to a remote programmable controller, immediate action cannot be taken for a problem on the programmable controller due to a communication failure.

To prevent this, configure an interlock circuit in the sequence program, and determine corrective actions to be taken between the external device and CPU module in case of a communication failure.

CAUTION

 Do not install the control lines or communication cables together with the main circuit lines or power cables.

Keep a distance of 100mm (3.94 inches) or more between them.

Failure to do so may result in malfunction due to noise.

When a device such as a lamp, heater, or solenoid valve is controlled through an output module, a large current (approximately ten times greater than normal) may flow when the output is turned from off to on.

Take measures such as replacing the module with one having a sufficient current rating.

• After the CPU module is powered on or is reset, the time taken to enter the RUN status varies depending on the system configuration, parameter settings, and/or program size. Design circuits so that the entire system will always operate safely, regardless of the time.

[Installation Precautions]

CAUTION

• Use the programmable controller in an environment that meets the general specifications in the QCPU User's Manual (Hardware Design, Maintenance and Inspection).

Failure to do so may result in electric shock, fire, malfunction, or damage to or deterioration of the product.

■ To mount the module, while pressing the module mounting lever located in the lower part of the module, fully insert the module fixing projection(s) into the hole(s) in the base unit and press the module until it snaps into place.

Incorrect mounting may cause malfunction, failure or drop of the module.

When using the programmable controller in an environment of frequent vibrations, fix the module with a screw.

Tighten the screw within the specified torque range.

Undertightening can cause drop of the screw, short circuit or malfunction.

Overtightening can damage the screw and/or module, resulting in drop, short circuit, or malfunction.

When using an extension cable, connect it to the extension cable connector of the base unit securely. Check the connection for looseness.

Poor contact may cause incorrect input or output.

• When using a memory card, fully insert it into the memory card slot.

Check that it is inserted completely.

Poor contact may cause malfunction.

Shut off the external power supply for the system in all phases before mounting or removing the module. Failure to do so may result in damage to the product.

A module can be replaced online (while power is on) on any MELSECNET/H remote I/O station or in the system where Redundant CPUs are used.

Note that there are restrictions on the modules that can be replaced online, and each module has its predetermined replacement procedure.

For details, refer to Section 2.4.

Do not directly touch any conductive part of the module.

Doing so can cause malfunction or failure of the module.

When using a Motion CPU module and modules designed for motion control, check that the combinations of these modules are correct before applying power.

The modules may be damaged if the combination is incorrect.

For details, refer to the user's manual for the Motion CPU module.

[Wiring Precautions]

! WARNING

- Shut off the external power supply for the system in all phases before wiring. Failure to do so may result in electric shock or damage to the product.
- After wiring, attach the included terminal cover to the module before turning it on for operation.
 Failure to do so may result in electric shock.

⚠ CAUTION

 Ground the FG and LG terminals to the protective ground conductor dedicated to the programmable controller.

Failure to do so may result in electric shock or malfunction.

- Use applicable solderless terminals and tighten them within the specified torque range. If any spade solderless terminal is used, it may be disconnected when the terminal screw comes loose, resulting in failure.
- Check the rated voltage and terminal layout before wiring to the module, and connect the cables correctly.
 - Connecting a power supply with a different voltage rating or incorrect wiring may cause a fire or failure.
- Connectors for external connection must be crimped or pressed with the tool specified by the manufacturer, or must be correctly soldered.
 - Incomplete connections could result in short circuit, fire, or malfunction.
- Tighten the terminal screw within the specified torque range.
 Undertightening can cause short circuit, fire, or malfunction.
 Overtightening can damage the screw and/or module, resulting in drop, short circuit, or malfunction.
- Prevent foreign matter such as dust or wire chips from entering the module. Such foreign matter can cause a fire, failure, or malfunction.

[Wiring Precautions]

№ WARNING

A protective film is attached to the top of the module to prevent foreign matter, such as wire chips, from entering the module during wiring.

Do not remove the film during wiring.

Remove it for heat dissipation before system operation.

• Mitsubishi programmable controllers must be installed in control panels.

Connect the main power supply to the power supply module in the control panel through a relay terminal block.

Wiring and replacement of a power supply module must be performed by maintenance personnel who is familiar with protection against electric shock. (For wiring methods, refer to the QCPU User's Manual (Hardware Design, Maintenance and Inspection)).

[Startup and Maintenance Precautions]

MARNING

- Do not touch any terminal while power is on.
 Doing so will cause electric shock.
- Correctly connect the battery connector.
 Do not charge, disassemble, heat, short-circuit, solder, or throw the battery into the fire.
 Doing so will cause the battery to produce heat, explode, or ignite, resulting in injury and fire.
- Shut off the external power supply for the system in all phases before cleaning the module or retightening the terminal screws or module fixing screws.

Failure to do so may result in electric shock.

Undertightening the terminal screws can cause short circuit or malfunction.

Overtightening can damage the screw and/or module, resulting in drop, short circuit, or malfunction.

[Startup and Maintenance Precautions]

CAUTION

• Before performing online operations (especially, program modification, forced output, and operation status change) for the running CPU module from the peripheral connected, read relevant manuals carefully and ensure the safety.

Improper operation may damage machines or cause accidents.

- Do not disassemble or modify the modules.
 Doing so may cause failure, malfunction, injury, or a fire.
- Use any radio communication device such as a cellular phone or PHS (Personal Handy-phone System) more than 25cm (9.85 inches) away in all directions from the programmable controller. Failure to do so may cause malfunction.
- Shut off the external power supply for the system in all phases before mounting or removing the module. Failure to do so may cause the module to fail or malfunction.

A module can be replaced online (while power is on) on any MELSECNET/H remote I/O station or in the system where Redundant CPUs are used.

Note that there are restrictions on the modules that can be replaced online, and each module has its predetermined replacement procedure.

For details, refer to Section 2.4.

- After the first use of the product, do not mount/remove the module to/from the base unit, and the terminal block to/from the module more than 50 times (IEC 61131-2 compliant) respectively. Exceeding the limit of 50 times may cause malfunction.
- Do not drop or apply shock to the battery to be installed in the module. Doing so may damage the battery, causing the battery fluid to leak inside the battery. If the battery is dropped or any shock is applied to it, dispose of it without using.
- Before handling the module, touch a grounded metal object to discharge the static electricity from the human body.

Failure to do so may cause the module to fail or malfunction.

[Disposal Precautions]

CAUTION

When disposing of this product, treat it as industrial waste.
 When disposing of batteries, separate them from other wastes according to the local regulations.
 (For details of the Battery Directive in EU member states, refer to the QCPU User's Manual (Hardware Design, Maintenance and Inspection).)

[Transportation Precautions]

CAUTION

When transporting lithium batteries, follow the transportation regulations.
 (For details of the regulated models, refer to the QCPU User's Manual (Hardware Design, Maintenance and Inspection).)

CONDITIONS OF USE FOR THE PRODUCT

- (1) Mitsubishi programmable controller ("the PRODUCT") shall be used in conditions;
 - i) where any problem, fault or failure occurring in the PRODUCT, if any, shall not lead to any major or serious accident; and
 - ii) where the backup and fail-safe function are systematically or automatically provided outside of the PRODUCT for the case of any problem, fault or failure occurring in the PRODUCT.
- (2) The PRODUCT has been designed and manufactured for the purpose of being used in general industries.

MITSUBISHI SHALL HAVE NO RESPONSIBILITY OR LIABILITY (INCLUDING, BUT NOT LIMITED TO ANY AND ALL RESPONSIBILITY OR LIABILITY BASED ON CONTRACT, WARRANTY, TORT, PRODUCT LIABILITY) FOR ANY INJURY OR DEATH TO PERSONS OR LOSS OR DAMAGE TO PROPERTY CAUSED BY the PRODUCT THAT ARE OPERATED OR USED IN APPLICATION NOT INTENDED OR EXCLUDED BY INSTRUCTIONS, PRECAUTIONS, OR WARNING CONTAINED IN MITSUBISHI'S USER, INSTRUCTION AND/OR SAFETY MANUALS, TECHNICAL BULLETINS AND GUIDELINES FOR the PRODUCT. ("Prohibited Application")

Prohibited Applications include, but not limited to, the use of the PRODUCT in;

- Nuclear Power Plants and any other power plants operated by Power companies, and/or any other cases in which the public could be affected if any problem or fault occurs in the PRODUCT.
- Railway companies or Public service purposes, and/or any other cases in which establishment of a special quality assurance system is required by the Purchaser or End User.
- Aircraft or Aerospace, Medical applications, Train equipment, transport equipment such as
 Elevator and Escalator, Incineration and Fuel devices, Vehicles, Manned transportation,
 Equipment for Recreation and Amusement, and Safety devices, handling of Nuclear or
 Hazardous Materials or Chemicals, Mining and Drilling, and/or other applications where there is a
 significant risk of injury to the public or property.

Notwithstanding the above, restrictions Mitsubishi may in its sole discretion, authorize use of the PRODUCT in one or more of the Prohibited Applications, provided that the usage of the PRODUCT is limited only for the specific applications agreed to by Mitsubishi and provided further that no special quality assurance or fail-safe, redundant or other safety features which exceed the general specifications of the PRODUCTs are required. For details, please contact the Mitsubishi representative in your region.

REVISIONS

The manual number is given on the bottom left of the back cover.

Print Date	Manual Number	Revision
Jun., 2004	SH(NA)-080486ENG-A	First edition
Jun., 2005	SH(NA)-080486ENG-B	Partial correction GENERIC TERMS AND ABBREVIATIONS, Chapter 1, Section 2.3, 6.2.2, 8.1.1, 8.3.3, 9.1, 9.2
Aug., 2005	SH(NA)-080486ENG-C	Partial correction GENERIC TERMS AND ABBREVIATIONS, Section 2.1, 2.3, Chapter 4, Section 5.1.3, 5.1.4, 5.3.1, 5.4, 5.5.1, 5.5.3, 5.5.6, 5.5.7, 5.6.2, 5.7, 5.9, 6.2.1, 7.1, 8.3.3, 9.2, Appendix 1, Appendix 4
Mar., 2006	SH(NA)-080486ENG-D	Partial correction GENERIC TERMS AND ABBREVIATIONS, Section 2.1, 2.3, 4.2, 5.3.5, 6.2.2, Appendix 4.3, Appendix 4.5
Jun., 2006	SH(NA)-080486ENG-E	Model addition QJ71PB92V Addition Section 6.2.6 Partial correction ABOUT MANUALS, Section 1.2, 2.1, 2.3, 5.3.1, 5.3.4, 6.2, 7.1, 9.2
Jun., 2006	SH(NA)-080486ENG-F	Partial correction SAFETY PRECAUTIONS, Appendix 4.3, Section 2.3, 2.4, Appendix 4.5
Dec., 2006	SH(NA)-080486ENG-G	Partial correction SAFETY PRECAUTIONS, Section 4.2, 5.5.3, 7.1, 7.3, 8.2, Appendix 4.5, Appendix 5
Apr., 2007	SH(NA)-080486ENG-H	Revision involving Redundant CPU serial No.09012 Model addition Q65WRB Partial correction SAFETY PRECAUTIONS, Section 1.1, 1.2, 2.1, 2.3, 2.4, Chapter 4, Section 4.1, 4.2, 4.4, 5.1.3, 5.1.4, 5.1.5, 5.3.1, 5.2, 5.4, 5.5.1, 5.6.1, 5.8, 5.10.1, 5.10.2, 6.1.3, 6.2, 6.2.1, 6.2.2, 6.2.3, 6.2.4, 6.2.5, 6.3, 6.3.1, 6.3.2, 6.3.3, 6.3.4, 7.1, 7.2, Chapter 8, Section 8.1.2, 8.1.4, 8.1.5, 8.3.4, 8.3.6, 9.2, Appendix 1, Appendix 2, Appendix 3 Addition Section 8.1.9, 8.1.10, 8.1.11, 8.3.8, 8.3.10, Chapter 6, Section 6.1, 6.2, 6.3, 6.4, 6.5, 6.6, 6.7, 6.8, 6.9, 6.10, Chapter 7 Chapter number correction Section 8.3.8 → 8.3.9
Sep., 2007	SH(NA)-080486ENG-I	Partial correction GENERIC TERMS AND ABBREVIATIONS, Section 1.1, 1.2, 2.1, 2.3, 2.4, 3.3, 5.1.4, 5.1.5, 5.2, 5.4, 5.3.4, 5.3.6, 5.5.1, 5.5.4, 5.5.5, 5.6.2, 5.9, 5.10.1, 5.10.2, 6.1.3, 6.2, 6.2.2, 6.2.4, 6.2.5, 6.3, 6.3.2, 6.3.3, 6.3.4, 6.4, 7.1, 7.2, 8.1, 8.2, 9.2, Appendix 1, Appendix 2, Appendix 3, Appendix 4, Appendix 5, Appendix 7
Nov.,2007	SH(NA)-080486ENG-J	Revision due to a support of Redundant CPU having serial number 09102 and overall review

The manual number is given on the bottom left of the back cover.

Print Date	Manual Number	Revision
May, 2008		Revision due to a support of Redundant CPU having serial number 10042, This manual has been revised wholly because of integration of existing MELSECNET/G network modules into CC-Link IE Controller Network module. Partial correction GENERIC TERMS AND ABBREVIATIONS, Section 1.1, 1.2, 2.1, 2.3, 2.4, 4.2, 5.1, 5.1.1, 5.3.3, 5.3.4, 5.4, 5.6.1, 5.6.2, 5.7, 5.9, 5.10.1, 5.10.2, 6.1.1, 6.1.3, 6.3.2, 6.2, 6.2.1, 6.2.2, 6.2.3, 6.2.4, 6.2.5, 6.3, 6.3.1, 6.3.2, 6.3.3, 6.3.4, 6.4, 7.1, 7.3, 8.1.7, 8.1.16, 8.3.1, 8.3.2, 8.3.3, 8.3.4, 8.3.5, 8.3.6, 8.3.9, 9.2, Appendix 1, Appendix 2, Appendix 3, Appendix 4.1, Appendix 5 Addition Section 8.1.12, 8.1.13, 8.1.14, 8.1.15
Mar., 2009	SH(NA)-080486ENG-L	Partial correction Section 2.4, 7.1
Jul., 2009	SH(NA)-080486ENG-M	[Partial correction] SAFETY PRECAUTIONS, GENERIC TERMS AND ABBREVIATIONS
Apr., 2010	SH(NA)-080486ENG-N	Partial correction SAFETY PRECAUTIONS, Section 2.3, 5.5.1, 6.3, Appendix 4.4 [Addition] CONDITIONS OF USE FOR THE PRODUCT
Jun., 2011	SH(NA)-080486ENG-O	[Partial correction] INTRODUCTION, Section 2.3, Appendix 4.4, 4.5

Japanese Manual Version SH-080474-O

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

INTRODUCTION

Thank you for choosing the Mitsubishi MELSEC-Q Series of General Purpose Programmable Controllers. Before using the equipment, please read this manual carefully to develop full familiarity with the functions and performance of the Q series PLC you have purchased, so as to ensure correct use. When applying the program examples introduced in this manual to the actual system, ensure the applicability and confirm that it will not cause system control problems.

CONTENTS

SAI	ETY	PREC	AUTIONS	••••• A - 1
СО	NDITI	ONS (OF USE FOR THE PRODUCT	••••• A - 8
RE'	VISIO	NS••••	•••••••••••••••••••••••••••••••••••	••••• A - 9
AB	N TUC	/IANU	ALS	••••• A - 15
НО	w to	USE	THIS MANUAL ······	••••• A - 17
НО	W THI	IS MA	NUAL IS ORGANIZED ······	••••• A - 18
GE	NERIC	TER	MS AND ABBREVIATIONS ······	••••• A - 20
REI	LEVAI	NT TE	RMS	••••• A - 22
СН	APT	ER1	OVERVIEW	1 - 1 to 1 - 16
	1.1	Redu	ındant System Overview······	•••••1 - 4
	1.2		ures ······	
СН	IAPT	ER2	SYSTEM CONFIGURATION	2 - 1 to 2 - 22
	2.1	Syste	em Configuration ·····	•••••2 - 1
	2.2	Perip	pheral Device Configuration ······	••••• 2 - 12
-	2.3		cable Devices and Software ·······	
	2.4		em Configuration Cautions ······	
CH	IAPT	ER3	TRACKING CABLE	3 - 1 to 3 - 4
	3.1	Spec	ifications ·····	•••••3 - 1
	3.2	Part	Names ······	•••••3 - 1
	3.3		necting and Disconnecting a Tracking Cable ······	
CH	IAPT	ER4	PROCEDURE FOR STARTING UP A REDUNDANT SYSTEM	4 - 1 to 4 - 17
	4.1	Mou	nting Modules ·····	••••4 - 6
	4.2	Wirir	ıg •••••••	•••••4 - 7
-	4.3	Mod	ule Initial Settings·····	••••• 4 - 12
	4.4		irming that the Power Supply is ON ······	
	4.5		irming System A/System B······	

	4.6	Sta	arting up/Connecting GX Developer ·······	4	- 13
	4.7	Wri	iting Parameters and Programs to CPU •••••••••••••••••••••••••••••••••••	4	- 14
_	4.8	Res	starting System A and System B ······	••••• 4	- 15
-	4.9		or Check ••••••		
-					
-			nfirming the Control System/Standby System ••••••••••••••••••••••••••••••••••••		
-	4.11	Rui	nning CPU Modules······	•••••• 4	- 16
CH	APT	ER5	5 REDUNDANT SYSTEM FUNCTIONS	5 - 1 to 5 - 1	140
	5.1	Bas	sic Concept of Redundant System ······	5	5 - 1
	5.1		Determination of System A/System B	5	5 - 3
	5.1		Determination of Control System and Standby System •••••••	5	5 - 5
	5.1		Operation Mode ······		
	5.1		System Consistency Check ······		
	5.1		Self Diagnostics Function		
	5.1		Start Mode ······		
_	5.2		NCTION LIST ·····		
	5.3	The	e System Switching Function······	5	- 33
	5.3	3.1	System Switching Method ······		
	5.3	3.2	System Switching Execution Timing		
	5.3	3.3	System Switching Execution Possibility		
	5.3	3.4	Both Systems Operations After System Switching •••••••	5	- 51
	5.3	3.5	Special Relays/Registers For System Switching ······	5	- 53
	5.3	3.6	System Switching Precautions •••••••	5	- 56
	5.4	Ор	eration Mode Change Function······	5	- 58
	5.5	Tra	acking Function·····	5	- 73
	5.5	5.1	Tracking Function Overview •••••••	5	- 73
	5.5	5.2	Tracking Execution Procedure		
	5.5	5.3	Tracking Data ······		
	5.5	5.4	Tracking Data Settings ······		
	5.5	5.5	Tracking Block And Tracking Trigger ······		
	5.5		Tracking Execution		
	5.5		Tracking Mode ······		
	5.5		Device Data Used By The New Control System •••••••		
_	5.6	Onl	line Program Change for Redundancy······		
	5.6		Writing to the CPU Module in STOP Status ······		
	5.6	5.2	Program Change While CPU is Running •••••••	5 -	100
	5.7	Me	mory Copy From Control System To Standby System ······	5 -	111
	5.8	On	line Module Change (Hot Swapping) ······	·····5 -	123
	5.9		twork Module Redundant Group Settings ······		
-	5.10		dundant CPU Functions Restricted in Redundant System ······		
-		0.1	Enforced ON/OFF of external I/O •••••••••••••••••••••••••••••••••••	·····5 -	127
		0.2	Remote Operation for Redundant System ••••••••••••••••••••••••••••••••••••		
	5.11	Acc	cess to Module Mounted on Extension Base Unit······		

CI	HAPTER6	REDUNDANT SYSTEM NETWORKS	6 - 1 to 6 - 55
	6.1 Co	mmunication with GX Developer and PX Developer ······	•••••6 - 1
	6.1.1	Communication Methods with GX Developer ······	•••••6 - 1
	6.1.2	Confirming the Connection Target on GX Developer ••••••••••••••••••••••••••••••••••••	•••••6 - 3
	6.1.3	Cautions on Access from GX Developer and PX Developer ······	••••6 - 4
	6.2 Re	dundant System Network Overview ······	
	6.2.1	CC-Link IE Controller Network or MELSECNET/H PLC to PLC network ••••••	
	6.2.2	MELSECNET/H Remote I/O network •••••••	
	6.2.3	Ethernet ······	
	6.2.4	CC-Link•••••••	
	6.2.5	Serial Communication Modules ······	
	6.2.6	PROFIBUS-DP ······	
	6.3 Coi	mmunication between the Both Systems CPU Module and GOTs ••••••••••••••••••••••••••••••••••••	6 - 44
	6.3.1	When connecting GOTs to MELSECNET/H remote I/O station ••••••••••••••••••••••••••••••••••••	••••• 6 - 46
	6.3.2	When Connecting GOTs to CC-Link •••••••	····· 6 - 48
	6.3.3	Communication when the GOT is Connected to CC-Link IE Controller Networ	
		MELSECNET/H, or MELSECNET/10 PLC to PLC Network ••••••••••••••••••••••••••••••••••••	••••• 6 - 49
	6.3.4	When Connecting GOTs to a Ethernet	····· 6 - 50
	6.4 Pre	cautions for Accessing Redundant CPU from Other Networks ••••••••••••••••••••••••••••••••••••	6 - 52
	6.5 Pre	cautions for Writing Device Data from Other Station ••••••	••••• 6 - 54
CI	HAPTER7	PROGRAMMING CAUTIONS	7 - 1 to 7 - 23
	7.1 Ins	tructions Restricted in Use for Redundant System ······	•••••7 - 1
		utions on Fixed-Scan Clocks and Fixed Scan Execution Type Programs •••••••	
		cautions for Using Annunciator (F) in Redundant System·····	
		cautions at System Switching Occurrence ······	
		cautions of Programming when Connecting Extension Base Unit ••••••••••••••••••••••••••••••••••••	
CI	HAPTER8	3 TROUBLESHOOTING	8 - 1 to 8 - 52
_			
	8.1 Tro	ubleshooting Flow ••••••• Flow for the Case where the "MODE" LED is not ON••••••••••••••••••••••••••••••••••••	•••••8 - 3
		Flow for the Case where the "MODE" LED is not ON••••••••••••••••••••••••••••••••••••	•••••8 - 4
	8.1.2	When the CPU Module "BACKUP" LED is ON (Red)************************************	•••••8 - 5
	8.1.3	When the "SYSTEM A/B" LED is flashing	
	8.1.4	When the System A/System B CPU module "RUN" LED is not ON	••••• 8 - 10
	8.1.5	When System Switching has Occurred •••••••••••••••••••••••••••••••••••	••••• 8 - 12
	8.1.6	When System Switching has failed ••••••••••••••••••••••••••••••••••••	
	8.1.7	When "TRK. INIT. ERROR (error code: 6140)" Occurred at Redundant System	·
	8.1.8	When "CONTROL SYS. DOWN (error code: 6310 to 6312)" Occurred at Red	-
	0.4.0	Startup ••••••••••••••••••••••••••••••••••••	
	8.1.9	When "BASE LAY ERROR" Occurs ••••••••••••••••••••••••••••••••••••	
	8.1.10	When "UNIT LAY. DIFF." Occurs	
	8.1.11	When "SP. UNIT DOWN" Occurs	
	8.1.12	When "SP. UNIT LAY ERROR" Occurs ••••••••••••••••••••••••••••••••••••	
	ניף ריע		
	8.1.13		
	8.1.14	When "LINK PARA. ERROR" Occurs ••••••••••••••••••••••••••••••••••••	8 - 27

	8.1	wh Co	hen "CAN'T SWITCH" Occurs to Control System CPU Module due to Communication Error nen Turning ON/OFF Power Supply of CPU Module or Booting and Shutting Down Personal omputer in CC-Link IE Controller Network or MELSECNET/H	
	8.2	Error C	clear	32
	8.3	Replac	ing Module in Redundant System······ 8 - 3	36
	8.3	3.1 CF	PU Module Replacement ····································	36
	8.3	3.2 Pc	ower Supply Module Replacement Procedure·······8 - 3	38
	8.3	3.3 Re	edundant Power Supply Replacement Procedure ····································	40
	8.3) Module Replacement Procedure ······· 8 - 4	
	8.3		etwork Module Replacement Procedure······· 8 - 4	
	8.3		ain Base Unit Replacement Procedure ······· 8 - 4	
	8.3	3.7 Pr	ocedure for Replacing Module mounted on the I/O Station of Redundant System •••••• 8 - 4	48
	8.3	8.8 Re	eplacement of Modules Mounted to Extension Base Unit································ 8 - 4	49
	8.3		acking Cable Replacement 8 - 9	
	8.3	3.10 Re	eplacement Procedures of Extension Cable ······· 8 - 9	52
CH	HAPTI	ER9 I	PROCESSING TIME FOR REDUNDANT SYSTEMS 9 - 1 to 9 -	8
	9.1	Extens	ion of Scan Time due to Tracking ·······9 -	
	9.2	System	n Switching Time ······9 -	· C
ΑF	PPENI	DICES	App - 1 to App - 5	6
	Appen	ıdix 1	Comparison of Q4ARCPU and QnPRHCPU ······ App -	- 1
	Appen		Comparison of Qn(H)CPU and QnPRHCPU ······ App -	
	Appen		Comparison of QnPHCPU and QnPRHCPU ······ App -	
	Appen		Sample Programs when Using CC-Link ······App -	
		endix 4.		
		endix 4.		
		endix 4.	. •	
		endix 4.	···	
		endix 4.		
	Appen	ıdix 5	Method for Starting up the Previous Control System ••••••App - 2	26
	Appen	ıdix 6	Precautions for Using Serial Communication Module ••••••App - 3	
	App	endix 6.	1 CSET Instruction App - 3	33
	App	endix 6.		
	App	endix 6.		
	App	endix 6.		
	App	endix 6.		
	App	endix 6.		
	App	endix 6.		
		endix 6.		
		endix 6.		
		endix 6.		
	Appen	idix 7	Cautions on Communications Made via Module on Extension Base Unit ••••••App - 9	55
N	DEX		INDEX - 1 to INDEX -	3

ABOUT MANUALS

The following manuals are also related to this product. In necessary, order them by quoting the details in the tables below.

Related Manuals

Manual Name	Manual Number (Model Code)
QCPU User's Manual (Hardware Design, Maintenance and Inspection) This manual provides the specifications of the CPU modules, power supply modules, base units, extension cables, memory cards and others. (Sold separately	SH-080483ENG (13JR73)
Qn(H)/QnPH/QnPRHCPU User's Manual(Function Explanation, Program Fundamentals) This manual explains the functions, programming methods, devices necessary to create programs with the QCPU. (Sold separately)	SH-080808ENG (13JZ28)
MELSEC-Q/L Programming Manual (Common Instruction) This manual describes how to use the sequence instructions and application instructions. (Sold separately)	SH-080809ENG (13JW10)
MELSEC-Q/L/QnA Programming Manual (PID Control Instructions) This manual describes the dedicated instructions used to exercise PID control. (Sold separately)	SH-080040 (13JF59)
MELSEC-Q/L/QnA Programming Manual (SFC) This manual explains the system configuration, performance specifications, functions, programming, debugging, error codes and others of MELSAP3. (Sold separately)	SH-080041 (13JF60)
MELSEC-Q/L Programming Manual (MELSAP-L) This manual describes the programming methods, specifications functions, and so on that are necessary to create the MELSAP-L type SFC program. (Sold separately)	SH-080076 (13JF61)
QnPHCPU/QnPRHCPU Programming Manual (Process Control Instructions) This manual describes the programming procedures, device names, and other items necessary to implement PID control using process control instructions. (Sold separately)	SH-080316E (13JF67)
MELSEC-Q/L Programming Manual (Structured Text) This manual describes the structured text language programming methods. (Sold separately)	SH-080366 (13JF68)
CC-Link IE Controller Network Reference Manual Explains the specifications, procedures and settings before system operation, parameter setting, programming, and troubleshooting of a CC-Link IE Controller Network. (Sold separately)	SH-080668ENG (13JV16)
Q corresponding MELSECNET/H Network System Reference Manual (Remote I/O network) This manual describes the system configuration, performance, specifications and programming of MELSECNET/H network system (Remote I/O network). (Sold separately)	SH-080124 (13JF96)
Type MELSECNET/10 Network system (PLC to PLC network) Reference Manual This manual describes the system configuration, performance, specifications and programming of MELSECNET/10 network system (PLC to PLC network). (Sold separately)	IB-66440 (13JE33)

Related Manuals

Manual Name	Manual Number (Model Code)
Q Corresponding Serial Communication Module User's Manual (Basic) This manual provides an overview of the module and describes the applicable system configuration, the specifications, the procedures prior to operations, the basic methods of communicating with the external device, maintenance and inspection, and the troubleshooting of the Q-Corresponding Serial Communication Module. (Sold separately)	SH-080006 (13JL86)
MELSEC-Q/L Serial Communication Module User's Manual (Application) This manual contains information on how to perform data communication with external devices using the module's special functions. (Sold separately)	SH-080007 (13JL87)
Q Corresponding Ethernet Interface Module User's Manual (Basic) This manual contains information on the specifications of the Ethernet module, the procedures for data communications with external devices, circuit connection (open/close), fixed buffer exchange, random access buffer exchange, and the troubleshooting. (Sold separately)	SH-080009 (13JL88)
Q Corresponding Ethernet Interface Module User's Manual (Application) This manual explains the e-mail function of the Ethernet module, the programmable controller CPU status monitoring function, the communication function via MELSECNET/H, MELSECNET/10 as well as the communication function using data link instructions, and how to use file transfer (FTP server), etc. (Sold separately)	SH-080010 (13JL89)
MELSEC-Q/L MELSEC Communication Protocol Reference Manual This manual explains the communication methods and control procedures through the MC protocol for the external devices to read and write data from/to the CPU module using the serial communication module/ Ethernet module. (Sold separately)	SH-080008 (13JF89)
CC-Link System Master/Local Module User's Manual This manual describes the system configuration, performance specification, function, handling, wiring and troubleshooting for QJ61BT11N. (Sold separately)	SH-080394 (13JR64)
PROFIBUS-DP Master Module User's Manual This manual describes the system configuration, performance specification, function, handling, wiring and troubleshooting for QJ71PB92V. (Sold separately)	SH-080572ENG (13JR84)

HOW TO USE THIS MANUAL

This manual explains the redundant system configuration, functions, communication with external devices and troubleshooting.

The manual is classified roughly into three sections as shown below.

1) Chapter 1 and 2	Explains the redundant system overview and system configuration
2) Chapter 3	Explains the tracking cable specifications, part names and connection method.
3) Chapter 4	Explains starting up the redundant system.
4) Chapter 5	Explains the redundant system functions.
5) Chapter 6	Explains the communication between a redundant system and each network, GOT and GX Developer.
6) Chapter 7	Explains the precautions for programming in a redundant system.
7) Chapter 8	Explains the troubleshooting methods and module replacement in a redundant system.
8) Chapter 9	Explains the processing time of a redundant system.

This manual does not explain the functions of power supply modules, base units, extension cables, memory cards and batteries of CPU module.

For these details, refer to the manual shown below.

CPU User's Manual (Hardware Design, Maintenance and Inspection)

This manual does not explain the functions of the CPU module.

For these functions, refer to the manual shown below.

CMC Qn(H)/QnPH/QnPRHCPU User's Manual(Function Explanation, Program Fundamentals)


HOW THIS MANUAL IS ORGANIZED

Reference destination

A reference destination or reference manual is marked

Chapter heading

The index on the right side of the page shows the chapter of the open page at a glance.

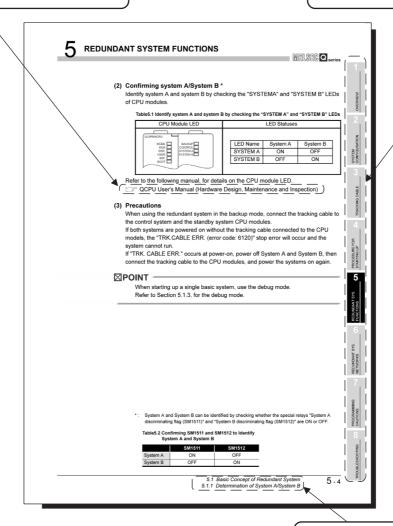

Section title

The section of the open page is shown at a glance.

In addition, this manual provides the following explanations.

⊠РО	INIT —————
	Explains the matters to be especially noted, the functions and others related to the description on that page.
Remark	Provides the reference destination related to the description on that page and the convenient information.

GENERIC TERMS AND ABBREVIATIONS

Unless otherwise specified, this manual uses the following generic terms and abbreviations to explain the Redundant CPU.

Generic Term/Abbreviation	Description				
Basic model QCPU	Generic term for the Q00JCPU, Q00CPU, and Q01CPU				
High Performance model QCPU	Generic term for the Q02CPU, Q02HCPU, Q06HCPU, Q12HCPU and Q25HCPU				
Process CPU	Generic term for the Q02PHCPU, Q06PHCPU, Q12PHCPU and Q25PHCPU				
Redundant CPU	Generic term for the Q12PRHCPU and Q25PRHCPU				
Universal model QCPU	Generic term for the Q00UJCPU, Q00UCPU, Q01UCPU, Q02UCPU, Q03UDCPU,				
	Q04UDHCPU, Q06UDHCPU, Q10UDHCPU, Q13UDHCPU, Q20UDHCPU,				
Oniversal model QOI O	Q26UDHCPU, Q03UDECPU, Q04UDEHCPU, Q06UDEHCPU, Q10UDEHCPU,				
	Q13UDEHCPU, Q20UDEHCPU, Q26UDEHCPU, Q50UDEHCPU, and Q100UDEHCPU				
QCPU	Generic term for the Basic model QCPU, High performance model QCPU, Process CPU				
	Redundant CPU, and Universal model QCPU				
QnCPU	Another name for the Q02CPU				
QnHCPU	Generic term for the Q02HCPU, Q06HCPU, Q12HCPU, and Q25HCPU				
QnPHCPU	Generic term for the Q02PHCPU, Q06PHCPU, Q12PHCPU, and Q25PHCPU				
QnPRHCPU	Generic term for the Q12PRHCPU and Q25PRHCPU				
	Generic term for the Q00UJCPU, Q00UCPU, Q01UCPU, Q02UCPU, Q03UDCPU,				
QnUCPU	Q04UDHCPU, Q06UDHCPU, Q10UDHCPU, Q13UDHCPU, Q20UDHCPU,				
	Q26UDHCPU, Q03UDECPU, Q04UDEHCPU, Q06UDEHCPU, Q10UDEHCPU,				
	Q13UDEHCPU, Q20UDEHCPU, Q26UDEHCPU, Q50UDEHCPU, and Q100UDEHCPU				
Q Series	Abbreviation for Mitsubishi MELSEC-Q Series Programmable Controller				
	Product name for SW ☐ D5C-GPPW-E GPP function software package compatible with				
GX Developer	the Q series				
	☐ indicates the version				
OPS	Abbreviation for the operation system that includes MELSOFT and EZSocket partner				
	products				
CC-Link IE Controller Network	Abbreviation for the QJ71GP21-SX and QJ71GP21S-SX CC-Link IE Controller Network				
module	module				
MELSECNET/H	Abbreviation for the MELSECNET/H network system				
MELSECNET/H module	Abbreviation for the QJ71LP21, QJ71LP21-25, QJ71LP21S-25, QJ71LP21G,				
	QJ71LP21GE, and QJ71BR11 MELSECNET/H network module				
MELSECNET/10	Abbreviation for the MELSECNET/10 network system				
Ethernet	Abbreviation for the Ethernet network system				
Ethernet module	Abbreviation for the QJ71E71-100, QJ71E71-B5, and QJ71E71-B2 Ethernet interface				
	module				
CC-Link	A field network system where data processing for control and information can be				
CO Link mandan mandada	simultaneously performed at high speed				
CC-Link master module	Abbreviation for the CC-Link system master/local modules				
Q3□B	Generic term for the Q33B, Q35B, Q38B, and Q312B main base units				
Q3S□B	Generic term for the Q32SB, Q33SB, Q35SB slim type main base units				
Q3□RB	Another name for the Q38RB redundant power supply base unit				
Q5□B	Generic term for the Q52B and Q55B extension base unit				
Q6□B	Generic term for the Q63B, Q65B, Q68B, and Q612B extension base unit				
Q6□RB	Another name for the Q68RB redundant power supply base unit				
Q6□WRB	Another name for the Q65WRB extension base unit for redundant system				
Main base unit	Generic term for the Q3 B and Q3 RB				
man baoo and					

Generic Term/Abbreviation	Description					
Extension base unit	Generic term for the Q5□B, Q6□B, Q6□RB, and Q6□WRB					
Slim type main base unit	Another name for the Q3 SB					
Redundant power main base unit	Another name for the Q3□RB					
Redundant power extension base unit	Another name for the Q6□RB					
Redundant type extension base unit	Another name for the Q6□WRB					
Base unit	Generic term for the main base unit, extension base unit, slim type main base unit, redundant power main base unit, redundant power extension base unit, and redundant type extension base unit					
Extension cable	Generic term for the QC05B, QC06B, QC12B, QC30B, QC50B, QC100B extension cables					
Tracking cable	Generic term for the QC10TR and QC30TR tracking cables for Redundant CPU					
Q series power supply module	Generic term for the Q61P-A1, Q61P-A2, Q61P, Q61P-D, Q62P, Q63P, Q64P and Q64PN power supply modules					
Slim type power supply module	Abbreviation for the Q61SP slim type power supply module					
Redundant power supply module	Generic term for the Q63RP and Q64RP redundant power supply module					
Power supply module	Generic term for the Q series power supply modules, slim type power supply module and redundant power supply module					
Battery	Generic term for the Q6BAT, Q7BAT and Q8BAT CPU module batteries, and Q2MEM-BAT SRAM card battery					
SRAM card	Abbreviation for the Q2MEM-1MBS and Q2MEM-2MBS SRAM card					
Flash card	Generic term for the Q2MEM-2MBF and Q2MEM-4MBF Flash card					
ATA card	Generic term for the Q2MEM-8MBA, Q2MEM-16MBA, and Q2MEM-32MBA ATA card					
Memory card	Generic term for the SRAM card, Flash card, and ATA card					

RELEVANT TERMS

Relevant Terms	Description				
System A	The system to which the system A connector of tracking cable is connected				
System B	The system to which the system B connector of tracking cable is connected				
Host system	The system where the currently mentioned Redundant CPU module is mounted				
Other system	The system connected to the host system via the tracking cable				
	If system A is the host system, system B is the other system; if system B is the host				
	system, system A is the other system				
Control system	The basic system that is controlling the redundant system and performing network				
	communication				
Standby system	The basic system for backup that consists of the redundant system				
New control system	The system that has switched to control system from standby system after system				
	switching				
New standby system	The system that has switched to standby system from control system after system				
	switching				
CPU slot	The slot that is located on the right side of the power supply module mounted on the				
	main base unit				
	In the case of redundant power supply base unit, it indicates the slot that is located on				
	the right side of a pair of power supply modules				

CHAPTER1 OVERVIEW

OVERVIEW

This manual explains the redundant system configuration that includes redundant CPUs and relevant functions, etc.

Please refer to the following manuals, for common specifications, performance, functions, and others to QCPUs.

(1) Specifications and handling of QCPUs, Power Supply Modules, Base Units, memory Cards, etc.

CPU User's Manual (Hardware Design, Maintenance and Inspection)

(2) Common Functions, Programs and Devices for QCPUs

QCPU User's Manual (Function Explanation, Program Fundamentals)



(3) List of Redundant CPU manuals

Redundant CPU manuals are shown below. For details such as manual numbers, refer to "ABOUT MANUALS" in this manual.

Table1.1 List of user's manual of redundant CPU

	Maintenance and Inspection	Program Fundamentals	Multi CPU System	Redundant system
Purpose	QCPU User's Manual (Hardware Design, Maintenance and inspection)	QCPU User's Manual (Function Explanation, Program Fundamentals)	QCPU User's Manual (Multiple CPU System)	QnPRHCPU User's Manual (Redundant System)
Confirmation of part names and specifications of the CPU module	Details	Outline		
Confirmation of connection methods for power supply module, base unit and I/O module	Details			
Construction of redundant system (confirmation of start-up procedure and I/O number assignment)				Details
Confirmation of the configuration and memory of sequence programs		Details		
Confirmation of the functions, parameters, devices, etc. of the CPU module		Details		
Confirmation of the troubleshooting				Details
Confirmation of the error codes	Details			

Table1.2 List of programming manuals of redundant CPU

	Common Instructions	PID control Instructions	Process control Instruction	SFC	MELSAP-L	Structured Text
Purpose	QCPU (Q mode)/ QnACPU Programming Manual (Common Instruction)	QCPU (Q mode)/ QnACPU Programming Manual (PID Control Instruction)	QnPHCPU/ QnPRHCPU Programming Manual (Process Control Instruction)	QCPU (Q mode)/ QnACPU Programming Manual (SFC)	QCPU (Q mode) Programming Manual (MELSAP-L)	QCPU (Q mode) Programming Manual (Structured Text Edition)
Confirmation of usage of sequence instructions, basic instructions, application instructions, etc.	Details					
Confirmation of dedicated instructions for PID control		Details				
Confirmation of dedicated instructions for process control			Details			
Confirmation of MELSAP3's system configuration, performance specifications, functions, programming, debugging and error codes				Details		
Confirmation of the programming method, specifications, functions, etc. required for SFC programming of the MELSAP-L type					Details	
Confirmation of the programming method of the structured text language						Details



1.1 Redundant System Overview

A redundant system offers improved system reliability, as it consists of two basic systems, each of which includes the CPU module, power supply module, network module *3 and others, so that even if a module error occurs in one basic system, the other one continues the system control.

To configure a redundant system, prepare two sets of systems, i.e., two redundant main base units on which the abovementioned modules are mounted. Then, connect the CPU modules of both systems with a tracking cable.

I/O module(s) and intelligent function module(s) are installed to MELSECNET/H remote I/O station(s) or extension base unit(s) in redundant systems.

Power supply redundancy is also available by using redundant power main base units or redundant power extension base units.

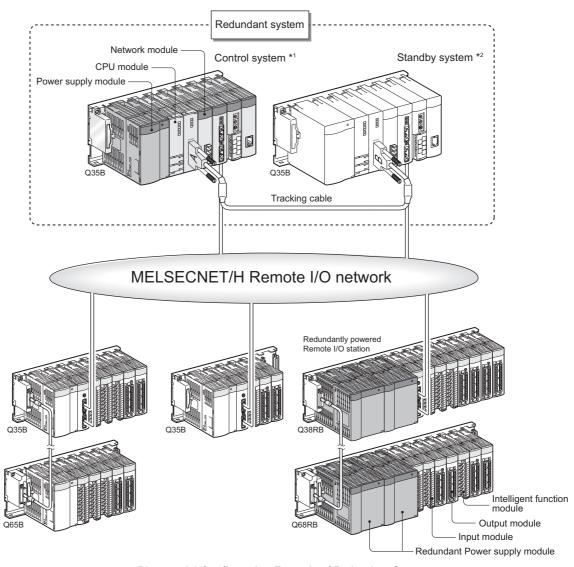


Diagram 1.1 Configuration Example of Redundant System

- * 1: The control system indicates the system that actually controls the redundant system. (Section 5.1.2)
- * 2: The standby system indicates the backup system within a redundant system. (Section 5.1.2)
 - If an error occurs in the control system, the standby system takes over the control of the redundant system.
- * 3: Refer to Section 2.3, for details of network modules compatible for redundant system.

Remark

OVERVIEW

The redundant system described in this manual does not guarantee continuous operation of the system depending on the failure status. Also, when system switching occurs due to an extension base unit error or a module error on the extension base unit, the standby system also detects the error and the CPUs on both systems will stop. Therefore, create a safety circuit externally so that the overall system safety can be ensured even in these cases.



1.2 Features

Features of redundant system are indicated below.

(1) Redundant Configuration of Basic System

As a redundant system consists two basic systems, i.e., two sets of CPU modules, power supply modules, main base units, network module*3, etc., one of the basic systems controls the whole system, while the other one performs backup. Data of the CPU module performing control is transmitted to the backup CPU module in order to make the data consistent. This enables the backup system to take over the redundant system control after the control system goes down and system switching occurs.

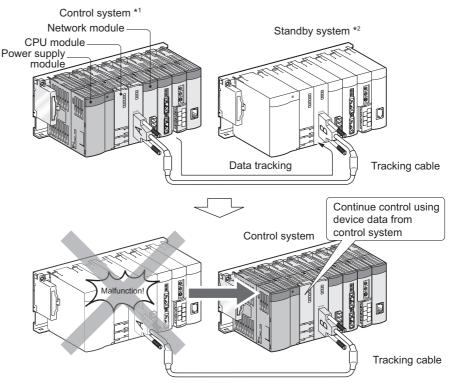


Diagram 1.2 Redundant Configuration of Basic System

- * 1: The control system indicates the system that actually controls the a redundant system. (Section 5.1.2)

If an error occurs in the control system, the standby system takes over the control of the redundant system.

* 3: Refer to Section 2.3, for details of network modules compatible for redundant system.

(2) Connection of Extension Base Unit

In the redundant system where the Redundant CPU whose first 5 digits of serial No. is "09012" or later is used in both systems, the extension base unit can be connected.*1 Since communication can be made not by network but via bus, communication with the I/O module and the intelligent function module can be made in high speed.

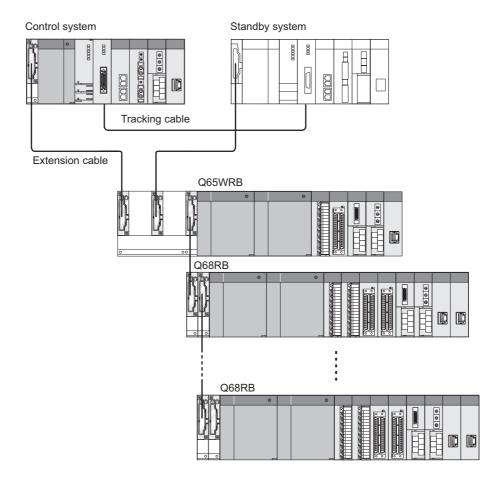


Diagram 1.3 System Configuration when Connecting Extension Base Unit

* 1: For the precautions of the system configuration when connecting the extension base unit, refer to Section 2.4.



(3) Network Configuration Including Redundant System.

(a) CC-Link IE Controller Network, MELSECNET/H PLC to PLC Network, and Ethernet

In the case of CC-Link IE Controller Network, MELSECNET/H PLC to PLC network, and Ethernet, control/standby system switching occurs and system control and network communication is continued even when a network module fails or when network cable disconnection is detected.

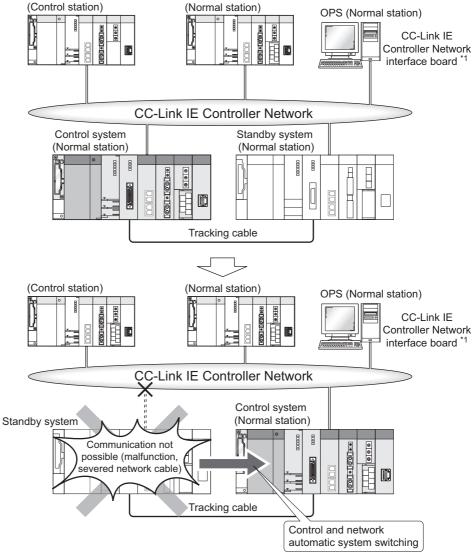



Diagram 1.4 System Configuration for CC-Link IE Controller Network

^{* 1:} For restrictions of the CC-Link IE Controller Network interface board, refer to the following manual.

CC-Link IE Controller Network Interface Board User's Manual

(b) MELSECNET/H Remote I/O Network

MELSECNET/H remote I/O stations can continue the operation even when control/standby system switching occurs. (Section 6.2.2)

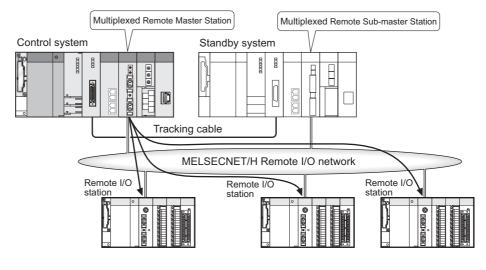

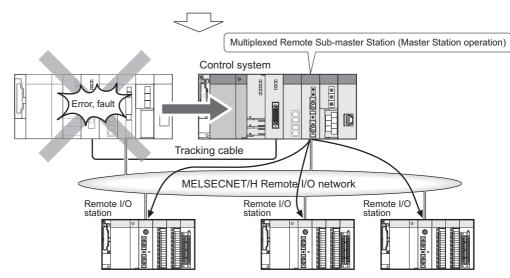


Diagram 1.5 System Configuration for MELSECNET/H Remote I/O Network



(c) PROFIBUS-DP

When the PROFIBUS-DP master module detects a fault or communication failure with slave stations, the both systems are switched so that the communications can be continued.

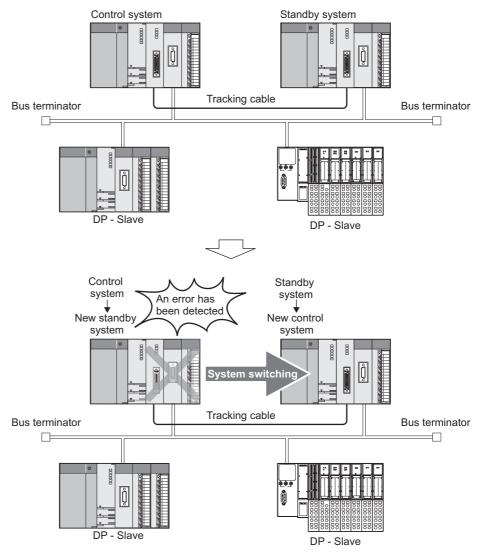


Diagram 1.6 System Configuration for PROFIBUS-DP

(4) Redundant system settings using parameters.

Redundant system settings such as tracking settings, network pairing settings, etc. can be made easily in the parameter settings of GX Developer.

(5) Writing parameters and programs to control system and standby system without the need to identify each system

Parameters and programs can be written into both of control system and standby system using GX Developer. There is no need to identify each system.

(Section 5.6.1)

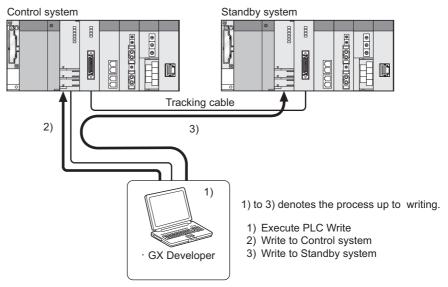


Diagram 1.7 Writing to the Control System and Standby System by Download to PLC



(6) Copy of parameters and programs from control system to standby system

After the CPU module is replaced in standby system, parameters and programs can be copied from the CPU module of control system to the new CPU module by executing the transfer command from GX Developer. This operation can also be done via special relays and special registers.

(Section 5.7)

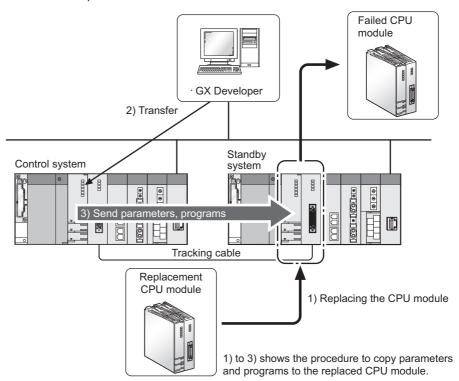


Diagram 1.8 Copy of Parameters and Programs when CPU Module is Replaced



(7) Access to redundant system from host network

When accessing to a redundant system, the host OPS can automatically identify and directly access to the control system, if it has been specified as destination in advance.

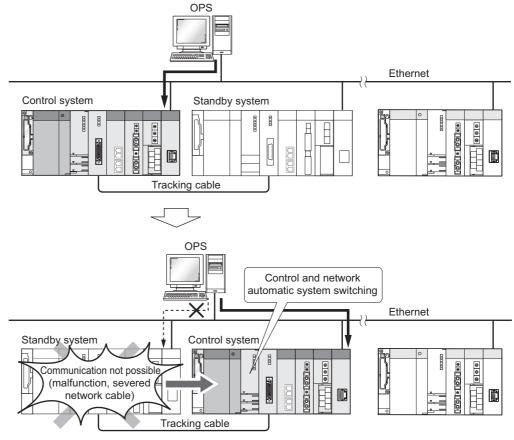


Diagram 1.9 System Configuration for Ethernet

(8) Compatible with Q series modules

Q series modules such as the I/O module, intelligent function module, and network module can be applied to a redundant system without making any modifications. (Some models are irrelevant) (Section 2.3)

Therefore, equipments within factories can be utilized, maintenance costs can be reduced, and the system can be expanded.



(9) Online module change (hot swapping)

The I/O module mounted on a main base unit with a redundant CPU module and the module mounted on a remote I/O station can be replaced online (hot swapping) using GX Developer. (Section 2.4 (6))

The module can be replaced without stopping the system, when it fails.

Note that a module mounted to the main base unit cannot be replaced online when the extension base unit is connected.

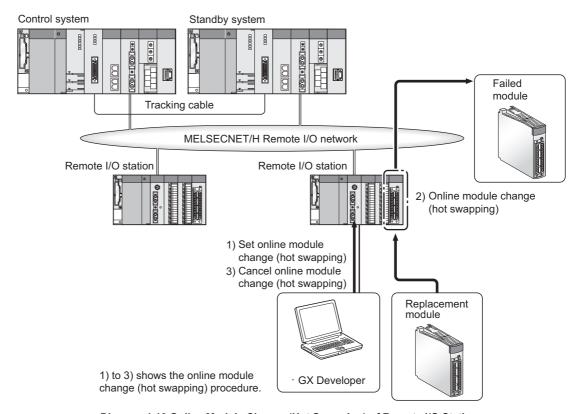


Diagram 1.10 Online Module Change (Hot Swapping) of Remote I/O Stations

Diagram 1.11 Online Module Change (Hot Swapping) of I/O Modules mounted on a Main Base Unit

(10)System status can be monitored.

The operation status of the whole redundant system can be monitored using the System Monitor of GX Developer.

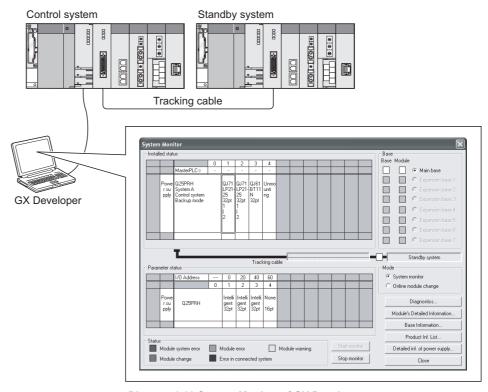


Diagram 1.12 System Monitor of GX Developer



(11) Compact Redundant System

The space of control panel can be saved, as Q series modules (other than the CPU module, redundant power supply module, and tracking cable) are applicable.

(12)Flexible layout

The layout can be changed flexibly because the main base unit is divided into two units for the control system and standby system.

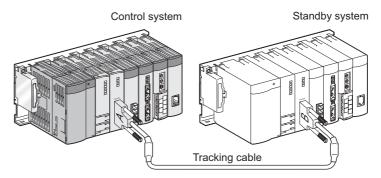


Diagram 1.13 Horizontal Arrangement of Control System and Standby System

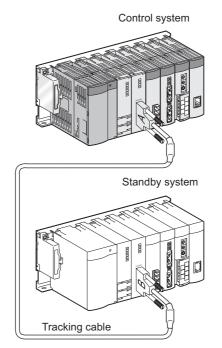


Diagram 1.14 Vertical Arrangement of Control System and Standby System

CHAPTER2 SYSTEM CONFIGURATION

This chapter explains the redundant system configuration.

2.1 System Configuration

An example of redundant system configuration is illustrated in Diagram 2.1.

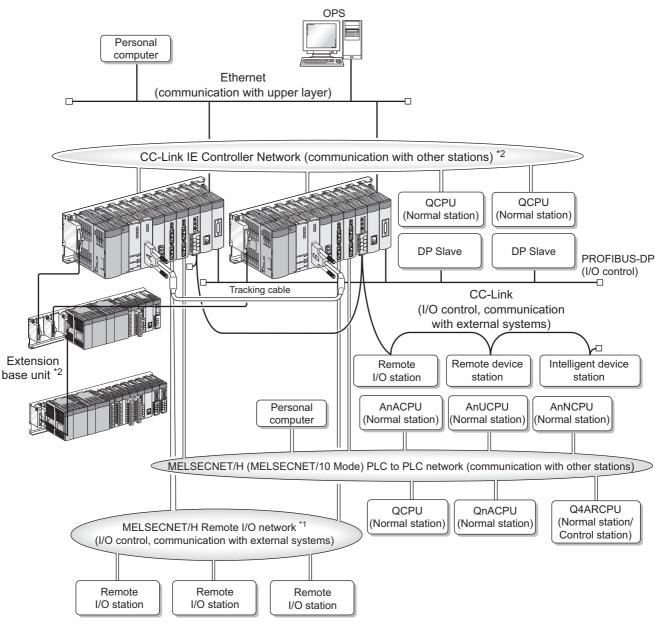


Diagram 2.1 Example of Redundant System Configuration

- * 1: In a coaxial bus system, use double shielded coaxial cables. Refer to the following manual for the double shielded coaxial cables.
 - Q Corresponding MELSECNET/H Network System Reference Manual (Remote I/O Network)
- * 2: For the extension base units and network modules compatible with the redundant system, refer to Section 2.3 and Section 2.4.

2

OVERVIEW

TRACKING CABLE

REDUNDANT SYSTEM FUNCTIONS

REDUNDANT SYSTEM NETWORKS

TROUBLESHOOTING



(1) Redundant System

(a) System Configuration

A redundant system consists of two sets of power supply modules, CPU modules, main base units, and network modules.

To configure a redundant system, prepare two sets of systems, i.e., mount the same model of power supply module, CPU module, and network module on each main base unit, then connect the CPU modules of both systems with a tracking cable.

The connection direction (connectors) of the tracking cable determines which one is system A or B.

(Section 5.1.1)

If system A and system B are started up simultaneously, system A becomes the control system.

If one of the systems is started up before the other, the system started up first becomes the control system.*1 (Section 5.1.2)

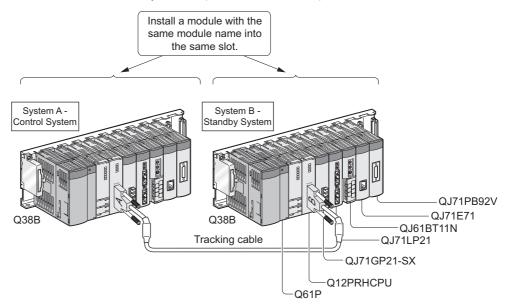


Diagram 2.2 Redundant System Configuration

⊠POINT

The extension base unit cannot be connected to the main base unit where the Redundant CPU whose first 5 digits of serial No. is "09011" or earlier is mounted. If connected, a stop error "BASE LAY ERROR (error code: 2010)" occurs. When connecting the extension base unit, use the Redundant CPU whose first 5 digits of serial No. is "09012" or later.

^{* 1 :} If system A and system B are started up within three seconds of one another, system A becomes the control system.

(b) Backup of Power Supply Module

The power supply module of each system can be backed up.

By adding backup power supply modules to system A and system B, even if an error occurs in the power supply system connected to one power supply module, or if the power supply module fails, the other power supply module can continue the operation.

This enables the faulty power supply system to be restored, and the faulty power supply module can be replaced while the system is running.

The power supply module can also be replaced for preventive maintenance while the system is running.

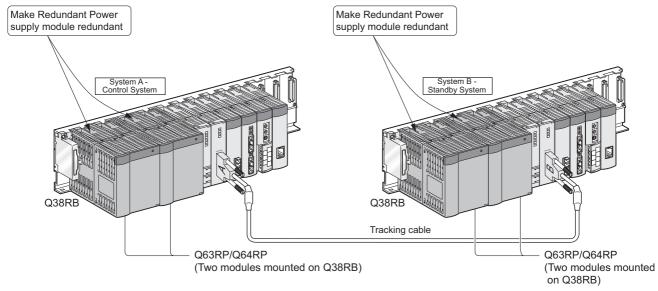


Diagram 2.3 Power Supply Modules and Redundant System

(c) Module which can be mounted to main base unit or extension base unit For the module which can be mounted to the main base unit or extension base unit, refer to Section 2.3.

(d) Redundant System Operations

Refer to Section 5.1, for redundant system operations.

⊠POINT

The extension base unit cannot be connected to the main base unit where the Redundant CPU whose first 5 digits of serial No. is "09011" or earlier is mounted. If connected, a stop error "BASE LAY ERROR (error code: 2010)" occurs. When connecting the extension base unit, use the Redundant CPU whose first 5 digits of serial No. is "09012" or later.



(2) Communication with a Host OPS, PC, etc.

(a) Communication via Ethernet

Communication between a host OPS, PC, etc. and redundant CPU can be performed via Ethernet.

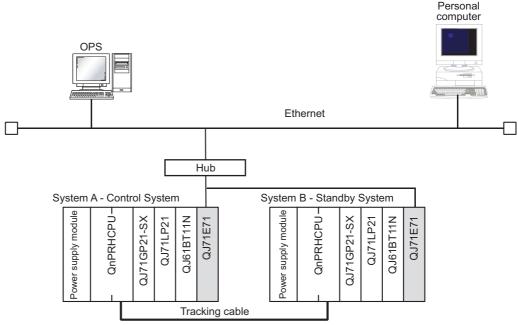


Diagram 2.4 Connection of Redundant System to Ethernet

(b) Ethernet Modules applicable to Redundant System

Refer to Section 2.3, for Ethernet modules applicable to a redundant system.

(c) Ethernet Communication and Operations during System Switching

Refer to Section 6.2.3, for an overview of communication methods between the OPS and PC connected to Ethernet and CPU modules of a redundant system, and operations during system switching.

Refer to the Q Corresponding Ethernet Interface Module User's Manual (Basic), for details.

(3) Communication via CC-Link IE Controller Network or MELSECNET/H PLC to PLC Network

(a) Connecting Redundant System to CC-Link IE Controller Network, MELSECNET/H, and MELSECNET/10 PLC to PLC Network

A redundant system can communicate with Q series CPU modules connected to CC-Link IE Controller Network or MELSECNET/H PLC to PLC network. The system can also connect to MELSECNET/10 PLC to PLC network and communicate with Q series, QnA series, and A series CPU modules.

(b) Pairing Settings and Relevant CPU Modules

Pairing settings must be made using the control station network parameters when connecting a redundant system to CC-Link IE Controller Network, MELSECNET/H, or MELSECNET/10.

The following CPU modules include the network parameters for paring settings.

- Redundant CPU *1
- High Performance model QCPU *1
- Process CPU *1
- Basic model QCPU *1
- Universal model QCPU *1
- Q4ARCPUs *1 *2 *3

When connecting a redundant system to a network, set any of the above CPU modules as the control station.

CPU modules other than above can be set as the normal station only.

Refer to the following manuals, for details on pairing settings for CC-Link IE

Controller Network, MELSECNET/H, and MELSECNET/10 PLC to PLC networks.

- CC-Link IE Controller Network Reference Manual
- Q Corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)
- QnA/Q4AR Corresponding MELSECNET/10 Network System Reference Manual

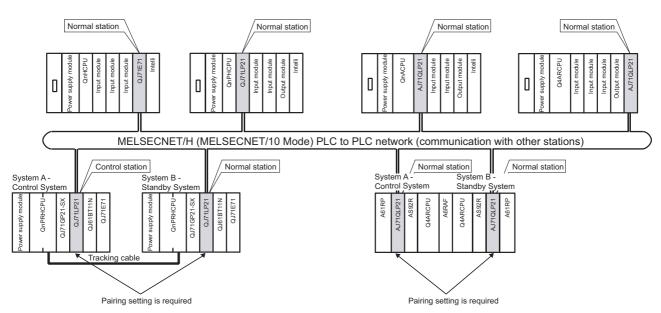


Diagram 2.5 Connection of Redundant System to MELSECNET/H PLC to PLC Network

- * 1: Before making the pairing settings, check the GX Developer version. (Section 2.3)
- * 2: The Q4ARCPU makes pairing settings using the "J.PAIRSET" instruction.
- * 3: The pairing settings cannot be made with the Q4ARCPU in the CC-Link IE Controller Network.

(4) Communication via MELSECNET/H Remote I/O Network

(a) Controlling External Devices

A redundant system controls external devices using I/O modules and intelligent function modules that are installed to remote I/O stations on the MELSECNET/H remote I/O network.

Communications with external devices are also available by installing a communication module to a remote I/O station, when it cannot be mounted on the main base unit of the redundant system.

(b) Backup of Power Supply Module

The power supply module for each remote I/O station can be backed up. By adding a backup power supply module to a remote I/O station, the remote I/O station can continue to operate, even if an error occurs in either power supply system, or if the power supply module fails.

This enables the faulty power supply system to be restored and power supply modules that have failed can be replaced, even when the remote I/O station power supply is on.

The power supply module can also be replaced for preventive maintenance, etc. when the remote I/O station power supply is on.

TROUBLESHOOTING



(c) Online Module Change (Hot Swapping) Using GX Developer

The I/O module mounted on a remote I/O station (including analog module of function version C) can be replaced online (hot swapping) using GX Developer. Refer to Section 2.4 (6), for modules on a remote I/O station that can be replaced online (hot swapping) using GX Developer.

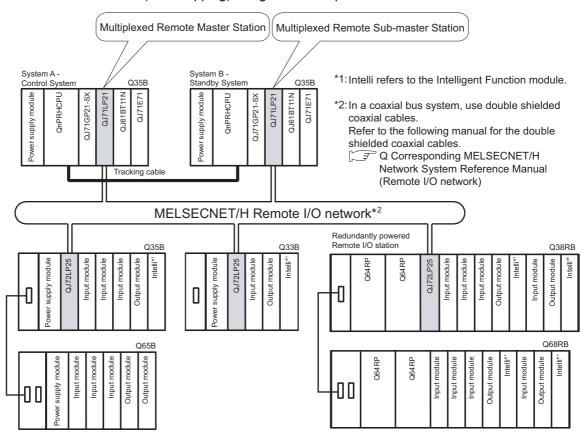


Diagram 2.6 MELSECNET/H Remote I/O Network Configuration

(d) Reference Manual

Refer to the following manual, for modules that can be mounted on a remote I/O station and parameter settings.

Q Corresponding MELSECNET/H Network System Reference Manual (Remote I/O network)

(5) Communication via CC-Link

(a) Controlling External Devices

A redundant system controls external devices using remote I/O stations, remote device stations, and intelligent device stations connected to CC-Link.

(b) CC-Link master module setting

Set the CC-Link master modules as follows.

1) When mounting to the main base unit

- · System A: master station
- · System B: standby master station

If A system is standby master station and B system is master station, data link cannot be made.

Also, start the system so that A system can be the control system.

(Section 5.1.2)

If B system starts as the control system, CC-Link communication cannot be made since CC-Link master station does not exist.

For the standby master station function, refer to the following manual.

CC-Link System Master/Local Module User's Manual

2) When mounting to the extension base unit

Set [Master station (Extension base)].



(c) System start-up

1) When using the QJ61BT11N whose first 5 digits of serial No. is 07112 or later

When using the CC-Link, control using the CC-Link can be made starting up from either system A or system B.

2) When using the QJ61BT11N whose first 5 digits of serial No. is 07111 or earlier

When using the CC-Link, start up the system so that system A will be the control system.

If starting up the system B as the control system, CC-Link cannot make communication since the master station of the CC-Link does not exist.

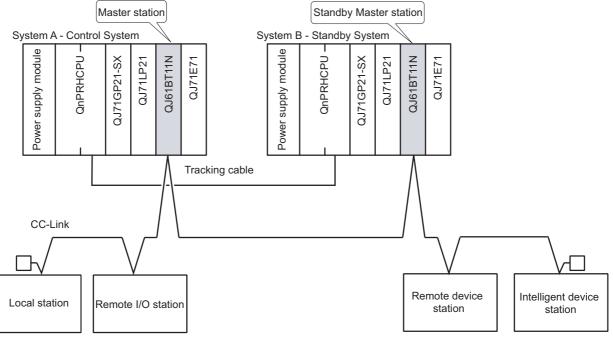


Diagram 2.7 Connection of Redundant System to CC-Link

(6) Communications through the PROFIBUS-DP

(a) I/O data exchange

The PROFIBUS-DP master module exchanges I/O data with slave stations connected to the PROFIBUS-DP.

(b) Communication method and operation at system switching of the PROFIBUS-DP

For the method of communications with slave stations connected to the PROFIBUS-DP and operation overview at system switching, refer to Section 6.2.6.

For the method of communications with slave stations connected to the PROFIBUS-DP and operation details at system switching, refer to the following manual.

PROFIBUS-DP Master Module User's Manual

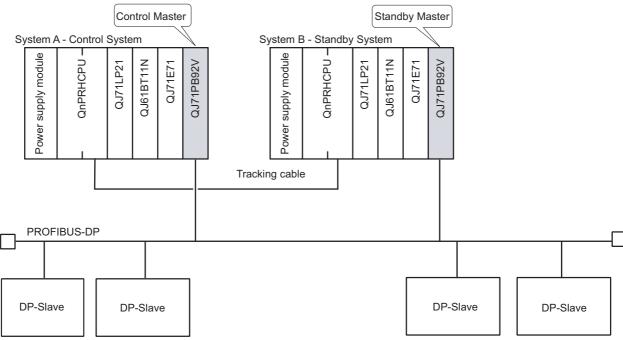


Diagram 2.8 Connection of Redundant System to PROFIBUS-DP



2.2 Peripheral Device Configuration

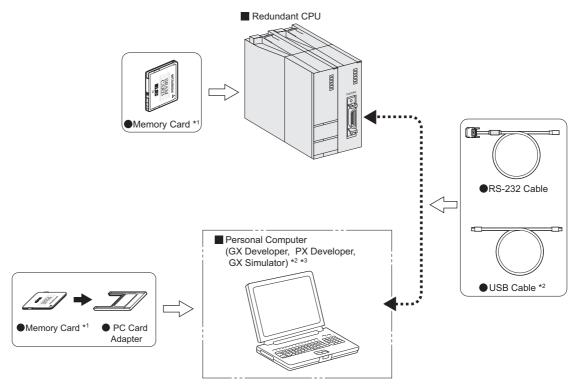


Diagram 2.9 Peripheral Device Configuration

- * 1: Do not format ATA cards for using other than GX Developer.
 - QCPU User's Manual (Hardware Design, Maintenance and Inspection)
- * 2: Refer to the following manual, for details on writing to memory card and USB cable.
 - GX Developer Version 8 Operating Manual
- * 3: Refer to Section 2.3, for versions of GX Developer, PX Developer and GX Simulator applicable to redundant CPU.

2.3 Applicable Devices and Software

This section describes modules and software packages that can be used to configure a redundant system.

(1) Modules applicable to redundant system

Modules shown in Table2.1 are mountable to a main base unit where a redundant CPU is mounted. For any other module, mount it to a MELSECNET/H remote I/O station or an extension base unit.

Note that, however, some modules cannot be mounted to MELSECNET/H remote I/O stations and extension base units. (() (b), (c))

(a) Modules mountable to main base unit where redundant CPU is mounted Table2.1 lists the modules mountable to a main base unit where a redundant CPU is mounted.

Table 2.1 Modules Mountable to Main Base Unit Where Redundant CPU is Mounted

Module Name	Model	Checking Method
	• Q61P-A1	
	• Q61P-A2	
	• Q61P	
Power supply module *1	• Q62P	-
,	• Q63P	
	• Q64P	
	• Q64PN	
Dadundant naviar supply assigning *2 *7	• Q63RP	
Redundant power supply module *2 *7	• Q64RP	-
CPU module	• Q12PRHCPU	
	• Q25PRHCPU	-
CC-Link IE Controller Network module*6 *8	• QJ71GP21-SX	
	• QJ71GP21S-SX	
	• QJ71LP21-25	
	• QJ71LP21S-25	
MELSECNET/H module *6	• QJ71LP21G	Function version:D *5
	• QJ71LP21GE	Function version:D
	• QJ71BR11	
Ethernet module *6 *7	• QJ71E71-B2	
	• QJ71E71-B5	
	• QJ71E71-100	
CC-Link master module *4 *6 *7	• QJ61BT11N	Serial No. (first 5 digits):"06052" or later *5
PROFIBUS-DP master module	• QJ71PB92V	Function version:D *5
Input module *7	• QX 🗌 🗎 *3	-
Output module *7	• QY 🗌 🗎 *3	-
I/O combined module *7	• QH42	_
1/O combined module	• QX48Y57	_

- * 1: Mountable only when the Q32B, Q33B, Q35B, Q38B, or Q312B is used.
- * 2: Mountable only when the Q38RB is used.
- * 3: indicates the type of the input module or output module.
- * 4: The QJ61BT11 cannot be mounted on a main base unit where a redundant CPU is mounted.
- * 5: For checking of the serial No. and function version, refer to (2) in this section.
- * 6: For restrictions on the number of modules that can be mounted to a main base unit in a redundant CPU system, refer to Section 2.4.
- * 7: Mountable to extension base units.
- * 8: Use the Redundant CPUs whose first five digits of serial number is "10042" or later in both systems.



(b) Modules that cannot be mounted to MELSECNET/H remote I/O stations

Refer to the following manual for the modules that cannot be mounted to MELSECNET/H remote I/O stations.

Q Corresponding MELSECNET/H Network System Reference Manual (Remote I/O Network)

(c) Modules that cannot be mounted to extension base units

The following modules cannot be mounted to extension base units.

- CC-Link IE Controller Network module
- MELSECNET/H module
- Ethernet module (function version: B or earlier)
- Web server module (first 5 digits of serial No.: "09011" or earlier.)
- MES interface module (first 5 digits of serial No.: "09011" or earlier.)
- · Interrupt module
- PROFIBUS-DP master module
- PROFIBUS-DP slave module
- PROFIBUS-DP interface module
- · DeviceNet master module
- · DeviceNet slave module

(2) Confirming the serial No. and function version of the CPU module

(a) On the rated plate

The serial No. and function version of the CPU module can be confirmed on the rated plate.

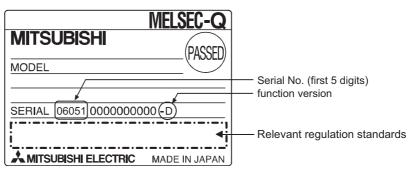


Diagram 2.10 Rated plate

(b) Checking on the front of the module

The serial number written on the rating plate is displayed on the front (at the bottom) of the module.

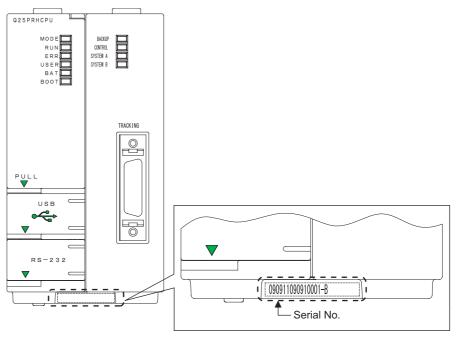


Diagram 2.11 CPU module front display

Remark

The serial number is displayed on the front of the module from March 2008 production.

Products manufactured during switching period may not have the serial number on the front of the module.



(c) Confirming the serial No. on the system monitor (Product Information List) To display the System monitor screen, select [Diagnostics] → [System monitor] and click the Product Information List button in GX Developer. On the system monitor, the serial No. and function version of the intelligent function module can also be confirmed.

Serial number function version **Product Information List** Series Model name Points I/O No. Master PLC Slot Туре Serial No Ver. PLC Q25PRH 0605100000000000 D (PLC) lo-o 0-1 Intelli. Q QJ71LP21-25 32pt 0000 0605100000000000 None

Diagram 2.12 System Monitor (Product Information List)

⊠POINT

The serial number displayed on the Product information list screen of GX Developer may differ from that on the rating plate and on the front of the module.

- The serial No. on the rated plate describes the management information of the product.
- The serial No. displayed on the product information of GX Developer describes the function information of the product.
 The function information of the product is updated when adding functions.

(3) Available software packages

(a) Available GX Developer and PX Developer versions

Table 2.2 shows GX Developer and PX Developer versions supporting redundant system.

Table 2.2 Available GX Developer and PX Developer versions

Product Name	Model	Version
GX Developer	SW8D5C-GPPW-E	Ver.8.17T or later *1 *3
PX Developer	SW1D5C-FBDQ-E	Ver.1.05F or later *2 *4
GX Simulator	SW6D5C-LLT-E	Ver.6.20W or later

^{* 1:} Use version 8.45X or later when using extension base unit.

(b) Available GX Configurator versions

Table 2.3 shows GX Configurator versions supporting redundant system.

Table2.3 Available GX Configurator versions

Product Name	Model	Version
GX Configurator-CC	SW⊡D5C-J61P-E	Ver.1.10L or later *1
GX Configurator-AD	SW□D5C-QADU-E	Ver.1.15R or later
GX Configurator-DA	SW□D5C-QDAU-E	Ver.1.15R or later
GX Configurator-SC	SW□D5C-QSCU-E	Ver.1.14Q or later
GX Configurator-CT	SW□D5C-QCTU-E	Ver.1.16S or later
GX Configurator-TC	SW□D5C-QTCU-E	Ver.1.14Q or later
GX Configurator-TI	SW□D5C-QTIU-E	Ver.1.14Q or later
GX Configurator-FL	SW□D5C-QFLU-E	Ver.1.14Q or later
GX Configurator-PT	SW□D5C-QPTU-E	Ver.1.14Q or later
GX Configurator-AS	SW□D5C-QASU-E	Ver.1.16S or later
GX Configurator-QP	SW□D5C-QD75P-E	Ver.2.14Q or later
GX Configurator-MB	SW□D5C-QMBU	Ver.1.00A or later

^{* 1:} Use version 1.16S or later when mounting CC-Link master module on extension base unit.

 $^{^{\}star}$ 2: Use version 1.14Q or later when using extension base unit.

^{* 3:} Use version 8.68W or later when using CC-Link IE Controller Network module.

^{* 4:} Use version 1.18U or later when using CC-Link IE Controller Network module.




2.4 System Configuration Cautions

(1) Extension base unit

The extension base unit cannot be connected to the main base unit where the Redundant CPU whose first 5 digits of serial No. is "09011" or earlier is mounted. If connected, a stop error "BASE LAY ERROR (error code: 2010)" occurs.

When connecting the extension base unit, there are following restrictions.

- Use Redundant CPUs whose first 5 digits of serial No. are "09012" or later for both systems.
- Connnect a redundant type extension base unit as the first extension stage. As
 the second and later stages, redundant power extension base units only can be
 used
- Only one redundant type extension base unit can be used per system.
- Connect IN connector (IN1 and IN2) of the redundant type extension base unit to OUT connector of the main base unit.
- Connect OUT connector of the redundant type extension base unit to IN connector of the redundant power extension base unit.
- Use the same main base unit models in systems A and B.
- Configuration of multiple CPU system is not allowed.
- Do not power OFF or reset the control system in Separate mode.
- Do not perform boot operation of a Redundant CPU whose first 5 digits of serial No. is "09011" or earlier, using a memory card storing network parameters for Ethernet and CC-Link configurations on an extension base unit.
- Do not disconnect the extension cable while the power supply module mounted on the main base unit is ON.
- Any dedicated instructions cannot be used to intelligent function modules on extension base units. (Section 7.1 (8))
- Any interrupt pointer caused by an interrupt from an intelligent function module on an extension base unit cannot be used. (Section 7.5 (4))
- Connect extension cables so that an overall cable distance^{*1} does not exceed 13.2 m (43.31 feet).
- * 1: To calculate an overall cable distance, use the longer length for the two extension cables connecting between the system A or B main base unit and the redundant type extension base unit

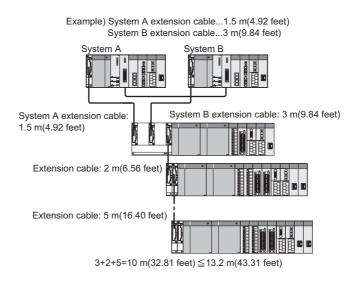

- To communicate via a module mounted on the extension base unit by using MC protocol, use QnA-compatible 2C/3C/4C frame, QnA-compatible 3E frame, or 4E frame for the access.
- MELSOFT products connectable to a module mounted on the extension base unit are GX Developer and PX Developer. However, there are restrictions on applicable functions. For details, refer to the following manuals.
- GX Developer Version 8 Operating Manual
- PX Developer Version 1 Operating Manual (Programming Tool)

⊠POINT

Only the control system can access modules on the extension base units. If accessing the standby system while the system monitor function of GX Developer is in execution, the extension base units and modules on them are not displayed.

Using GX Developer with specifying "Control system" at [Target system] in the [Transfer Setup] screen is preferable.

(2) Modules that can be mounted on a main base unit

The I/O modules used independently by the network module and System A or System B CPU module can be mounted on the same main base unit as a redundant CPU is mounted.

I/O modules and intelligent function modules used to control a redundant system must be mounted on MELSECNET/H remote I/O station or extension base unit.

Remote I/O station, remote device station, and intelligent device station can be used by mounting CC-Link master module on a main base unit or extension base unit.



(3) Modules where the number of mountable modules is restricted

The module where the number of mountable modules is restricted when the redundant CPU is used is shown in Table 2.4.

Table2.4 Number of modules loaded

Applicable Module	Туре		umber of mountable er system ^{*1}
CC-Link IE Controller Network module *2	• QJ71GP21-SX • QJ71GP21S-SX	Up to 2	
MELSECNET/H module *2	QJ71LP21-25QJ71LP21S-25QJ71LP21GQJ71LP21GEQJ71BR11	Up to 4 in total of PLC to PLC network and remote I/O network modules	Up to 4 in total
Ethernet module	• QJ71E71-B2 • QJ71E71-B5 • QJ71E71-100	Up to 4	
CC-Link master module	• QJ61BT11N	Up to 8 *3	

- * 1: The number of mountable modules per system indicates the number of modules that can be mounted on main base unit or extension base unit. Or, it indicates the number of modules that can be mounted on either one of the systems when they are mounted on main base unit.
- * 2: CC-Link IE Controller Network module or MELSECNET/H module cannot be mounted to the extension base unit.
- * 3: Possible only when the first five digits of serial number for the Redundant CPUs in both systems are "09102" or higher and GX Developer version is 8.58L or later.

 In other combinations, the number of mountable modules per system is 4.

⊠POINT

If setting 5 or more at "No. of boards in module" in CC-Link network parameter of GX Developer version 8.55H or earlier, the following error dialog box appears.



In this case, set 4 or less at "No. of boards in module".

(4) System A/System B configuration

Set up system A and system B so that they will be configured the same. If they are configured differently, a stop error will occur, and they will not start up as a system.

(In some cases, they may start up as a system, even when configured differently. Refer to Section 5.1.4 for details.)

(5) Number of Slots Occupied by a Redundant CPU

A redundant CPU occupies two slots.

Main base unit slot 0 is set as follows, type: redundant, points: 0 points.

The I/O number for slot 1, in which modules are mounted, is $X/Y0_{\mbox{\tiny H}}$.

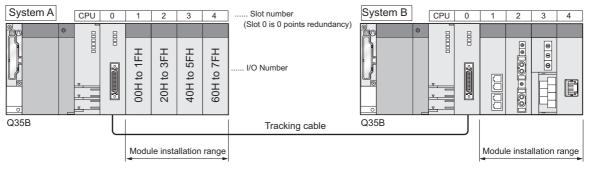


Diagram 2.13 Number of Slots Occupied by Redundant CPU and I/O Numbers of Main Base Units



(6) Restrictions on online module change (Hot Swapping)

The online module change (hot swapping) using GX Developer can be performed to the main base unit, extension base unit, and MELSECNET/H remote I/O station where the Redundant CPU is mounted.

The target modules of online module change are shown in Table2.5.

Table2.5 Target Modules of Online Module Change (Hot Swapping)

		Mounting position		
Module	Function version	Main base unit where Redundant CPU is mounted	Extension base unit	MELSECNET/H Remote I/O station
Input module	_	○ *1	0	0
Output module	_	○ *1	0	0
I/O combined module	_	○ *1	0	0
Analog input module	С	×	0	0
Analog output module	С	×	0	0
Temperature input module	С	×	0	0
Temperature adjustment module	С	×	0	0
Pulse input module	С	×	0	0

^{* 1:} When the extension base unit is connected, online module change (hot swapping) cannot be performed to modules mounted on the main base unit.

- ○:Online Module Change (Hot Swapping) Possible
- × :Online Module Change (Hot Swapping) not Possible (because cannot be mounted on a main base unit.)

Refer to the following manuals, for online module change (hot swapping) of input modules, output modules, and I/O combined modules.

(a) Main base unit where Redundant CPU is mounted

CPU User's Manual (Hardware Design, Maintenance and Inspection)

(b) Extension base unit

Q Corresponding MELSECNET/H Network System Reference Manual (Remote I/O network)

Refer to the manual of each module, for online module change (hot swapping) of analog input module, analog output module, temperature adjustment module, and pulse input module.

(7) Cables applicable to coaxial bus system of MELSECNET/H Remote I/O Network

In a coaxial bus system, use double shielded coaxial cables.

Refer to the following manual for the double shielded coaxial cables.

Q Corresponding MELSECNET/H Network System Reference Manual (Remote I/O network)

OVERVIEW

CHAPTER3 TRACKING CABLE

This chapter provides the tracking cable specifications and part names, and explains connecting/disconnecting the cable to/from the CPU module.

3.1 Specifications


The tracking cable specifications are shown in Table3.1.

Table3.1 Tracking Cable Specifications

ltem	Name		
nem	QC10TR	QC30TR	
Cable Length	1.0 m (3.29 feet)	3.0 m (9.87 feet)	
Purpose	Connecting the CPU modules of a redundant system		
Mass	0.15 kg	0.28 kg	
Tightening Torque	29.4N•cm		

3.2 Part Names

Tracking cable part names are indicated here.

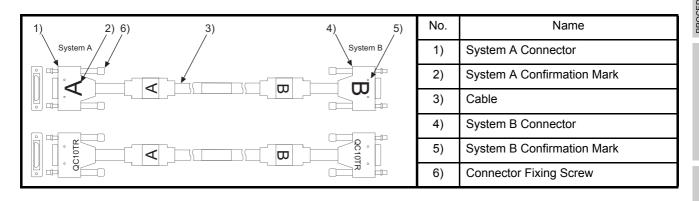



3.3 Connecting and Disconnecting a Tracking Cable

(1) Cautions when Connecting a Tracking Cable

- Be careful not to step on the tracking cable.
- When laying tracking cables, secure a minimum bending radius of 27.6 mm or more.
- If the bending radius is less than 27.6 mm, a malfunction may occur due characteristic deterioration, wire breakage, etc.

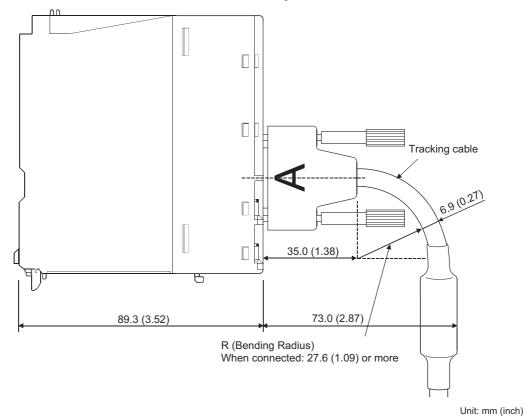


Diagram 3.1 Minimum Bending Radius of a Tracking Cable

⊠POINT

- Always power OFF the standby system or set the RESET/L.CLR switch of the standby system CPU module to RESET before connecting or disconnecting the tracking cable.
- 2. To connect or disconnect the tracking cable, hold it by the cable connector.

(2) Connecting a Tracking Cable

- (a) Make sure that you are using the correct tracking cable connector for System A or System B.
 - Refer to Section 3.2 and Section 5.1.1, for confirming System A and System B.
- (b) Hold the tracking cable connector, and align it with the CPU module TRACKING connector.

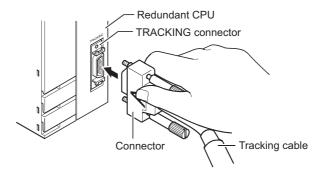


Diagram 3.2 Checking the Connection Orientation of the Tracking Connector

(c) Connect the tracking cable connector to the CPU module TRACKING connector.

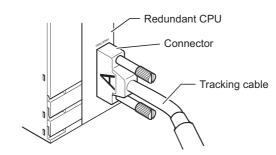


Diagram 3.3 Connecting the Tracking cable Connector

(d) Tighten the connector fixing screws and fix the connector to the CPU module.

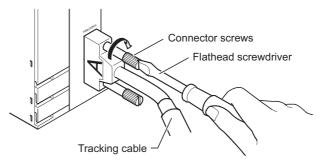


Diagram 3.4 Fixing the Tracking cable Connector



- (3) Disconnecting a Tracking Cable
 - (a) Loosen the connector fixing screws.

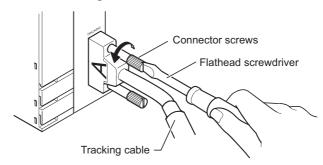


Diagram 3.5 How to Loosen the Connector Fixing Screws

(b) When disconnecting the tracking cable, hold the tracking cable connector, and then remove it.

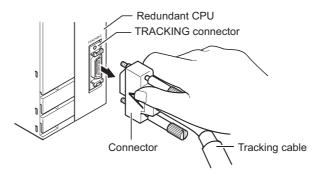


Diagram 3.6 Disconnecting the Tracking Cable

PROCEDURE FOR STARTING UP A REDUNDANT SYSTEM



CHAPTER4 PROCEDURE FOR STARTING UP A REDUNDANT SYSTEM

(1) Procedure for starting up in backup mode

The standard procedure for starting up system A as the control system and system B as the standby system of a redundant system in the backup mode is shown below. Explanation of program and parameter creation is not provided here.



Mounting Modules

Mount the power supply module, CPU module, network module, and I/O module to the main base unit/extension base unit.

...Refer to Section 4.1

...Refer to Section 4.2

Wiring

- (1) Connect the power cable to the power supply module.
- (2) Connect the battery connector to the CPU module battery connector.
- (3) Connect the CPU modules with the tracking cable.
- (4) When connecting the extension base unit, connect the main base unit and the extension base unit by an extension cable.
- (5) Connect the network wiring to the network module.*1
- 6) Connect the I/O module.

...Refer to Section 4.3

...Refer to

Section 4.4

Module Initial Settings

- (1) Set the RUN/STOP switch of the CPU module to the STOP position.
- (2) Set the RESET/L.CLR switch of each CPU module to the reset switch neutral position.
- (3) Make switch settings for the MELSECNET/H module.

Checking that power supply of main base unit and extension base unit is ON

- (1) Check the following items and turn ON power supplies of the power supply modules of the main base units and extension base units simultaneously.
 - Wiring of power supply
 - Power supply voltage
 - •RUN/STOP switch position of system A/system B CPU module: STOP
 - •RESET/L.CLR switch position of system A/system B CPU module: Reset switch neutral
- (2) Check that "POWER" LEDs of the power supply modules of the main base unit and the extension base unit in the systems A and B are turned ON (green).

Checking System A/System B

Check system A and system B by the "SYSTEM A" / "SYSTEM B" LED of each CPU module.*2

..Refer to Section 4.5

Ţ

4 - 1

PROCEDURE FOR STARTING UP A REDUNDANT SYSTEM



Connecting to the PC in which GX Developer is Installed

1) Start up GX Developer in the GX Developer installed PC.

(2) Connect the PC in which GX Developer is installed to the system A CPU module.

...Refer to Section 4.6

Writing Parameters and Programs to CPU

Write the parameters and programs created with GX Developer to the CPU modules of System A and System B.

...Refer to Section 4.7

Restarting System A and System B*3

(1) Power off system A and system B, or toggle RESET/L.CLR switch of CPU module.

(2) Simultaneously power on system A and system B, or simultaneously set the RESET/L.CLR switches of both CPU modules to reset switch neutral position.

...Refer to Section 4.8

Error Check

Check if the "ERR." LEDs of system A and system B CPU modules are OFF.

If the "ERR." LEDs are ON/flashing, check the error cause using the System Monitor or diagnostics*4 of GX Developer, and eliminate it.

...Refer to Section 4.9

Checking the Control System/Standby System

Check the control system/standby system by the "CONTROL" LED status of each CPU module.

..Refer to Section 4.10

Running Standby System (System B) CPU Module

(1) Set the RUN/STOP switch of standby system CPU module (the "CONTROL" LED is OFF) to the RUN position, and confirm that the "RUN" LED of CPU module is OFF.

(2) Confirm that the "ERR." LED of standby system CPU module is ON.
 Confirm that the error cause is "OPE.MODE DIFF. (error code: 6010)" *5 using the System Monitor or diagnostics*4 of GX Developer.

If the error is caused by the parameter or programs related to other than "OPE.MODE DIFF.", correct the parameters or programs of system A and system B.

...Refer to Section 4.11

⊠POINT .

When switching power on again, switch power on more than 5 seconds after switching power off. Failure to do so may disable a normal start of the redundant system because an inrush current of higher than the specified value may flow or the tracking communication circuit in the CPU module may not be initialized.

PROCEDURE FOR STARTING UP A REDUNDANT
- SYSTEM



...Refer to Section 4.11

..Refer to

Section 4.8

Running Control System (System A) CPU module

- (1) Set the RUN/STOP switch of control system CPU module (the "CONTROL" LED is OFF) to the RUN position, and confirm that the "RUN" LED of CPU module is ON.
- (2) Confirm that the "ERR." LED of control system CPU module is OFF. If the "ERR." LED is ON/flashing, check the error cause using the System Monitor or diagnostics*4 of GX Developer, and eliminate it. If the error is caused by the parameter or programs, correct the parameters or programs of

If the error is caused by the parameter or programs, correct the parameters or programs of system A and system B.

Restarting System A and System B*3

- (1) Power off system A and system B, or simultaneously set the RESET/L.CLR switches of CPU modules to the RESET position.
- (2) Simultaneously power on system A and system B, or simultaneously set the RESET/L.CLR switches of CPU modules to the reset switch neutral position.

Complete

Diagram 4.1 Procedure for starting Up in Backup Mode

* 1: Use "double-shielded coaxial cables" when configuring a coaxial bus system on a MELSECNET/ H remote I/O network.

Refer to the following manual for the double shielded coaxial cables.

- Q Corresponding MELSECNET/H Network System Reference Manual (Remote I/O network)
- * 2: When the "SYSTEM A"/"SYSTEM B" LED is off and the "ERR." LED is flashing, they indicate that the tracking cable is not connected or is faulty.
 - Connect or change the tracking cable.
- * 3: When starting the redundant system, do not perform the following operations until the "BACKUP" LED is ON (green).

Failure to do so may disable a normal start of the CPU module due to a stop error, "TRK. INIT. ERROR (error code: 6140)" or "CONTROL SYS. DOWN (error code: 6310 to 6312)".

(Section 8.1.7, Section 8.1.8)

Power either system off and then on.

Reset either system CPU module and then set its RESET switch to the neutral position.

- * 4: Diagnostics includes PLC diagnostics, Ethernet diagnostics, CC IE Control diagnostics, MELSECNET diagnostics, and CC-Link/CC-Link/LT diagnostics.
 - For details, refer to each network manual.
- * 5: If the RUN/STOP switch of standby CPU module is set to RUN and the operation status differs between the control system and standby system, the "consistency check" causes "OPE.MODE DIFF. (error code: 6010)" in the control system CPU module. (Section 5.1.4)


PROCEDURE FOR STARTING UP A REDUNDANT **SYSTEM**



(2) Procedure for starting up in debug mode

The standard procedure for starting up either system in the debug mode is shown below.

Explanation of program and parameter creation is not provided here.

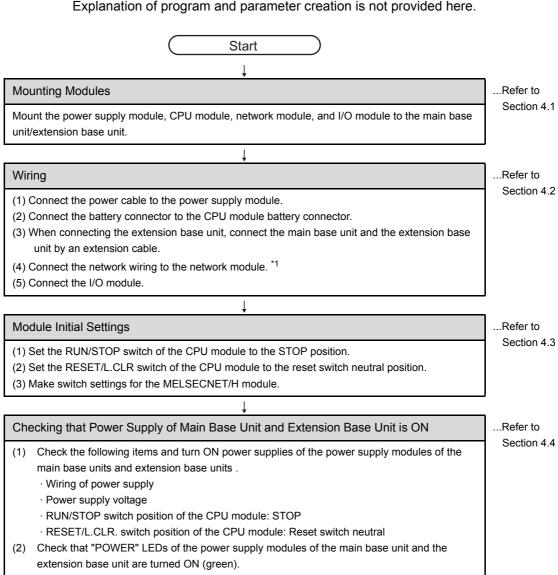

Connecting to the PC in which GX Developer is installed

(1) Start up GX Developer in the GX Developer installed PC.

(2) Connect the PC in which GX Developer is installed to the CPU module.

Writing Parameters and Programs to CPU

Write the parameters and programs created with GX Developer to the CPU module.

...Refer to Section 4.7

...Refer to Section 4.6

PROCEDURE FOR STARTING UP A REDUNDANT SYSTEM



Restarting System

Power off the system and then power on again, or set the RESET/L.CLR switch of the CPU module to the RESET position and then set it to the reset switch neutral position.

...Refer to Section 4.8

Error Check

Check if the "ERR." LED of the CPU module is OFF.

If the "ERR" LED is ON/flashing, check the error cause using the System Monitor or diagnostics of GX Developer, and eliminate it.

...Refer to Section 4.9

⊠POINT

When switching power on again, switch power on more than five seconds after switching power off. Failure to do so may cause an inrush current of higher than the specified value to flow.

Running CPU Module

- (1) Set the RUN/STOP switch of the CPU module (the "CONTROL" LED is ON) to the RUN position, and confirm that the "RUN" LED is ON.
- (2) Confirm that the "ERR." LED of the CPU module is OFF. If the "ERR." LED is ON/flashing, check the error cause using the System Monitor or diagnostics*3 of GX Developer, and eliminate it. If the error is caused by the parameters or programs, correct the parameters or programs.

Restarting System

Power off the system and then power on again, or set the RESET/LCLR switch of the CPU module to the RESET position and then set it to the reset switch neutral position.

...Refer to Section 4.8

Refer to Section 4.11



Diagram 4.2 Procedure for Starting Up in Debug Mode

* 1 : Use "double-shielded coaxial cables" when configuring a coaxial bus system on a MELSECNET/H remote I/O network.

Refer to the following manual for the double shielded coaxial cables.

- Q Corresponding MELSECNET/H Network System Reference Manual (Remote I/O network)
- * 2 : Diagnostics includes PLC diagnostics, Ethernet diagnostics, CC IE Control diagnostics, MELSECNET diagnostics, and CC-Link/CC-Link/LT diagnostics.

 For details, refer to each network manual.



4.1 Mounting Modules

(1) Procedure for Mounting Modules

Mount a module to the main base unit and the extension base unit in the following procedures.

- (a) Insert the module fixing latch, into the module fixing cutout firmly so that the module fixing latch may not come off the module fixing cutout.
- (b) Using the module fixing hole as a support, install the module onto the base unit by pushing it in the direction of arrow.

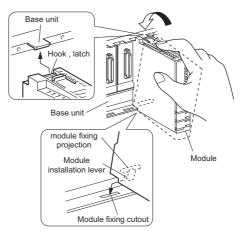


Diagram 4.3 Procedure for Mounting Modules

(2) Handling Cautions

- (a) Do not drop the module case or subject it to strong impact, as it is made of resin.
- (b) The module can be fixed to the base unit easily by the upper hook. However, it is recommended that the module be fixed using the module fixing screw, if installed in a location exposed to strong vibration or impact. In such cases, tighten the module fixing screw within the following range.

Module fixing screw (M3×12 screw): Tightening torque range: 36-48 N•cm

PROCEDURE FOR STARTING UP A REDUNDANT SYSTEM



4.2 Wiring

This section explains wiring to the power supply module necessary for starting up a redundant system, connection of the Q6BAT battery connectors, tracking cable connection.

Install the wiring to a network module by referring to the corresponding manual, as the wiring method differs according to model.

Install the wiring to an I/O module by referring to the following manual, as the wiring method differs according to the model.

1/O Module Type Building Block User's Manual

(1) Wiring to a Power Supply Module

Connect a power cable and ground cable to the power supply module on a main base unit by referring to the wiring example shown in Diagram 4.4.

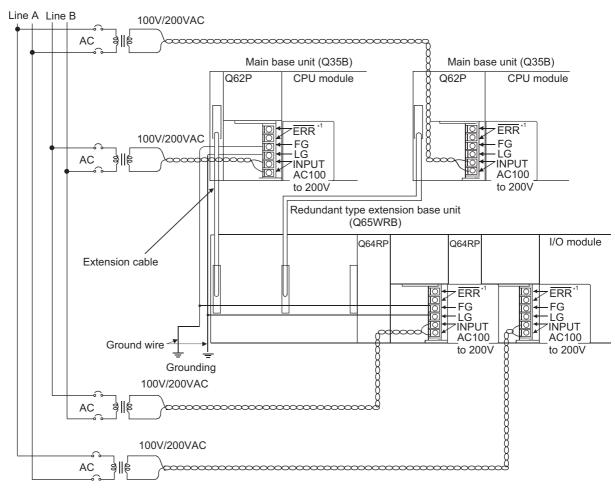


Diagram 4.4 Example of Wiring to a Power Supply Module

- * 1: Operation of an ERR terminal is as follows:
 - <When mounting power supply module to main base unit>
 The ERR terminal is OFF (open) when AC power is not turned ON, when the CPU module stop error (including an error at the time of reset) occurs, or when fuse of the power supply module is blown.
 - <When mounting redundant power supply module to redundant type extension base unit>
 The ERR terminal is OFF (open) when AC power is not turned ON, when fuse of the redundant power supply module is blown, or when the redundant power supply module breaks down.

4

PROCEDURE FOR STARTING UP A REDUNDANT SYSTEM




⊠POINT

1. Use the thickest possible (max. 2 mm² (AWG 14) wires for the 100/200VAC and 24VDC power cables. Be sure to twist these wires starting at the connection terminals.

For wiring a terminal block, be sure to use a solderless terminal.

To prevent short-circuit due to loosening screws, use the solderless terminals with insulation sleeves of 0.8 mm (0.03 inch) or less.

Also, only two solderless terminals can be connected per terminal block.



- 2. Supply power to two redundant power supply modules individually (redundant power supply module).
- When two redundant power supply modules (Q64RP) are placed together and operated as a redundant power supply system, it is recommended to use one of them as an AC power input and connect the other to an uninterruptible power supply.
- 4. When LG terminals and FG terminals are connected, be sure to ground the wires.
 - Otherwise, the PLC may be susceptible to noise.
 - Since the LG terminal has a half of the input voltage, touching this terminal may result in an electric shock.
- 5. When using the redundant power main base unit, ON (short-circuit) timing of ERR terminal on the redundant power main base unit is delayed than that of ERR terminal on the redundant power extension base unit by the CPU module initial processing time.

MELSEG Q series

(2) Connecting the Q6BAT Battery Connectors

PROCEDURE FOR STARTING UP A REDUNDANT

The CPU module Q6BAT batteries are shipped with the battery connectors disconnected.

Connect the battery connectors according to the following procedure prior to use.

(a) Confirming Battery Installation Status

Open the CPU module bottom cover, and confirm that the battery is installed properly.

(b) Connecting the Battery Connectors

Align the connector mounted in the case with battery connector pin and insert it.

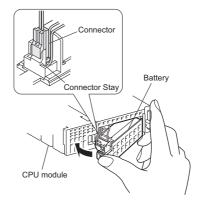


Diagram 4.5 Connecting the Case Connector and Battery Connector Pin

Remark

SYSTEM

Refer to the following manual, for installation of Q7BAT batteries and SRAM card batteries applicable to CPU modules.

GPU User's Manual (Hardware Design, Maintenance and Inspection)



(3) Connecting a Tracking Cable

Connect a tracking cable to CPU module tracking connectors according to the following procedure.

(a) Confirming System A/System B Connectors Confirm each connector of system A/system B.

(b) Connecting a Tracking Cable Connector

Align the tracking cable connector with the CPU module TRACKING connector, and then connect them.

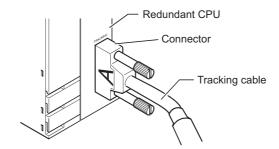


Diagram 4.6 Connecting a Tracking Cable Connector

Make sure to tighten the tracking cable connector fixing screws after connecting the tracking cable. (Tightening torque: 29.4 N•cm)

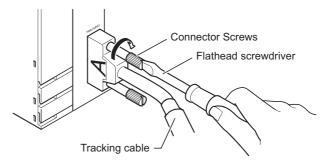


Diagram 4.7 Fixing a Tracking Cable Connector



(4) Connecting extension cables

When using the redundant type extension base unit, connect extension cables by the following procedures.

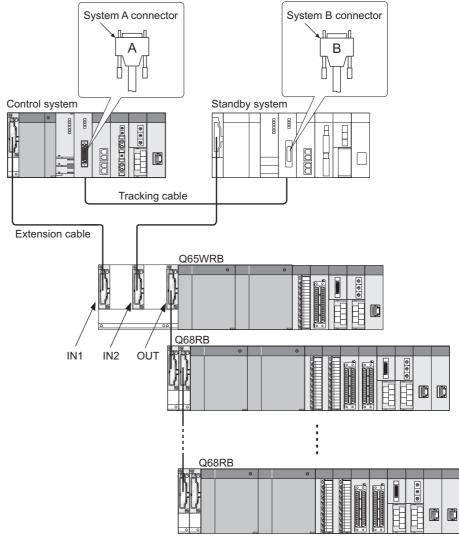


Diagram 4.8 Connection method for extension cables when using the redundant type extension base unit

(a) Connecting the main base unit to the redundant type extension base unit

- System A extension cable → Connect to IN connector (IN1) on the redundant type extension base unit.
- System B extension cable → Connect to IN connector (IN2) on the redundant type extension base unit.

(b) Connecting the redundant type extension base unit to the redundant power extension base unit

Connect extension cable from OUT connector on the redundant type extension base unit to IN connector on the redundant power extension base unit.



4.3 Module Initial Settings

Make the switch settings for the CPU module and network module.

Refer to the manual for the network module used, as the settings vary according to the model.

(1) CPU Module RUN/STOP Switch Settings

Set the RUN/STOP switch of CPU module to the STOP position.

(2) CPU Module RESET/L.CLR Switch Settings

Set the RESET/L.CLR switch of CPU module to the reset switch neutral position.

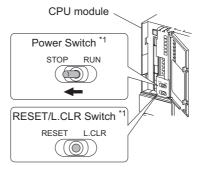


Diagram 4.9 CPU Module Switch Positions and Settings

* 1: Make sure to operate the RUN/STOP switch and the RESET/L.CLR switch by hand to make the settings.

If these switches are operated by the screw driver or other tool, this can result in damage.

4.4 Confirming that the Power Supply is ON

(1) Powering on the system

Check the power line and power supply voltage of the power supplies of the power supply modules of the main base units and extension base units in systems A and B, and turn ON power supplies simultaneously.

(2) Confirming the Power Supply Module "POWER" LED

After turning ON power supplies of the power supply modules of the main base units and extension base units in systems A and B, check that "POWER" LED is turned ON (green).*1

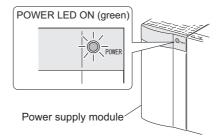


Diagram 4.10 Confirm that the "POWER" LED of power supply module is ON

^{* 1:} The LED turns on on either system in the debug mode.


PROCEDURE FOR STARTING UP A REDUNDANT SYSTEM



4.5 Confirming System A/System B

Identify system A and system B by checking the "System A" and "System B" LEDs of CPU modules.

Table4.1 Identify system A and system B by checking the "SYSTEM A" and "SYSTEM B"LEDs

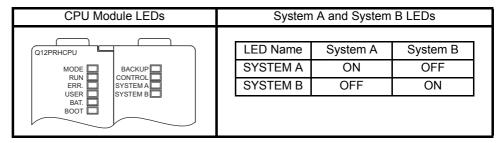

Refer to the following manual, for details on the CPU module LED.

CPU User's Manual (Hardware Design, Maintenance and Inspection)

4.6 Starting up/Connecting GX Developer

(1) Starting up GX Developer


Power on the PC and start up GX Developer.

(2) Connecting GX Developer

Connect the computer in which GX Developer has been installed and the System A CPU module with a cable.

Refer to the following manual for applicable cables.

CPU User's Manual (Hardware Design, Maintenance and Inspection)

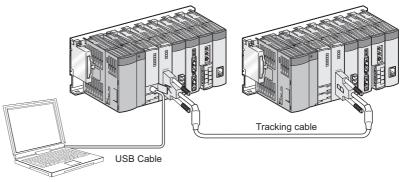

Personal Computer (GX Developer)

Diagram 4.11 Connecting GX Developer and System A CPU Module



4.7 Writing Parameters and Programs to CPU

Write parameters and programs to the CPU modules (one CPU module in the debug mode) of System A and System B according to the following procedures.

(1) Display of Write to PLC Screen

Select [Online] to [Write to PLC] from the menu bar to display the "Write to PLC" screen.

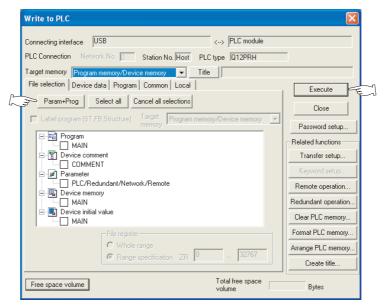


Diagram 4.12 Write to PLC Screen

(2) Selection of Write Data

Click the "Parameters and Programs" button, and select parameters and programs as Write Data.

(3) Execution of Write to PLC

Click the "Execute" button.

As the following confirmation dialog box appears, click "Yes".



Diagram 4.13 Execution of Write to PLC Confirmation Window



4.8 Restarting System A and System B

Power on system A and system B again, or set the reset switches of system A/system B CPU modules to neutral position, in order to restart the redundant system.

(1) Powering supply ON again

Power off system A and system B, and then simultaneously power on the both systems. *1

(2) Setting the Reset Switches of CPU modules to Neutral Position

Set the RESET/L.CLR switches of system A and system B CPU modules to the RESET position, and then simultaneously set the switches to neutral position. *2 *3

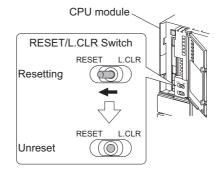


Diagram 4.14 Setting the CPU Module RESET Switch to Neutral Position

- * 1: Power on one system within three seconds after powering on the other system.
- * 2: Set the reset switch of one CPU module to neutral position within three seconds after making the same settings for the other CPU module.
- * 3: The LED turns on on either system in the debug mode.


⊠POINT

When switching power on again, switch power on more than 5 seconds after switching power off. Failure to do so may disable a normal start of the redundant system because an inrush current of higher than the specified value may flow or the tracking communication circuit in the CPU module may not be initialized.



4.9 Error Check

Confirm that no error has occurred in the CPU module by checking the "ERR." LED. Table4.2 Checking the "ERR." LED to Check for Errors

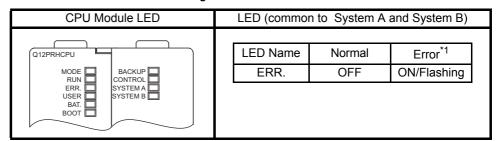

^{* 1:} If any error has occurred in the CPU module, check the details by using the PLC diagnostics of GX Developer.


Refer to the following manual, for details on CPU module LEDs.

CPU User's Manual (Hardware Design, Maintenance and Inspection)

4.10 Confirming the Control System/Standby System

Identify the control system/standby system by checking the "CONTROL" LEDs.

Table4.3 Checking the "CONTROL" LED to Identify Control System and Standby System

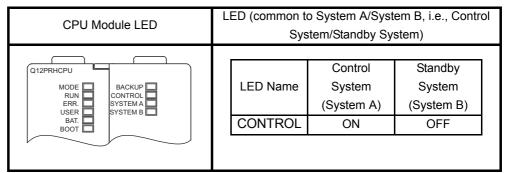

4.11 Running CPU Modules

Set the RUN/STOP switch to the RUN position in this order: standby system (System B) CPU module→control system (System A) CPU module.

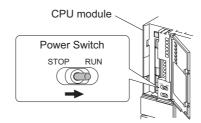


Diagram 4.15 CPU Module RUN/STOP Switch Position and Setting

1

OVERVIEW

SYSTEM CONFIGURATION

TRACKING CABLE

PROCEDURE FOR STARTING UP A REDUNDANT SYSTEM

REDUNDANT SYSTEM FUNCTIONS

REDUNDANT SYSTEM NETWORKS

PROGRAMMING

TROUBLESHOOTING



CHAPTER5 REDUNDANT SYSTEM FUNCTIONS

This chapter explains the redundant system functions.

5.1 Basic Concept of Redundant System

A redundant system consists of two basic systems, each of which includes a power supply module, CPU module, main base unit and network module.

To configure a redundant system, connect the basic systems on which above modules are mounted with a tracking cable.

(Please refer to Section 2.1 for system configuration.)




Diagram 5.1 Redundant System Configuration

(1) Determination of System A and System B

In a redundant system, one basic system is called "System A", and the other, "System B", to identify each of the two systems connected with a tracking cable.

Please refer to Section 5.1.1 for determination of system A and system B.

(2) Control System and Standby System

In a redundant system, the CPU module of either system performs operations and controls the redundant system.

The other system, which is for backup, does not perform operations.

The controlling system is referred to as "Control system", and the backup system, "Standby system".

Please refer to Section 5.1.2 for details on the control system and standby system.

(3) Switching Between the Control System and Standby System

If a fault occurs in the control system, the backup system takes over the system control and continues the operation.

Please refer to Section 5.3 for switching between the control system and standby system.

(4) Consistency Check between Control System and Standby System

A redundant system conducts "Consistency check between Systems A and B" to check if the control system and standby system are consistent so that control continues without the system going down when system switching occurs. Refer to Section 5.1.4, for consistency check between systems A and B.

(5) Operation Mode

The redundant system operates in the following three modes.

(a) Backup mode

The backup mode is for normal operation of redundant system. If a fault or failure occurs in the control system, the standby system takes over the control and continues the system control.

(b) Separate mode

The separate mode is for maintenance without stopping control. In the separate mode, different programs can be run in the control system and standby system CPU modules. While continuing the system control in the control system, program of standby system can be corrected and operation of program can be checked by using the data tracked from the control system. However, in the separate mode, system switching is not executed even if a fault or failure occurs in the control system. (System switching can be manually carried out.)

(c) Debug mode

The debug mode is for debugging with a system configuration of only either system prior to the system operation. In a redundant system, two Redundant CPUs are normally required; however, debugging can be executed with only one CPU.

In the debug mode, the CPU module uses the parameters for system A to operate. Therefore, the station set as system B in the network parameters becomes absent station (disconnected station).

Check the system switching operation in the backup mode prior to the system operation because the system switching cannot be checked in the debug mode. On the programming at system switching, refer to CHAPTER 7 "PROGRAMMING CAUTIONS".



5.1.1 Determination of System A/System B

In a redundant system, one of the systems connected with a tracking cable is referred to as "System A", and the other, "System B".

System A and System B are determined by the direction of the tracking cable, i.e., connectors.

(1) Determination of System A/System B

The system that includes the CPU module connected with the tracking cable system A connector will be "System A" and the other one with the system B connector will be "System B".

(a) When the System A connector is connected to the left system

When the system A connector is connected to the CPU module of the left system, system A/B will be determined as shown in Diagram 5.2.

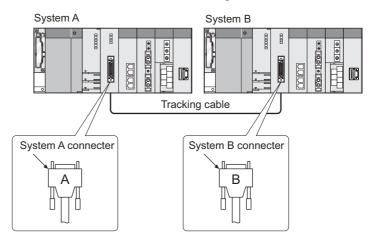


Diagram 5.2 System A and System B when System A Connector Is Connected to Left System

(b) When the System A connector is connected to the right system

When the system A connector is connected to the CPU module of the right system, system A/B will be determined as shown in Diagram 5.3.

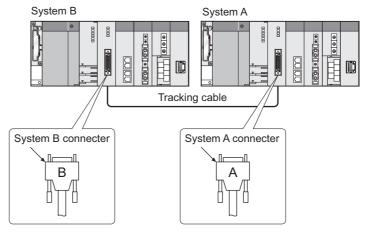


Diagram 5.3 System A and System B when System A Connector Is Connected to Right System


Refer to CHAPTER 3, for tracking cable specifications and connection.

MELSEG Q series

(2) Confirming system A/System B *1

Identify system A and system B by checking the "SYSTEM A" and "SYSTEM B" LEDs of CPU modules.

Table 5.1 Identify system A and system B by checking the "SYSTEM A" and "SYSTEM B" LEDs

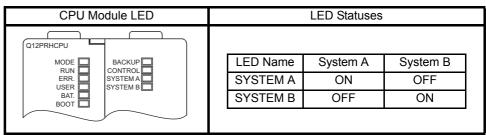

Refer to the following manual, for details on the CPU module LED.

CPU User's Manual (Hardware Design, Maintenance and Inspection)

* 1: System A and System B can be identified by checking whether the special relays "System A discriminating flag (SM1511)" and "System B discriminating flag (SM1512)" are ON or OFF.

Table5.2 Confirming SM1511 and SM1512 to Identify System A and System B

	SM1511	SM1512
System A	ON	OFF
System B	OFF	ON

(3) Precautions

When using the redundant system in the backup mode, connect the tracking cable to the control system and the standby system CPU modules.

If both systems are powered on without the tracking cable connected to the CPU models, the "TRK.CABLE ERR. (error code: 6120)" stop error will occur and the system cannot run.

If "TRK. CABLE ERR." occurs at power-on, power off System A and System B, then connect the tracking cable to the CPU modules, and power the systems on again.

⊠POINT

When starting up a single basic system, use the debug mode. Refer to Section 5.1.3, for the debug mode.



5.1.2 Determination of Control System and Standby System

In a redundant system, either system CPU module runs the programs, controls the system and communicates with the network.

The system that includes the CPU module running the programs is referred to as the "Control system".

The other system serves as a backup for continuing the system operation in the case the module on the control system fails or develops an error.

This backup system is referred to as the "standby system".

The standby system CPU module does not run the programs. (The same status as the STOP status.)

The control system and standby system are determined by which system starts up first, or which RESET/L.CLR switch of the CPU module is set to the neutral position first.

(1) When One of the Systems Starts Up Before the Other One *1 *2

If either system A or system B starts up before the other one, the system that starts up first will be the "Control system", and the other one will be the "Standby system". *3 When both CPU modules of the system A and system B are reset, the system with the CPU module of which RESET/L.CLR switch is set to the neutral position first will be the "Control system", and the other one will be the "Standby system". *3

(a) When system A starts up first

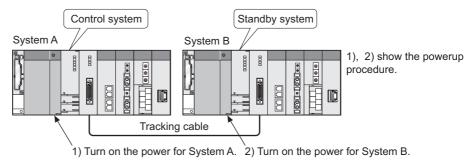


Diagram 5.4 Control System and Standby System when System A Starts Up First

- * 1: Refer to Section 5.1.1 for determination of system A and system B.
- * 2: Indicates the case where one system starts up within 3 seconds after the other system.
- * 3: If the second system does not start up within 3 seconds of the first one, the "STANDBY SYS.DOWN(error code: 6300)" continuation error will occur in the control system CPU module. By disabling "Check standby system malfunction," at the standby System Monitor settings in the redundant parameter operation mode settings with GX Developer, the control system will not detect the "STANDBY SYS. DOWN" continuation error.

(b) When system B starts up first

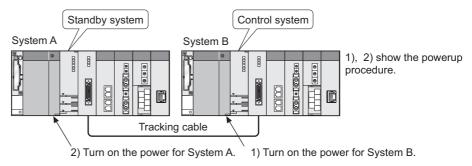


Diagram 5.5 Control System and Standby System when System B Starts Up First

(2) When System A and System B Start Up Simultaneously *4 *5

If system A and system B start up simultaneously, system A will be the "Control system", and system B will be the "Standby system".

If the system A and system B CPU modules are reset (RESET/L.CLR switch is set to the RESET position) and unreset (RESET/L.CLR switch is set to the neutral position) simultaneously, system A will be the "Control system", and system B will be the "Standby system".

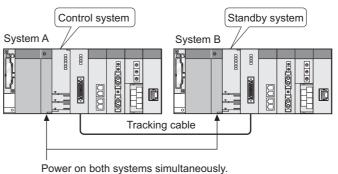


Diagram 5.6 Control System and Standby System
when System A and System B Start Up Simultaneously

- * 4: Refer to Section 5.1.1 for determination of system A and system B.
- * 5: This indicates the following cases:
 - •One system starts up and the other starts up within 3 seconds.
 - •When one CPU module is unreset (RESET/L.CLR switch is set to the neutral position) within 3 seconds of the other.



(3) When Only One System Starts Up

Whichever system that starts up first will be the "Control system".*6
Also, if the control system is already on, the other system will be the "Standby" system when it starts up.

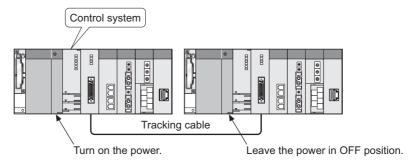


Diagram 5.7 Control System when Only One System Starts Up


* 6: The "STANDBY SYS. DOWN (error code: 6300) continuation error will occur in the control system CPU module.

By disabling "Check standby system malfunction," at the standby System Monitor settings in the redundant parameter operation mode settings with GX Developer, the control system will not detect the "STANDBY SYS. DOWN" continuation error.

(4) Confirming the Control System/Standby System*7

Identify the control system and standby system by checking the "CONTROL" LEDs. of CPU modules.

Table5.3 Confirming the control system and standby system by checking the "CONTROL" LEDs

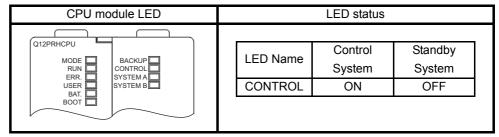

Refer to the following manual, for details on the CPU module LED:

CPU User's Manual (Hardware Design, Maintenance and Inspection)

* 7: The control system and standby system can be identified by checking whether the special relays "Control/Standby Status flag (SM1515)" and "Control/Standby Status flag (SM1516)" are ON or OFF.

Table5.4 Confirming SM1515 and SM1516 to Identify Control system and Standby system

	SM1515	SM1516
Control system	ON	OFF
Standby system	OFF	ON

system cannot run.

(5) Precautions

5.1 Basic Concept of Redundant System 5.1.2 Determination of Control System and Standby System

When using the redundant system in the backup mode, connect the tracking cable to

If both systems are powered on without the tracking cable connected to the CPU models, the "TRK.CABLE ERR. (error code: 6120)" stop error will occur and the

If "TRK. CABLE ERR." occurs at power-on, power off System A and System B, then

connect the tracking cable to the CPU modules, and power the systems on again.

the control system and the standby system CPU modules.





5.1.3 Operation Mode

The operation mode determines the redundant system operation methods. Following three operation modes are available.

- · Backup Mode
- Separate Mode
- · Debug mode

Use GX Developer to switch between the backup mode and separate mode. Refer to Section 5.3 for switching between the backup mode and separate mode. Switch the operation mode to the debug mode in the redundant parameter settings.

(1) Backup Mode

The backup mode is for normal operation of redundant system.

If a fault or failure occurs in the control system, the standby system takes over the control and continues the system operation.

To enable the standby system to continue the system operation when the control system goes down, the data of the control system must be continuously transferred to the standby system through the tracking cable.

Refer to Section 5.5, for details on the tracking function.

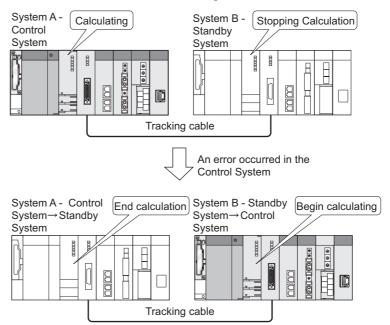


Diagram 5.8 System Switching Operation in Backup Mode


MELSEG Q series

(a) Confirming Backup Mode

REDUNDANT SYSTEM FUNCTIONS

Confirm that the redundant system is running in the backup mode by checking the "BACKUP" LEDs of CPU modules.

Table 5.5 Checking the "BACKUP" LED to Confirm the Backup Mode

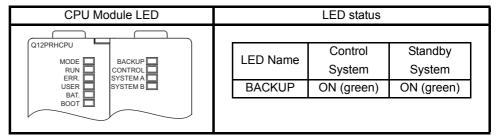

Refer to the following manual, for details on the CPU module LED:

CPU User's Manual (Hardware Design, Maintenance and Inspection)

(b) Precautions

- 1) When the system A and system B CPU modules are reset simultaneously(RESET/L.CLR switch is set to the RESET position), or unreset (RESET/L.CLR switch is set to the neutral position) simultaneously, the operation mode will automatically change to the backup mode. (This applies to only when the debug mode has not been specified in the redundant parameter settings.)
 - If the above operation is performed when the operation mode has been set to the separate mode with GX Developer while the system is running, this also will change the operation mode to the backup mode.
- 2) In the backup mode, make system A and system B parameters and programs consistent.
 - If inconsistent, the "FILE DIFF. (error code: 6000)" stop error will be detected by the consistency check between systems A and B.
 - Refer to Section 5.1.4, for consistency check between systems A and B.



(2) Separate Mode

The separate mode is for maintenance without stopping control. In the separate mode, different programs can be run in the control system and standby system CPU modules. While continuing the system control in the control system, program of standby system can be corrected and operation of program can be checked by using the data tracked from the control system.

(a) Enabling/Disabling the Tracking Function

In the separate mode, it is possible to select whether the tracking function is enabled or not, in order to perform the tracking.

Refer to Section 5.5 for the tracking function.

(b) Confirming the Separate Mode

Confirm that the redundant system is running in the backup mode by checking the "BACKUP" LEDs of CPU modules.

CPU Module LED

LED Status

LED Status

LED Name
Control
System
System
System
BACKUP
BACKUP
CONTROL
SYSTEMA
SYSTEMB
BOT
BOT

CONTROL
SYSTEMB
SYSTEMB
SYSTEMB
SYSTEMB
CONTROL
SYSTEMB
SYSTEMB
SYSTEMB
CONTROL
SYSTEMB
CONTROL
SYSTEMB
SYSTEMB
CONTROL
SYSTEMB
C

Table 5.6 Checking the "BACKUP" LED to Confirm the Separate Mode

Refer to the following manual, for details on the CPU module LED:

GPU User's Manual (Hardware Design, Maintenance and Inspection)

REDUNDANT SYSTEM FUNCTIONS



(c) Precautions

- When the operation mode is changed with GX Developer while the redundant system is running, the operation mode will automatically change to the separate mode. (Refer to Section 5.4, for details on changing Operating Mode.)
- If either system is powered on again or either CPU module is unreset (RESET/ L.CLR switch is set to the neutral position) in the separate mode, system switching will not occur.
 - If the control system is powered on again or unreset (RESET/L.CLR switch is set to the neutral position), it will start up as the control system, again.
 - If the standby system is powered on again or unreset (RESET/L.CLR switch is set to the neutral position), it will start up as the standby system, again.

System switching will not occur even when the control system is powered on again or unreset (RESET/L.CLR switch is set to the neutral position). However, system switching can be manually carried out. Refer to Section 5.3, for details on system switching.

- 3) Do not turn OFF the power supply of the control system or perform reset operation in the separate mode when the extension base unit is connected. (If doing so, turn ON both systems simultaneously or cancel the reset.)
- 4) Internal device tracking can be done in the separate mode. Internal devices are tracked even when the operation mode is changed from the backup mode to separate mode. To interrupt internal device tracking, turn the tracking trigger off.

(Section 5.5.5)

⊠POINT

- 1. When the system A and system B are powered on simultaneously or unreset (RESET/L.CLR switch is set to the neutral position) simultaneously, the operation mode will change to the backup mode.
- Make sure the tracking cable is connected to the system A and system B
 CPU modules before powering on the either system again in the separate
 mode. Failure to do so may cause the "TRK. CABLE ERR (error code: 6120)"
 stop error in the CPU module of that system.



(3) Debug Mode*1

The debug mode is for debugging with a system configuration of only either system prior to the system operation. In a redundant system, two Redundant CPUs are normally required; however, debugging can be executed with only one CPU. (An error will not occur even if the tracking cable is not connected.)

In the debug mode, the CPU module is fixed to "system A" and "control system", and uses the parameters for system A to operate.

Therefore, the station set as system B in the network parameters becomes absent station (disconnected station).

Confirm that the redundant system is running in the debug mode by checking the relevant LEDs of the CPU module.

CPU module LED

LED Status

LED Name

LED Status

BACKUP
CONTROL
SYSTEMA
SYSTEMA
SYSTEMA
SYSTEM A
SYSTEM A
SYSTEM B
OFF

Table 5.7 Checking the "BACKUP" LED to Confirm the Debug Mode

Refer to the following manual, for details on the CPU module LED:

CPU User's Manual (Hardware Design, Maintenance and Inspection)

* 1: When CC-Link IE Controller Network modules are mounted, do not connect the CC-Link IE Controller Network module on both systems to the network at the same time. In the debug mode, the system B CPU module uses the same parameters for the system A CPU module for operation. Therefore, control station overlap and station number overlap occur when connecting to the network at the same time.

REDUNDANT SYSTEM FUNCTIONS



(a) Setting and Canceling the Debug Mode

The debug mode must be specified in the redundant parameter settings with GX Developer to operate the system in the debug mode .

1) Write the redundant parameter in which "Start with Debug mode" is set into the CPU module, and power on the system again or set the RESET/L.CLR switch of the CPU module to reset switch neutral position. Then, the system will start up in the debug mode.

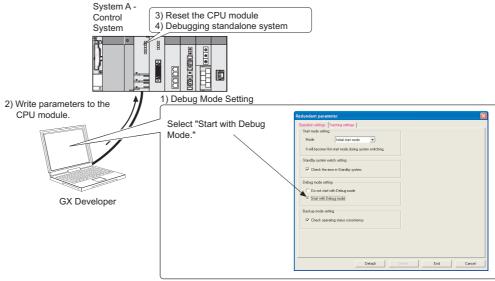


Diagram 5.9 Setting of Debug Mode on Redundant Parameter Screen

2) Write the redundant parameter in which "Do not start with Debug mode" is set into the CPU module, and power on the system again or set the RESET/L.CLR switch of the CPU module to reset switch neutral position. Then, the system will start up in the operation mode other than debug mode.



(b) Precautions

- The following redundant system functions cannot be executed in the debug mode, as the systems do not operate as a redundant system even when they are connected with the tracking cable.
 - System switching (including manual system switching)
 - · Memory copy from control system to standby system.
 - Tracking
- 2) The debug mode cannot be changed to the backup mode or separate mode with GX Developer, as it is set by the redundant parameter. Cancel the debug mode if the dialog box (Diagram 5.10) appears on GX Developer:



Diagram 5.10 Error Dialog Box Displayed on GX Developer

Change the redundant parameter to cancel the debug mode.

- 3) When mounting the MELSECNET/H remote master station on the main base unit, set the station No. to 0 (master station). If the station No. is set to other than 0, the "LINK PARA. ERROR (error code: 3101) stop error will occur.
- 4) When the CPU modules connected with the tracking cable are running in the different modes (backup mode/separate mode and debug mode), each of them operate as shown in Table 5.8.

Table 5.8 Operation of CPU Module Connected to CPU Module Running in Debug Mode by Tracking Cable

OPERATION MODE	CPU MODULE OPERATIONS									
BACKUP MODE	CONTROL	The CPU module develops the "STANDBY SYS. DOWN								
	SYSTEM	(error code: 6300)" stop error.								
	STANDBY	The CPU module develops the "CONTROL SYS. DOWN								
	SYSTEM	(error code: 6310)" stop error.								
	CONTROL	The CPU module ignores the CPU module in the debug								
SEPARATE MODE	SYSTEM	mode.								
	STANDBY									
	SYSTEM	(Does not detect any error.)								

Cancel the debug mode in the redundant parameter when using the redundancy system in the backup mode.

5) In the debug mode, the CPU module uses the parameters for system A to operate. Therefore, the station set as system B in the network parameters becomes absent station (disconnected station). Check the system switching operation in the backup mode prior to the system operation because the system switching cannot be checked in the debug mode. On the programming at system switching, refer to CHAPTER 7 "PROGRAMMING CAUTIONS".

MELSEG Q series

5.1.4 System Consistency Check

In order to continue the redundant system control after system switching, the system configurations, parameters and programs of the control system and standby system must be consistent.

In the backup mode, the standby system CPU module checks if the system configurations, parameters and programs of both systems are consistent. The redundant system operates as shown below according to the check results. *1

- If the control system and standby system are consistent in the system configuration, parameters and programs, the redundant system operates normally.
- If the control system and standby system are inconsistent in the system configuration, parameters and programs, an error will occur in the standby system CPU module.
 - * 1: This check is referred to as "Consistency Check Between Systems A and B".

The consistency check is executed in the following cases:

- When both systems are powered on simultaneously
- When both system CPU modules are unreset (RESET/L.CLR switch is set to the neutral position) simultaneously.
- During END processing by the control system CPU module
- When the tracking cable is reconnected

Table 5.9 shows consistency check points, and Table 5.10 shows execution conditions.

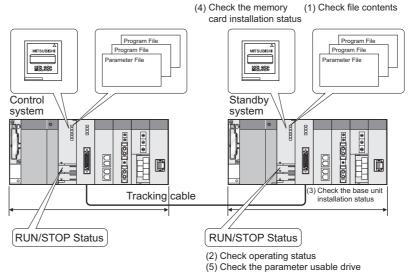


Diagram 5.11 Consistency Check Points Between Systems A and B

Table5.9 Consistency Check Points Between Systems A and B

Check Points	Description					
File Contents	Checks parameters, programs and initial device values.					
The Contents	Checks the memory capacity of the area for online change of multiple blocks.					
Operating Status	Checks the CPU module operation status (RUN / STOP / PAUSE).					
Basic System Configuration	Checks the CPU modules, I/O modules and network modules mounted on the					
Basic System Comiguration	main base units.					
Mamory Card Sotting	Checks the set memory card setting and the type, i.e., SRAM, Flash and ATA					
Memory Card Setting	card.					
Parameter Valid Drive Settings	Checks the parameter valid drive settings (dip switch SW2,SW3)					
	File Contents Operating Status Basic System Configuration Memory Card Setting					



Table5.10 Consistency Check Execution Conditions between System A and System B

	Conditi	ons *1		Description									
Execution Timing	Operation Mode	Standby System Operating Status	Control System Operating Status	File	Operating Status	Basic System Configuration	Memory Card Settings	Parameter Valid Drive Settings					
Execution Timing	Operation Mode	Standby System Operating Status	Control System Operating Status	File	Operating Status	Basic System Configuration	Memory Card Settings	Parameter Valid Drive Settings					
Both systems powered on simultaneously	Backup Mode	-	-	0	0	0	0	0					
Both systems Unreset *3 simultaneously	Backup Mode	-	-	0	0	0	0	0					
			RUN	○ *1	0	_	=	-					
		RUN	STOP PAUSE	-	0	-	-	-					
			STOP→RUN	0	0	-	-	_					
		STOP PAUSE	RUN STOP PAUSE	-	0	-	-	-					
	END processing		STOP→RUN	-	0	-	_	_					
END processing			RUN	0	0	-	-	-					
		STOP→RUN	STOP PAUSE	1	0	-	-	-					
		Power ON	RUN	0	0	\circ	-	0					
		Unreset *3	STOP PAUSE	ı	0	0	-	0					
	Changing from	RUN STOP→RUN	RUN	0	0	0	_	0					
	Separate Mode to Backup Mode		STOP PAUSE	_	0	0	-	0					
		RUN	RUN	0	0	0	-	0					
Tracking cable reconnected	Backup Mode	STOP PAUSE	RUN STOP PAUSE	-	0	0	-	0					

 $\bigcirc \ \, \text{Consistency Check Target}, \ - \, \text{Out of Consistency Check Target}$

- * 1 The consistency check is executed only in the following cases:
 - •After online program change is completed (the consistency check is executed only for the program files.)
 - At system switching

(The consistency check is executed under the above conditions only.)

- * 2 The consistency check is not executed under any other conditions not listed in the table.
- * 3 "Unreset" indicates that the RESET/L.CLR switch is set to the neutral position.

Remark	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	(

The consistency check will not be executed during the following:

Memory copy from control system to standby system

REDUNDANT SYSTEM FUNCTIONS



(1) File Consistency Check

(a) Check points

The file consistency check means checking the following files at system switching as shown in Table5.11.

Table5.11 Target Files and Check Contents

Target Files	Details
	Checks the parameters stored in the drive set as parameter valid drive
Parameters	(PLC parameters, redundant parameters, network parameters) and
i didilictors	the intelligent function module parameters set with GX Configurator.
	Checks the remote password stored in the program memory.
Programs	Checks the program file set in the PLC parameters program settings.
i rograms	The password set in the password registration is irrelevant.
	Checks the initial device value file set in the PLC parameter PLC file
Initial Device Values	settings.
	The password set in the password registration is irrelevant.
Area for Online Change of	Checks the memory capacity of the area for online change of multiple
Multiple-Block Write	blocks set during formatting. *1

^{* 1} If the memory capacities of the area for online change of multiple blocks are different in both systems, carry out the following operations:

(b) Inconsistency Errors

Table 5.12 shows the file inconsistency errors occurred when the target files are inconsistent.

Table5.12 File Inconsistency Errors

Execution Conditions	Error Description
 When both systems are powered ON simultaneously. When both system CPU modules are unreset (RESET/L.CLR switch is set to the neutral position) simultaneously. When one system starts up after the other. When the separate mode is changed to the backup mode. 	The following stop error will occur only in the standby system CPU module only: "FILE DIFF. (error code: 6000)".*2

If the "FILE DIFF." occurs in the standby system, execute the PLC verify by either of the methods described below to confirm the differences between the files of both system, correct the problem file, and perform write to PLC again.

- After reading the system A programs and parameters using GX Developer or PX Developer, compare them with the System B programs and parameters.
- Verify the GX Developer and PX Developer programs and parameters saved in the offline environment with the those written to both system CPU modules.
- * 2 If a stop error occurs in the standby CPU module, the "STANDBY SYS. DOWN (error code: 6300)" continuation error will occur in the control system CPU module.

[•]Using memory copy from control system to standby system function, copy the program memory contents of the control system to the standby system.

[•]Format program memories of both system CPU modules. (The memory capacities of the area for online change of multiple blocks will be the same.)



(2) Operating Status Consistency Check

(a) Check points

The operating status consistency check means checking the CPU module operating status (RUN / STOP / PAUSE).

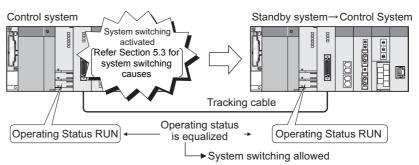


Diagram 5.12 Operating Status Consistency Check

(b) Inconsistency Errors

Table 5.13 shows inconsistency errors that occur when the operating statuses are inconsistent.

Table5.13 Inconsistency Errors

Execution Conditions	Error Description
 When both systems are powered ON simultaneously. When both system CPU modules are unreset (RESET/L.CLR switch is set to the neutral position) simultaneously. 	The following stop error will occur in the control system and standby system CPU modules: "OPE.MODE DIFF. (error code: 6020)".
When one system starts up after the other.	
During normal operation.	The following continuation error will occur in
 When the separate mode is changed to the backup mode. When reconnecting the tracking cable. 	the standby system CPU module only: "OPE.MODE DIFF. (error code: 6010)".

If the "OPE.MODE DIFF." error occurs in the control and standby systems, or in the standby system only, adjust the operating status so that they will be consistent in the followings.

- CPU module RUN/STOP switch position
- GX Developer remote operation
- · Remote contact ON/OFF status

(c) Operating Status Consistency Check Settings

- In order that no error will be detected when the operating status is changed during normal operation, uncheck "Check operating status consistency" at backup mode settings in the redundant parameter settings.
 Then, write the parameter to the CPU module, reset it, and the parameter setting will take effect.
- 2) When "Check operating status consistency" is unchecked, the CPU module will not detect an error even when writing the parameters with GX Developer to change the CPU operating status.
- 3) When powering on both systems simultaneously, even if the backup mode redundant parameters are set not to check the "Check operating status consistency" has been unchecked at the backup mode settings of operation mode settings in the redundant parameter settings, it will execute a consistency check.

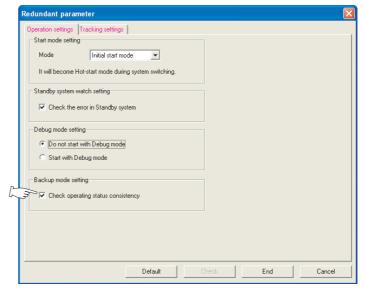


Diagram 5.13 Operation setting Screen



(3) Basic System Configuration Consistency Check

(a) Check points

The basic system configuration consistency check means checking the followings:

(If the number of slots of the main base unit has been set in the PLC parameter I/ O assignment, only the specified number of slots will be checked.)

- CPU module model
- · Model and type of modules mounted on each slot in the main base unit
- Network module mode settings

An error occurs because the CPU module type name is different

Control system

Standby system

Tracking cable

Diagram 5.14 Basic system Configuration Consistency Check

A consistency check is not executed for the followings:

- · Model of battery set in the CPU module
- · Main base unit model and number of available slots
- · Serial Nos. of modules mounted in the main base unit
- · Number of power supply modules mounted in the main base unit
- Model of power supply modules mounted in the main base unit
- Slots set to "Open" in the PLC parameter I/O assignment
- · Modules being replaced online
- Modules mounted on slots after the number of those in the PLC parameter I/O assignment

REDUNDANT SYSTEM FUNCTIONS



Table 5.14 shows inconsistency errors that occur when the basic system configurations are inconsistent.

Table 5.14 Basic System Configuration Inconsistency Errors

Execution Conditions	Error Description
When both systems are powered ON simultaneously When both system CPU modules are unreset (RESET/L.CLR switch is set to the neutral position) simultaneously	The following stop error will occur in the control system and standby system CPU modules: "UNIT LAY. DIFF. (error code: 6030 or 6035)".
 When one system starts up after the other. When the separate mode is changed to the backup mode When reconnecting the tracking cable 	The following stop error will occur in the standby system CPU module only: "UNIT LAY. DIFF. (error code: 6030 or 6035)". *1

If the "UNIT LAY. DIFF." error occurs in the standby system, configure the both basic systems of the control system and standby system so that they will be consistent in the followings.

- Model and type of modules mounted in the control system and standby system main base units
- · Network module mode settings

(4) System configuration check when using extension base unit

When the extension base unit is used, there are following restrictions. The error description for the case where the system configuration does not meet the following conditions is shown in Table 5.15.

- Connect the redundant type extension base unit to the first extension stage.
- Only one redundant type extension base unit is applicable per system.
- Connect IN connector (IN1 and IN2) of the redundant type extension base unit to OUT connector of the main base unit.
- Connect OUT connector of the redundant type extension base unit to IN connector of the redundant power extension base unit.
- The main base units used in systems A and B should be the same model.

Table 5.15 Error description when extension base unit does not meet use condition

Use condition	Error description				
Connect the redundant type extension base					
unit to the first extension stage	"BASE LAY ERROR (error code: 2012 or 2013)" occurs.				
Properly connect the redundant type	BASE LAT ERROR (effol code, 2012 of 2013) occurs.				
extension base unit and the main base unit					
Only one redundant type extension base unit is	"EXT.CABLE ERR. (error code: 2020)" occurs.				
applicable per system	EXT. CABLE ERR. (ello) code. 2020) occurs.				
The main base units used in systems A and B	"BASE LAY ERROR (error code: 2012)" occurs.				
should be the same model	BASE LAT ERROR (ello) code. 2012) occurs.				

^{* 1:} If a stop error occurs in the standby system CPU module, the following continuation error will occur in the control system CPU module: "STANDBY SYS. DOWN (ERROR CODE: 6300)".



(5) Memory Card Setting Status Consistency Check

(a) Check points

The memory card setting consistency check means checking if a memory card is set and the type.

Table5.16 Memory Card Setting Status Check Points

Check Points	Description						
Memory Card Setting	Checks if a memory card is set or not.						
Memory Card Type	Checks if type of memory cards set in the control system and standby						
Memory Card Type	system (SRAM card, Flash card, ATA card) are the same.						

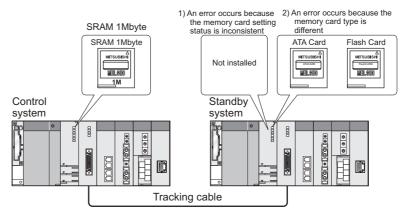


Diagram 5.15 Memory Card Setting Status Consistency Check

(b) Inconsistency Errors

Table 5.17 shows the inconsistency errors that occur when the card setting statuses are inconsistent.

Table 5.17 Memory Card Setting status Inconsistency Errors

Execution Conditions	Error Description
When both systems are powered ON	
simultaneously.	The following stop error occurs in the control
When both system CPU modules are unreset	system and standby system CPU modules:
(RESET/L.CLR switch is set to the neutral	"CARD TYPE DIFF." (error code: 6040 or 6041)".
position) simultaneously.	

If the "CARD TYPE DIFF." error occurs in the control system and standby system CPU modules, set the same memory card in each system.

POINT

REDUNDANT SYSTEM FUNCTIONS

- 1. The memory card setting status consistency check does not include the memory card capacity check.
 - When using memory cards of different capacities, check the capacity required for the actual control.
- If the special relay "Card removal/setting enable flag (SM609) is turned on and the memory card is changed during redundant system operation, an error does not occur since a memory card setting status consistency check is not performed.
 - However, a memory card setting status consistency check is executed if both systems are powered on simultaneously or unreset (RESET/L.CLR switch is set to the neutral position) simultaneously.
 - When changing the memory card during redundant system operation, set the memory card of the same type in each system.



(6) Parameter Valid Drive Settings Consistency Check

(a) Check points

The control system and standby system parameter valid drive settings (dip switch SW2,SW3) are checked.

An error occurs because the dip switch (SW3) setting is incorrect

Control system

Standby system

Tracking cable

Diagram 5.16 Parameter Valid Drive Settings Consistency Check

(b) Inconsistency Errors

Table 5.18 displays the consistency errors that occurred when the parameter valid drive settings are inconsistent.

Table 5.18 Parameter Valid Drive Settings Inconsistency Errors


Execution Conditions	Error Description
 When both systems are powered ON 	
simultaneously	The following stop error occurs in the control system
 When both system CPU modules are 	and standby system CPU modules: "FILE DIFF.
unreset (RESET/L.CLR switch is set to the	(error code: 6001)".
neutral position) simultaneously	
When one system starts up after the other	
When the separate mode is changed to the	The following stop error occurs in the standby system
backup mode	CPU module only: "FILE DIFF. (error code: 6001)".*1
When reconnecting the tracking cable	

If the "FILE DIFF." occurs in the standby CPU module, Use the dip switches SW2, SW3 of the control system and standby system CPU modules so that the settings will be consistent.

^{* 1:} If a stop error occurs in the standby CPU module, the following continuation error will occur in the control system CPU module: "STANDBY SYS. DOWN (error code: 6300)".

MELSEG Q series

REDUNDANT SYSTEM FUNCTIONS



(1) Self Diagnostics Function

The self diagnostics function means that the redundant CPU checks for its own error, in order to prevent malfunction as well as to perform preventive maintenance. If an error occurs when the redundant system is powered on or while the redundant CPU is running, the redundant CPU detects the error and displays it and performs system switching, etc.

(2) Error Detection Processing

(a) Error detection processing

When detecting an error, the redundant CPU will perform the following process:

- 1) Turning the ERR.LED etc. on
- 2) Turning the special relays (SM0, SM1) on
- 3) Storing the error information (error code) into the special resistor (SD0) When detecting multiple errors, the redundant CPU will store only the latest error code into the SD0.

Use the special relay and special register in a program to make a programmable controller or machine system interlock.

(b) Error history confirmation

The redundant CPU records the 16 latest error codes as error history.

The error history can be checked in the PLC diagnostics of GX Developer.

The error history is backed up by the battery even if the programmable controller is powered off.

(3) Redundant CPU Operation upon an error detection

(a) Operation Mode when detecting an error

When detecting an error through the self diagnostics, the redundant CPU operates in the following two ways:

1) Stop of redundant CPU operation

Upon an error detection, the redundant CPU stops the operation and performs system switching.

The redundant CPU holds all outputs (Y) that have not been assigned to the main base unit, while it processes the outputs (Y) that have been assigned to the main base unit according to "Output Mode on Error Detection" of the PLC parameters I/O assignment settings as shown below:

- Turns off all output of modules set to "Clear Output" (default).
 (Device memory output (Y) is held.)
- Output of modules set to "Maintain output" is held. (Device memory output (Y) is maintained.)

2) Continuation of redundant CPU operation

Upon an error detection, the redundant CPU executes all programs other than the program (instruction) where the error occurred.



(b) Errors that allow selection of operation

For the following errors, the operation can be selected to "continue" or "stop" in the PLC parameter's PLC RAS settings.

(In the parameter default settings, all errors are set to "stop".)

- 1) Operation error (including SFC program)
- 2) Extension instruction error (setting for extension in future)
- 3) Blown fuse
- 4) Module verify error
- 5) Intelligent program execution error
- 6) File access error
- 7) Memory card operation error
- 8) External power supply OFF (setting for extension in future)

As the module verify error is preset to "stop", when the error occurs, a stop error is detected in the control system, resulting in system switching.

However, since the new control system also detects the module verify error and stops its operation, the redundant system stops the control.

When the module verify error is set to "continue", even if the error occurs, the system switching does not occur and the operation continues with I/O numbers used before the error occurrence.

MELSEG Q series

(4) Self Diagnostic at Startup of Redundant CPU

The redundant CPU diagnoses the system based on the points described in Table5.19 when the redundant system is powered on or the CPU modules are unreset (RESET/L.CLR switch is set to the neutral position) . When detecting an error, the redundant CPU develops a stop error.

Table5.19 Self Diagnostic at CPU Module Startup

- *1		Diamandia Dannistia	Detected Error			
Priority *1		Diagnostics Description	Error Message	Error Code		
1		CPU module hardware check	MAIN CPU DOWN *2	1000 to 1009		
2	Podundant CDU	RAM check	RAM ERROR	1101 to 1109		
3	Redundant CPU Hardware Check	Operation circuit check	OPE.CIRCUIT ERR.	1200 to 1202		
4	Haluwale Check	Tracking cable connection check	TRK.CABLE ERR.	6120		
5		Tracking communication (system status) check	TRK.INIT.ERROR	6140		
6		Extension base unit mounting check	BASE LAY-ERROR	2010 to 2013		
7		For unsupported module being mounted check	SP.UNIT VER.ERR.	2151		
8		Main base unit bus check		1411		
9		Extension base unit bus check	CONTROL-BUS ERR. *2	1418		
10		Extension base unit mounting status	EXT.CABLE ERR.	2020		
11		Base assignment check	SP.UNIT LAY ERR.	2122, 2125		
12		Booting check	BOOT ERROR	2210, 2211		
13		For parameters check	MISSING PARA.	2200		
14		Parameters and system configuration check	SP.UNIT LAY ERR.	2100, 2103, 2106, 2107, 2124, 2125, 2128		
15		Intelligent Function Module check	SP.UNIT DOWN *3	1401, 1403		
16		RUN/STOP switch status check	OPE.MODE DIFF.	6020		
17		Control system and standby system configuration check	UNIT LAY.DIFF.	6030		
18	Redundant System Startup Ability	Control system and standby system CPU module models check	UNIT LAY.DIFF.	6035		
19	Check	For control system and standby system memory card settings check	CARD TYPE DIFF.	6040, 6041		
20		Parameter settings check	PARAMETER EEROR	3000 to 3004, 3007, 3040, 3041, 3042		
21		File storage to program memory check	FILE SET ERROR	2400, 2401		
22		Program files check	CAN'T EXE.PRG.	2500 to 2504		
23		Instruction codes check	INSTRCT. CODE ERR.	4000 to 4004		
24		Pointer (P) check	CAN'T SET(P)	4020, 4021		
25		Pointer (I) check	CAN'T SET(I)	4030		
26		END instruction check Link parameter error		4010		
27				3100 to 3107		
28		Remote password check	REMOTE PASS.ERR.	3400, 3401		
29		Intelligent parameters check	SP.PARA.ERROR	3300 to 3302		
30		File consistency check	FILE DIFF.	6000		
31		Parameter valid drive settings consistency check	FILE DIFF.	6001		
32		Tracking setting parameter check	TRK.PARA.ERROR	6500, 6501		

^{* 1} Indicates the priority of the order in which errors are detected when the both systems are powered on or the CPU modules are unreset (RESET/L.CLR switch is set to the neutral position).

^{* 2} The errors may be detected regardless the priority.

^{* 3} Can be changed to "continue" in the PLC parameters settings of GX Developer.



5.1.6 Start Mode

The start mode is the mode that determines device status at system startup or unreset (RESET/L.CLR switch is set to the neutral position).

Two types of start modes are available: Initial start mode and Hot-start mode. (Initial start mode is set by default.)

Select the start mode at backup mode settings in the redundant parameter settings of GX Developer.

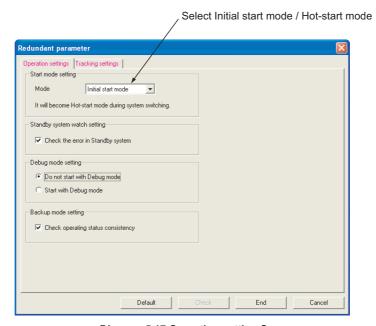


Diagram 5.17 Operation setting Screen

(1) Initial start mode (Default)

This mode is for clearing all devices except the file register and the latch range settings device (word device: 0; bit device: OFF) before performing the operation.

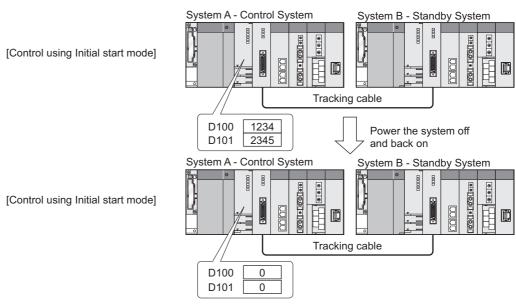


Diagram 5.18 Initial Start Mode Operation

⊠POINT

After system switching, the new control system will start up in the Hot-start mode regardless of the start mode settings.

(2) Hot-start mode

This mode is for performing the operation from when holding the device. (Some devices such as the step relay and the index register will be cleared.) As holding the devices even when the redundant system goes down due to power OFF or CPU module reset, the system can continue the operation when it is powered on or the CPU modules are unreset (RESET/L.CLR switch is set to the neutral position) .

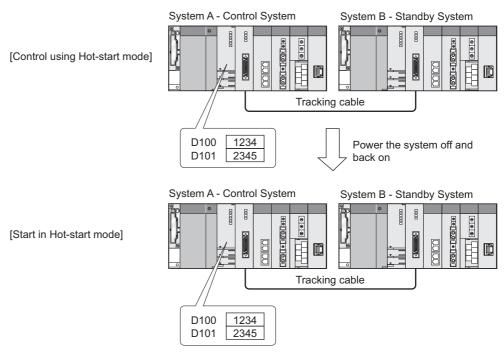


Diagram 5.19 Hot-Start Mode Operation



(3) Differences Between Initial Start Mode and Hot-start Mode

Table 5.20 shows the differences between Initial start mode and Hot-start Mode.

Table 5.20 Differences Between Initial Start Mode and Hot-start Mode

			Initial Start Mode	Hot Start Mode	
	All Other Than Index Register	Not held in power OFF	Cleared	Held *1	
	and Step Relay	Held in power OFF	He	ld	
Device	Index Register and Step Relay		Clea	red	
Memory	Special Relay and Special Reg	ister	Initial valu	ue is set	
oy	Initial Device Value Setting Rar	nge	Initial valu	ue is set	
	Local Device		Clea	red	
	File Register		Held		
	Initial Execution Type Program		Executed only one time during STOP→RUN		
Program	Interrupt Permitted / Not Permit	tted	Set to not permit interrupt		
Execution	SM402 (After RUN, ON for 1 so	can)	Turned ON 1 scan during STOP→RUN		
	SM403 (After RUN, OFF for 1 s	scan)	Turned OFF 1 scan during STOP→RUN		
Program Exe	cution Type (Initial / Scan / Standb	py)	Based on the PLC parameter settings		
File Register	Settings		Based on the PLC parameter settings		
Comment File Settings			Based on the PLC parameter settings		
SFC Program Startup Mode			Based on the PLC parameter settings		
Boot from Memory Card / Standard ROM			Based on the PLC parameter settings		
Intelligent Mo	odule Parameter Initial Settings		The intelligent module pa	arameters are reflected	

^{* 1:} Clear device data by latch clear.



5.2 FUNCTION LIST

The redundant system functions are listed in Table 5.21

Please refer to the following manual, for functions other than the redundant system functions

CPU User's Manual (Function Explanation, Program Fundamentals)

Table5.21 Function List

Item	Description	Reference
System Switching Function	This function switches the control system and the standby system. (It changes	
(Switching between the	the control system to the standby system, and the standby system to the	Section 5.3
Control System and Standby	control system.)	Section 5.5
System)	There are 2 types: automatic system switching and manual system switching.	
Operation Mode Change	This function switches the operation mode between the separate mode and	Section 5.4
- Operation wode onlinge	backup mode	Occilon 6.4
	This function transfers the operation control data to the standby system to	
	ensure continuous system operation when a control system failure or fault	
Tracking Function	occurs.	Section 5.5
	Control can be continued with the same data even if a control system failure or	
	fault occurs and the systems switching occurs.	
Online Program Change for	This function transfers the data, such as programs (including those written	
Redundancy	online) and parameters written to the control system CPU from the standby	Section 5.6
Redundancy	system.	
	This function copies program memory contents from the control system to the	
	standby system.	
Memory Copy from Control	(When exchanging the standby system CPU module, use of this function can	Section 5.7
System to Standby System	make the control system and standby system program memories consistent.)	Occilon 3.7
	This function can be executed by using GX Developer, or by using the special	
	relay and special register.	
	Allows replacement of an I/O module mounted on the main base unit where	
	the Redundant CPU is mounted while power supply is ON. (Not applicable	
	when any extension base unit is connected.)	
0 11 14 14 01	Allows replacement of an I/O module or intelligent function module *1	
Online Module Change	mounted on an extension base unit while power supply is ON.	Section 5.8
(Hot swapping)	Allows replacement of an I/O module or intelligent function module *1	
	mounted on a MELSECNET/H remote I/O station while power supply is ON.	
	Allows replacement of a power supply module while the system is operating when the system uses the redundant power main base unit.	

^{* 1:} Intelligent function module that supports online module change. (Section 2.4 (6))



5.3 The System Switching Function (Switching Between The Control System And The Standby System)

This section explains the executing system switching while the redundant system is running, execution timing, execution possibilities, operations of control/standby system CPU modules and relevant precautions.

5.3.1 System Switching Method

2 methods of system switching are available: automatic system switching and manual system switching that is performed by the user.

Whether the system switching can be executed automatically or manually depends on the operation mode. (Refer to Section 5.1.3 for details on operation mode.)

Table 5.22 indicates the system switching methods and applicable operation modes.

Table 5.22 System Switching Method and the Applicable Operation Modes

System Switching Method	System Switching Method Description				
Automatic avetem	System switching when a fault occurs in the control system				
Automatic system	System switching by the system switching request issued from	Backup Mode			
switching	the network module				
Manual System	System switching using GX Developer *1	Backup Mode			
Switching	System switching by system switching instruction	Separate Mode			


^{* 1:} System switching can be done from the OPS (application using EZ Socket), too.

If system switching is performed in the backup mode, the following error codes will be stored into the error history of the new control system and new standby system CPU

In this case, the ERR. LED will remain off. (The ERR. LED does not turn on or flash.)

- New control system: "CONTROL EXE. (error code: 6200)"
- New standby system: "STANDBY (error code: 6210)"

It is possible to confirm if the system switching has been executed or not in the PLC diagnostics (Error log) of GX Developer. *2

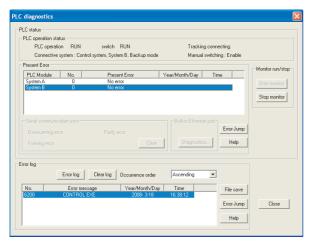

modules.

REDUNDANT SYSTEM FUNCTIONS

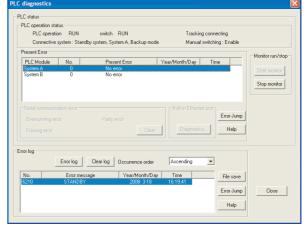


Diagram 5.20 New Control System PLC Health Check Display

Diagram 5.21 New Standby System PLC Health Check Display

* 2: If the "WTD error" occurs in the new standby system, PLC diagnostics cannot be done via the tracking cable.

Connect an RS-232 cable or USB cable to the system to be diagnosed (new control system/new standby system) and execute the PLC diagnostics.

The reason for system switching can be confirmed on the Error details window.

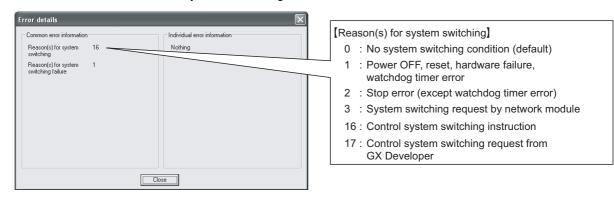


Diagram 5.22 Error details window



(1) Automatic System Switching

In automatic system switching, the redundant CPU determines if a system switching is necessary and automatically switches the control system and standby system. 2 types of automatic system switching are available: automatic system switching when a fault occurs in the control system, and system switching requested by the network module.

(a) System switching when a fault occurs in the control system

In the redundant system, the standby system CPU module monitors the control system operating status.

When the control system is in any of the following status and is not able to continue the redundant system control, the standby system CPU module switches to the control system and continues the redundant system control.

- · A stop error occurs in the control system CPU module
- The control system is powered OFF
- · The control system CPU module is reset

If a continuation error occurs in the control system CPU module, system switching will not occur.

Diagram 5.23 shows the processes that take place if a stop error occurs in the control system CPU module:

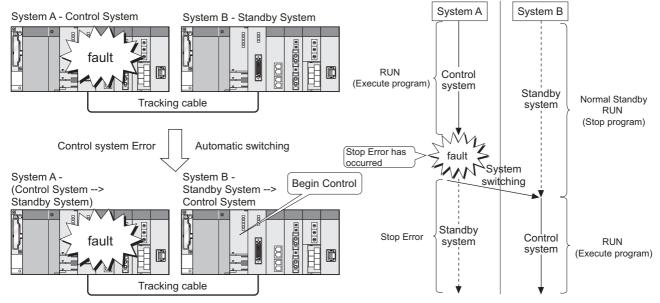


Diagram 5.23 System switching operations when a control system error occurs

(b) System switching requested by the network module

- · When the control system CC-Link IE Controller Network module, MELSECNET/H module, or the Ethernet module detects a communication error or wire break*1, the module requests system switching to the CPU module. (The standby system CC-Link IE Controller Network module, MELSECNET/H module, or the Ethernet module does not request system switching, even if the module detects a communication error or wire break*1.)
- When the PROFIBUS-DP master module detects a module fault or communication failure with DP-Slaves, the module requests system switching to the CPU module. (The standby system PROFIBUS-DP master module does not request system switching, even if the module detects a module fault or communication failure with DP-Slaves.)

When receiving the system switching request from the network module, the control system CPU module will perform a system switching at END processing. Diagram 5.24 shows the processes that take place when the system switching request is received from the network module.

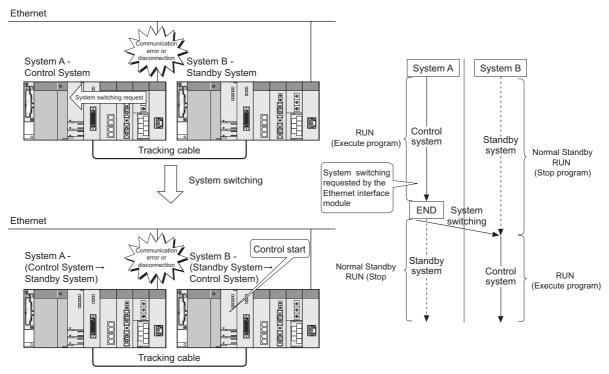


Diagram 5.24 System switching operations requested by the network module

* 1: For the Ethernet interface modules, only the QJ71E71-100 can detect wire break.

⊠POINT

- The network module system switching can only be requested from a redundant system-compatible CC-Link IE Controller Network module, MELSECNET/H module, Ethernet module, and PROFIBUS-DP master module.
 - Refer to Section 2.3 for details on serial Nos. of these redundant system-compatible modules.
- 2. When the Ethernet module is mounted on the extension base unit, the system switching request cannot be issued.
 - (The CC-Link IE Controller Network module and MELSECNET/H module cannot be mounted on the extension base unit.)

If the network module cable is disconnected, the system switching may not be performed depending on the timing when the control system and standby system detects the fault.

Example: The following diagram shows the processes that take place when the redundant system is connected to the MELSECNET/H.

- If the control system detects the cable disconnection first, the system switching will be performed.
- If the standby system detects the cable disconnection first, the system switching will not be performed.
- In this case, the "CAN'T SWITCH (error code: 6220)" continuation error will occur in the control system CPU module.

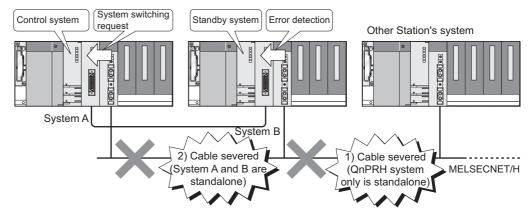


Diagram 5.25 System Switching Operation at Cable Disconnection

MELSEG Q series

(2) Manual System Switching

Manual system switching means the system switching that is done manually by the user while the system is running.

2 types of manual system switching are available: system switching using GX Developer and that by the system switching instruction (SP.CONTSW instruction).

The manual system switching is performed for the control system CPU module.

(a) System switching using GX Developer

When executing the system switching in the control system CPU module using GX Developer, the system switching operation is done at END processing.

1) System switching using GX Developer is done in the following procedure:

- Turn on the "Enable/disable user system switching" flag (SM1592) in the control system CPU module.
- The system switching request is issued to the control system CPU module by the redundant operation of GX Developer.

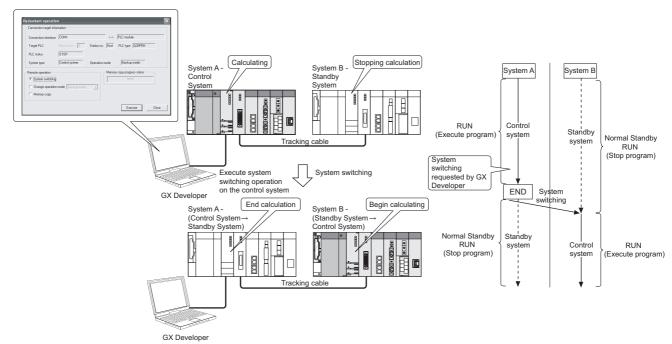


Diagram 5.26 System Switching Operation by GX Developer



⊠POINT

If SM1592 is not turned ON at the time of system switching executed from GX Developer, the error dialog box as Diagram 5.27 appears.
 If the error dialog box as Diagram 5.27 has appeared, turn ON SM1592 and then execute system switching again from GX Developer.




Diagram 5.27 Error Dialog Box Displayed on GX Developer

(b) System switching by the system switching instruction (SP. CONTSW instruction) *1

When the system switching instruction is executed in the control system CPU module, the system switching is performed at END processing after instruction execution

- 1) The system switching by system switching instruction is done in the following procedure:
 - •Turn on the "Enable/disable user system switching" flag (SM1592) in the control system CPU module.
 - •Turn on the system switching instruction condition in the control system CPU module and execute the instruction.

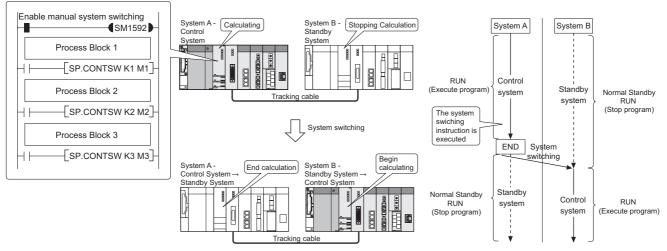


Diagram 5.28 System Switching Operation by System Switching Instruction

* 1: Refer to the following manual for details on the system switching instruction.

MELSEC-Q/L Programming Manual (Common Instruction)


⊠POINT

REDUNDANT SYSTEM FUNCTIONS

Precautions When Executing the System Switching Instruction (SP.CONTSW instruction)

As the control system and standby system CPU module programs and device data are consistent, when the system switching instruction is executed in the control system CPU module, the system switching may be executed in the new control system CPU module, too.

When executing the system switching instruction, it is required to use the special relay "Standby system to control system switching status flag (SM1518)" as illustrated in Diagram 5.29, and modify the program so that the instruction will not be executed in the new control system CPU module again.

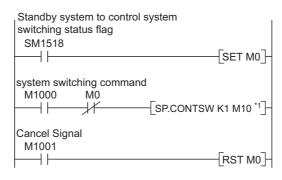


*1 : When the SP.CONTSW instruction cannot perform a system switch, the error completion device (M10) is set to ON.

Diagram 5.29 Program That Does Not Execute System Switching Instruction Again in New Control System CPU Module

- The error completion device for the system switching instruction can be used to check whether system switching is executed by the system switching instruction or not.
 - When the error completion device is OFF . .System switching is executed
 - When the error completion device is ON . . . System switching is not executed

2) Reasons for system switching can be set as system switching instruction parameter.



Argument (Reason for system switching, etc.)

Diagram 5.30 Example of System Switching Instruction programming

The system switching instruction parameter value can be confirmed in the system switching instruction error details window, which can be displayed from the PLC Diagnostics screen.

The system switching instruction parameter value can be used in troubleshooting.

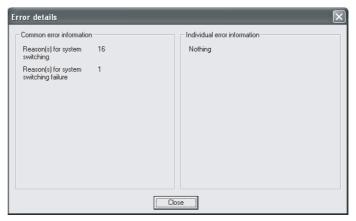


Diagram 5.31 Error details window

In addition, this parameter value is also stored in the special register SD6 (error common information) and SD1602 (system switching dedicated instruction parameter).

(3) System Switching Priority

The system switching priorities are shown in Table 5.23.

Table 5.23 Priority of Reasons for System Switching

Pric	ority	Reasons for System Switching					
High	1	Control system powered off					
Tiligit T		Control system CPU module reset					
	2	Stop error in control system CPU module					
3		Execution of system switching instruction					
Low	System switching operation using GX Developer						
Low 5		System switching request by network module					

(a) System switching processing when multiple system switching requests are issued simultaneously

When multiple system switching requests are issued simultaneously, system switching is performed according to the priority (from high to low) of reasons for system switching.

(b) Error message displayed on GX Developer

REDUNDANT SYSTEM FUNCTIONS

If the system switching is actually executed due to another reason for system switching when an attempt of system switching has been made using GX Developer, the error message (Diagram 5.32) will appear on GX Developer.



Diagram 5.32 Error Dialog Box Displayed on GX Developer

(4) Operations When System Switching is Executed in the Standby System **CPU Module**

If the manual system switching request is issued to the standby system CPU module, the system switching will not be executed.

Table 5.24 indicates the operations performed when a system switching request is issued to the standby system CPU module.

Table5.24 Operations When a System Switching Request is issued to the standby system CPU Module

System Switching	Operation Mode						
Request	Backup Mode	Separate Mode					
System Switching by		The following stop error will occur upon					
System Switching	Not performed	instruction execution: "OPERATION ERROR					
Instruction		(error code: 4121)".					
System Switching Using GX Developer	The following error message will be displayed on the GX Developer that was used to perform the system switching MELSOFT series GX Developer Cannot execute this function when the PLC is not control system.	The following error message will be displayed on the GX Developer that was used to perform the system switching MELSOFT series GX Developer Cannot execute this function when the PLC is not control system.					



5.3.2 System Switching Execution Timing

Table 5.25 indicates the system switching execution timing when a system switching condition occurs.

Table5.25 System Switching Execution Timing

System Switching Method	Reasons for System Switching in Control System	Execution Timing
	Stop error	System switching is executed when the reason for system
Automatic System	Power off	
	Reset	switching occurs.
Switching	System switching request by network	
	module	
	System switching using GX	System switching is executed at END processing of the scan
Manual Switching	Developer	where the reason for system switching occurred. *1
Manual Switching	System switching by system	
	switching instruction	

^{* 1:} Even if the COM instruction is executed after a reason for system switching occurs, system switching will not be executed by END processing. Refer to the following manual for details on the COM instruction.

MELSEC-Q/L Programming Manual (Common Instruction)

REDUNDANT SYSTEM FUNCTIONS



5.3.3 System Switching Execution Possibility

(1) In Backup Mode

System switching execution possibility in Backup Mode is shown in Table5.26

Table5.26 System Switching Execution Capability

	Control System Switching Condition									
		Automa	itic System Sv	vitching		Manual Syste	em Switching			
Standby System Operating Status *1	Stop Error Other Than Watchdog Timer Error	Watchdog Timer Error *3	Hardware Failure	Power Off Reset	System Switching requested by the Network Module	System Switching using GX Developer	System Switching by System Switching Instruction			
Normal	0	0	0	0	0	0	0			
Continuation ERROR	0	0	0	0	0	0	0			
Power OFF *2										
Resetting *2	×	○ *4	○ *4	×	×	×	×			
Hardware Failure *2										
Watchdog Timer Error *2 *3	×	0	0	0	×	×	×			
Stop Error Other Than	0	0	0	0	×	×	×			
Watchdog Timer Error *2	U	U	0	U	^	^	^			
At network fault detection	0	0	0	0	×	×	×			
Memory Copy from Control System to Standby System	0	0	0	0	×	×	×			
During Online Program Change	0	0	0	0	×	×	×			
Operating Status Inconsistency	0	0	0	0	×	×	×			
Tracking Cable Disconnection	×	○ *4	○ *4	×	×	×	×			
Preparing for Tracking	×	0	0	0	×	×	×			
System Switching Request Timeout	×	0	0	0	×	×	×			
Executing System Switching	0	0	0	0	0	×	×			

 $[\]bigcirc$ System switching enabled, \times System switching disabled

^{* 1:} Standby System Operating Status is displayed in Table5.27.

^{* 2:} When the reasons for system switching failure such as standby system power off/being reset, standby system stop error, tracking cable disconnection, are removed, the system switching may occur. (Table 5.28 to Table 5.32)

^{* 3:} Watchdog timer error corresponds to the "WDT ERROR (error code: 5000 OR 5001)".

^{* 4:} The control system switches to the standby system, but the standby system status does not change.





Table5.27 Operating Status and Details

Operating Status	Description				
Normal	The CPU module is in the RUN, STOP or PAUSE status, where no error such as a continuation error or stop				
NOITIAI	error has occurred.				
Continuation Error	The CPU module is in the RUN, STOP and PAUSE status, where a continuation error has occurred.				
Stop Error	The CPU module has stopped, as a stop error has occurred.				
Power Off	The system power is OFF.				
Resetting	The CPU module is being reset.				
	A fault has been detected by at least one module of standby system network modules				
At network fault detection	(CC-Link IE Controller Network module, MELSECNET/H module, Ethernet module, PROFIBUS-DP master				
	module).				
Preparing for Tracking	The communication is not made between the control system and standby system via tracking cable.				
System Switching Request	The system switching has not been completed, as a data error occurred due to noise, etc., in the				
Timeout	communication between the control system and standby system during system switching processing.				
Executing System Switching	System switching cannot be executed since the control system or standby system is executing system				
Executing System Switching	switching due to the previous system switching condition.				

⊠POINT -

1. Make sure to set "CPU Operation Mode" to "STOP (default)" on the details settings of the PLC parameters I/O Assignment settings. If set to "Continue", system switching cannot be executed when the "SP. UNIT DOWN" error occurs due to a network module hardware failure.

Table5.28 Operations When System Switching Cannot Be Executed Due to Standby System Power Off, Resetting or Hardware Failure

System Switching Method	Control System Switching Condition	System Status Before System Switching		System Status After System Switching Condition		Operation After B System Power ON → OFF or unresetting the CPU module (RESET/L.CLR switch is set
motiroa		System A	System B	System A	System B	to the neutral position)
	Stop Error Other Than	Control	Standby	Control	Standby	Startup as standby system
	Watchdog Timer Error	System	System	System	System	Startup as stariuby system
	Watchdog Timer Error	Control	Standby	Standby	Standby	Startup as control system
	Watchdog Timer Error	System	System	System	System	Startup as control system
	Hardware Failure	Control	Standby	Control	Standby	Startup as control system
Automatic		System	System	System	System	
System	Power OFF	Control	Standby	Control	Standby	Startup as control system
Switching		System	System	System	System	
	Reseting	Control	Standby	Control	Standby	Startup as control system
		System	System	System	System	Startup as control system
	System Switching	Control	Standby	Control	Standby	System switching will causes system B
	Request by Network	System	System	System	System	to become control system
	Module	Cyclon:	Cyclom	eyoto	,	to become control system
	System Switching	Control	Standby	Control	Standby	Startup as standby system
Manual	Using GX Developer	System	System	System	System	Ctartup de Staries y System
System	System Switching by	Control	Standby	Control	Standby	
Switching	System Switching	System	System	System	System	Startup as standby system
	Instruction	5,000111	2,000111	2,000	2,00111	

Table5.29 Operations When System Switching Cannot Be Executed Due to Error Other Than Stop Error in the Standby System

System Switching Method	Control System Switching Condition	Status Before System Switching		System Status After System Switching Condition		Operation After System B Power OFF → ON	
Metriod		System A	System B	System A	System B		
	Stop Error Other Than	Control	Standby	Standby	Control	Startup as control avetem	
	Watchdog Timer Errors	System	System	System	System	Startup as control system	
	Watahdag Timor	Control	Standby	Standby	Standby	Ctartus as control aveters	
	Watchdog Timer	System	System	System	System	Startup as control system	
	Hardware Failure	Control	Standby	Standby	Control	Startup as control system	
Automatic System		System	System	System	System		
	Power OFF	Control	Standby	Standby	Control	Startup as control system	
Switching		System	System	System	System		
	Reseting	Control	Standby	Standby	Control	Startup as control system	
		System	System	System	System		
	System Switching	Control	Standby	Control	Standby	System switching will cause system B to	
	Request by Network	System	System	System	System	become control system	
	Module	System	System	Gystern	System	become control system	
	System Switching	Control	Standby	Control	Standby	Startup as standby system	
Manual	Using GX Developer	System	System	System	System	Startup as stariuby system	
System	System Switching by	Control	Standby	Control	Standby		
Switching	System Switching	System	System	System	System	Startup as standby system	
	Instruction	System	System	System	System		





Table 5.30 Operations When System Switching Cannot Be Executed Due to Tracking Cable Disconnection

System Switching Method Control System Switching Condition		Before System Switching		System Status After System Switching Condition		Operation After Tracking Cable Disconnection
Metrica		System A	System B	System A	System B	
	Stop Error Other Than	Control	Standby	Control	Standby	System switching will not be executed.
	Watchdog Timer Errors	System	System	System	System	System switching will not be executed.
	Watchdog Timer Error	Control	Standby	Standby	Standby	System switching will not be executed.
	Watchdog Timer Error	System	System	System	System	System switching will not be executed.
	Hardware Failure	Control	Standby	Control	Standby	System switching will not be executed.
Automatic		System	System	System	System	
System	Power OFF	Control	Standby	Control	Standby	System switching will not be executed.
Switching		System	System	System	System	
	Reseting	Control	Standby	Control	Standby	System switching will not be executed.
		System	System	System	System	System switching will not be executed.
	System Switching	Control	Standby	Control	Standby	
	Request by Network	System	System	System	System	System switching will not be executed.
	Module	Oystem	Oystem	Oystem	Oystem	
	System Switching	Control	Standby	Control	Standby	System switching will not be executed.
Manual	Using GX Developer	System	System	System	System	Gystern switching will not be executed.
System	System Switching by	Control	Standby	Control	Standby	
Switching	System Switching	System	System	System	System	System switching will not be executed.
	Instruction	Cycloni	Cycloni	Cycloni	Cycloni	

Table 5.31 When System Switching Cannot Be Executed Due to Network Error of Standby System

System Switching Method	Control System Switching Condition	_	System Status Before System Switching System Switching Condition		Switching	Operation After B System Power OFF → ON
Wethou		System A	System B	System A	System B	
	Stop Error Other Than	Control	Standby	Standby	Control	Startup as control system
	Watchdog Timer Error	System	System	System	System	Startup as control system
	Watchdog Timer Error	Control	Standby	Standby	Standby	Startup as control system
	Watchdog Timer Error	System	System	System	System	Startup as control system
	Hardware Failure	Control	Standby	Standby	Control	Startup as control system
Automatic	Traidware railuie	System	System	System	System	Startup as control system
System	Power OFF	Control	Standby	Standby	Control	Startup as control system
Switching	Fower Of t	System	System	System	System	Startup as control system
	Reseting	Control	Standby	Standby	Control	Startup as control system
	Resetting	System	System	System	System	Startup as control system
	System Switching	Control	Standby	Control	Standby	
	Request by Network	System	System	System	System	Startup as standby system
	Module	Cystem	Cystem	Cystem	Cystem	
	System Switching	Control	Standby	Control	Standby	Startup as standby system
Manual	Using GX Developer	System	System	System	System	Startap as startably system
System	System Switching by	Control	Standby	Control	Standby	
Switching	System Switching	System	System	System	System	Startup as standby system
	Instruction	0,00011	0,000111	o you on	0,00011	

Table 5.32 When System Switching Cannot Be Executed Due to Watchdog Timer Error of Standby System

REDUNDANT SYSTEM FUNCTIONS

System Switching Method	Control System Switching Condition	Status Before System Switching		System Status After System Switching Condition		Operation After System B Power OFF → ON
Metriou		System A	System B	System A	System B	
	Stop Error Other Than	Control	Standby	Standby	Control	Startup as standby system
	Watchdog Timer Errors	System	System	System	System	Startup as stariuby system
	Watchdog Timer	Control	Standby	Standby	Standby	Startup as central avatam
	Watchdog Timer	System	System	System	System	Startup as control system
	Hardware Failure	Control	Standby	Standby	Control	Startup as control system
Automatic	Tialuwale Lallule	System	System	System	System	Startup as control system
System	Power OFF	Control	Standby	Standby	Control	Startup as control system
Switching	Fower Of I	System	System	System	System	Startup as control system
	Reseting	Control	Standby	Standby	Control	Startup as control system
	Resetting	System	System	System	System	Startup as control system
	System Switching	Control	Standby	Control	Standby	System switching will cause system B to
	Request by Network	System	System	System	System	become control system
	Module	Cyclom	Cyclom	,	Cyclon:	Bosomo control cyclom
	System Switching	Control	Standby	Control	Standby	Startup as standby system
Manual	Using GX Developer	System	System	System	System	Ctartup de Stariety System
System	System Switching by	Control	Standby	Control	Standby	
Switching	System Switching	System	System	System	System	Startup as standby system
	Instruction	0,000111	o jotom	0,000111	0,000111	



(2) In Separate Mode

System switching execution possibility in Separate Mode is shown in Table5.33

Table5.33 System Switching Execution Capability

			Control Sy	stem Switching	g Condition		
		Automa	Manual Syst	em Switching			
Standby System Operating Status *1	Stop Error Other Than Watchdog Timer Errors	Watchdog Timer Error *2	Hardware Failure	Power OFF Reset	System Switching requested by the Network Module	System Switching Using GX Developer	System Switching with System Switching Instruction
Normal	×	×	×	×	×	0	0
Continuation Error	×	×	×	×	×	0	0
Power OFF							
Resetting	×	×	×	×	×	×	×
Hardware Failure							
Watchdog Timer Error *2	×	×	×	×	×	×	×
Stop Error Other Than Watchdog Timer Errors	×	×	×	×	×	×	×
At network fault detection	×	×	×	×	×	0	0
Copying memory from Control System to Standby System	×	×	×	×	×	×	×
During Online Program Change	×	×	×	×	×	0	0
Operating Status Inconsistency	×	×	×	×	×	0	0
Tracking Cable Disconnection	×	×	×	×	×	×	×
Preparing for Tracking	×	×	×	×	×	×	×
System Switching Request Timeout	×	×	×	×	×	×	×
Executing System Switching	×	×	×	×	×	×	×

 $[\]bigcirc$ Indicates system switching possible, \times Indicates system switching not possible

^{* 1:} Standby system Operating status is displayed in Table5.34

^{* 2:} Watchdog timer error corresponds to "WDT ERROR (error code: 5000 OR 5001)".

REDUNDANT SYSTEM FUNCTIONS



Table5.34 Operating Status and Details

Operating Status	Description			
Normal	The CPU module is in the RUN, STOP or PAUSE status, where no error such as a continuation error or stop			
NOITIAI	error has occurred.			
Continuation Error	The CPU module is in the RUN, STOP and PAUSE status, where a continuation error has occurred.			
Stop Error	The CPU module has stopped, as a stop error has occurred.			
Power Off The system power is OFF.				
Resetting The CPU module is being reset.				
	A fault has been detected by at least one module of standby system network modules			
At network fault detection	(CC-Link IE Controller Network module, MELSECNET/H module, Ethernet module, PROFIBUS-DP master			
	module).			
Preparing for Tracking	The communication is not made between the control system and standby system via tracking cable.			
System Switching	The system switching has not been completed, as a data error occurred due to noise, etc., in the			
Request Timeout communication between the control system and standby system during system switching process				
Executing System	System switching cannot be executed since the control system or standby system is executing system			
Switching	switching due to the previous system switching condition.			

Table5.35 Operations When System Switching Cannot Be Executed Due to Operation mode, i.e., Separate Mode

System Switching Method	Control System Switching Condition	Before System Switching		System Status After System Switching Condition		Operation After Changing From Separate Mode to Backup Mode	
Method		System A	System B	System A	System B		
	Stop Error Other Than	Control	Standby	Control	Standby	System switching will not be avecuted	
	Watchdog Timer Errors	System	System	System	System	System switching will not be executed.	
	Watahdag Timor Error	Control	Standby	Control	Standby	System switching will not be executed	
	Watchdog Timer Error	System	System	System	System	System switching will not be executed.	
Automatic System Switching	Hardware Failure	Control System	Standby System	Control System	Standby System	Cannot change from Separate Mode to Backup Mode due to a control system hardware failure.	
	Power OFF	Control System	Standby System	Control System	Standby System	Cannot change from Separate Mode to Backup Mode due to control system power OFF.	
	Reseting	Control System	Standby System	Control System	Standby System	Cannot change from Separate Mode to Backup Mode due to control system reset status.	
	System Switching Request by Network Module	Control System	Standby System	Control System	Standby System	System switching will not be executed.	
	System Switching	Control	Standby	Standby	Control	System switching will not be executed.	
Manual	Using GX Developer	System	System	System	System	System switching will flot be executed.	
System Switching	System Switching by System Switching Instruction	Control System	Standby System	Standby System	Control System	System switching will not be executed.	



5.3.4 Both Systems Operations After System Switching

Table 5.36 and Table 5.37 indicates the CPU module and network module operations after system switching is performed.

(1) CPU Module Operations

Table 5.36 Control System and Standby System CPU Module Operation After System Switching

Item		New Control System CPU Module	New Standby System CPU Module		
	Initial Execution Type Program	Does not execute the program. However, executes the initial execution type program from the 0 step again, if it was not completed in the previous control system at the time of system switching.			
D	Scan Execution Type Program	Executes scan execution type program based on the tracked device data from step 0.			
Program Execution*1	Fixed Scan Execution Type Program	Starts counting the interrupt interval time from 0. (Refer to Section 7.2)	Stops program execution.		
	Standby Type Program	Not executed.			
	Interrupt Program	Executes when the interrupt factor is established. (Refer to Section 7.2)			
Tracking		Starts tracking to the new standby system.	Starts reception of tracking data. However, stops the reception of tracking data if a stop error has occurred.		
Online Program	m Change	Continues the write operation after system switching.	Continues the write operation after system switching.		
Writing files in	RUN	Continues the write operation after system switching.	Continues the write operation after system switching.		
General Data I	Processing	Executes the request received after system switching.	Executes the request received at time of system switching. However, may develope a communication error if a system switching is executed during general data processing.		
Device Memor	у	Holds the data.	Holds the data. Sets the received tracking data to specified device.		
Signal Flow Memory		Holds the tracked data. Turns ON signal flow memory in all steps if has not been tracked. Stores the execution results in the signal flow memory, after program execution.	Holds the data Sets the received tracking data in the signal flow memory.		
Initial Device V	/alue Setting	Does not set the value.	Does not process it.		
Special Relays and Special Registers		Holds the data. However, stores the statuses of control system and standby system after system switching in SM1515 and SM1516.	Holds the data. However, stores the statuses of control system and standby system after system switching in SM1515 and SM1516. Sets the received tracking data in the corresponding special relay and special register.		
Output (Y)		Holds the output. Outputs program execution results.	Turns OFF the output (Y) from modules mounted on the main base unit. Holds the output (Y) from modules other than above.		
Local Device S	Settings	Sets devices according to parameter settings.	Does not process it.		
File Register S	Settings	Holds the file register settings prior to system switching.	Not processed.		
Direct Input (DX)		Takes in (X) from the input module when executing the direct input instruction in a program after system switching.	Not processed.		
Direct Output (DY)		Outputs (Y) to the output module when executing the direct output instruction in a program after switching.	Not processed.		
Intelligent Function Module Dedicated Instruction		Executes the instruction in a program after system switching if the corresponding execution condition has been satisfied, and does not execute it if it has not been satisfied.	Not processed.		
FROM/TO Instruction		Executes the instruction in a program after system switching if the corresponding execution condition has been satisfied, and does not execute if it has not been satisfied.	Not processed.		
Access Reque Function Modu	st from Intelligent lle	Ignores the access request.	Not processed.		

^{* 1:} The redundant CPU cannot execute the low speed execution type programs.

(2) Network Module Operations

REDUNDANT SYSTEM FUNCTIONS

Table 5.37 Control System and Standby System Network Operations After System Switching

Item	New Control System Network Module	New Standby System Network Module		
CC-Link IE Controller Network	Starts cyclic transmission.	Continues cyclic transmission.		
CC-LITE IL CONTIONEI NELWOIR	Starts Cyclic transmission.	However does not perform output.		
MELSECNET/H PLC to PLC	Starts cyclic transmission.	Continues cyclic transmission.		
network	Starts Cyclic transmission.	However does not perform output.		
MELSECNET/H Remote I/O	Starts cyclic transmission.	Continues cyclic transmission as sub-master station.		
network	Operates as master station.	However, does not perform output.		
	Communicates with the control system when it is specified by	Communicates with the standby system when it is specified		
Ethernet	external device.	by external device.		
Ethernet	Transfers a message to the standby system when it is	Transfers message to the control system when it is		
	specified by external device.	specified by external device.		
PROFIBUS-DP	Continues PROFIBUS-DP communications.	Stands by and prepares for system switching.		

Refer to each network module manual, for details on a specific network module operation.



5.3.5 Special Relays/Registers For System Switching

(1) Special Relays For System Switching

Special relays for system switching are shown in Table5.38

Table 5.38 Special Relays For System Switching

Device			Setting at Time of	System Switching
No.	Name	Description	New Control System CPU Module	New Standby System CPU Module
SM1590	System switching enable/disable flag from network module	Turns ON when a system switching request is issued from the network module. The module No. that issued system switching can be checked by SD1590. Turns OFF when all bits of SD1590 are OFF.	0	0
SM1591	Standby system error detection disable flag at system switching	This flag is used to determine if the new standby station detects 6210:STANDBY during system switching. This applies to the following switching methods: System switching from GX Developer System switching using dedicated instruction System switching by the intelligent function module	_	0

○Set, - Not set

(2) Special Registers For System Switching

Special registers for system switching are shown in Table5.39

Table 5.39 Special Registers For System Switching

Device			Setting at Time of System Switching		
No.	Name	Description	New Control System CPU Module	New Standby System CPU Module	
SD5	Error common information	Stores the system switching condition that occurred in the control system prior to system switching only when "5 (System switching condition)" is saved to error common information category code for SD4. 0: No system switching condition (default) 1: Power OFF, reset, hardware failure, watchdog timer error 2: Stop error (except watchdog timer error) 3: System switching request by network module 16: Control system switching instruction 17: Control system switching request from GX Developer	0	0	
SD16	Individual error information	Stores system switching disenabling condition only when "8 (System switching condition)" is saved to individual error information category code for SD4. 0: Switch successfully completed (default) 1: Tracking cable malfunction (cable disconnection, cable malfunction, internal circuit malfunction, or hardware malfunction) 2: Hardware failure, power OFF, resetting or watchdog timer error occurring on standby system 3: Hardware failure, power OFF, resetting or watchdog timer error occurring on control system 4: Preparing for tracking communication 5: Timeout 6: Stop error (other than watchdog timer error) 7: Operations on the 2 systems are different (detected only in Backup Mode) 8: Copying memory from control system to standby system 9: Writing during RUN 10: Fault detection by standby system network module 11: Executing system switching 12: Online module change	0	-	

○Set, - Not set

Table5.39 Special Registers For System Switching (Continued)

Device			Setting at Time of System Switching		
No.	Name	Description	New Control System CPU Module	New Standby System CPU Module	
SD1588	System Switching Condition	Stores system switching condition that occurred on that system. Stores system switching condition even when system cannot switch due to system switching disenabling condition. Initializes at 0 at power ON / reset→clear 0: Initial value (system switching has not yet occurred) 1: Hardware failure, watchdog timer error 2: Stop error (except watchdog time error) 3: System switching request from network module 16: System switching instruction 17: System switching request from GX Developer	_	0	
SD1589	System Switching Disenabling Condition	When system switching occurs due to a system switching condition, the system switching disenabling condition when system switching could not be performed is stored in the following values: 0: System switching completed successfully 1: Tracking cable malfunction (cable disconnection, cable malfunction or internal circuit malfunction) 2: Hardware failure, power OFF, resetting or watchdog timer error occurring on standby system 3: Hardware failure, power OFF, resetting or watchdog timer error occurring on control system 4: Preparing for tracking communication 5: Communication timeout 6: Stop error on standby system (except watchdog timer error) 7: Operations on the 2 systems are different (detected only in Backup Mode) 8: Copying memory from control system to standby system 9: Writing during RUN 10: Detecting network fault on standby system • Initializes at 0 at same system power ON • Stores 0 when system switching completes successfully.	_	_	
SD1590	Same System Network Module No. Issuing System Switching Request	The following bits are turned ON for each same system module from which a system switching request was issued. Turns OFF on system after user has removed the corresponding module malfunction Each Bit / Bits 0 : OFF 1 : ON Module 0: Disabled because CPU module is a 2-slot unit Module 1: Module to the right of CPU module 11: In 12 Slot Base (Q312B), the module farthest to the right See SD1690 for the other system module No. issuing a system switching request.	0	0	

○Set, - Not set



Table5.39 Special Registers For System Switching (Continued)

Device			Setting at Time of System Switching		
No.	Name	Description	New Control System	New Standby	
SD1600	System Fault Information	If an error occurs in the redundancy system error check, the following corresponding bits turn ON. If the error is later cancelled, the bits turn OFF. Each Bit / Bits b15 b2 b1 b0 0:OFF 1:ON Tracking cable loose or damaged Powered down, reset, watchdog timer, hardware fault in the other system Other system stop error (excluding watchdog timer error) Unable to communicate with other system. Communication error is due to one of the following. Tracking hardware fault Vatchdog timer error has occurred in this system Unable to recognize other system due to other system due to other system fault If one of b0, b1, b2 and b15 turns ON, the others will turn OFF	CPU Module	System CPU Module	
SD1601	System Switching Results	 In Debug Mode, b0, b1, b2 and b15 are all OFF Stores system switching condition. Stores system switching condition in SD1601 on both systems at system switching Initializes at 0 at power OFF→ON / reset→reset clear. The values stored in this register are as follows: Initial value (system switching has never occurred) Power OFF, reset, hardware failure or watchdog timer error*1 Stop error (except watchdog timer error) System switching request from network module System switching instruction System switching request from GX Developer 	0	0	
SD1602	System switching dedicated command parameter	Stores command parameter when switching due to SP.CONTSW instruction. (SP.CONTSW instruction parameter is stored in SD1602 on both systems at system switching.) D1602 is only valid when "16: System switching instruction" is stored in SD1601. SD1602 only changes during execution of system switching due to a control system switching instruction.	0	0	
SD1610	Other System Diagnostic Error	The error code from the error occurring on the other system is stored in the bin data. The error code stored in the other system CPU module SD0 is stored here.	0	-	

○Set, - Not set

^{* 1 :} Does not store "1" in new standby system SD1601 when switching due to control system power OFF or reset.

5.3.6 System Switching Precautions

(1) System Switching Failure

The control system may disappear and the redundant system may not function in any of the following cases:

- (a) A tracking cable error (including tracking cable disconnection) has occurred during system switching (due to hardware failure, power off, or CPU module reset).
- (b) A communication error has occurred between the CPU modules during system switching due to a user instruction or a stop error.
- (c) During system switching due to a user instruction or a stop error, a tracking cable error (including tracking cable disconnection) has occurred concurrently with any of the following standby system conditions:
 - The standby system is powered off or its CPU module is reset.
 - A stop error occurs in the standby CPU module.
 - Control system and standby system CPU module operating statuses are different.
 - A standby system network module failure

Operations when the system switching fails due to one of (a) to (c) shown in the Table 5.40 below.

Table 5.40 System A and B CPU Module Operations When the System Switching Fails

Tables.40 System A and B GFG Module Operations When the System Switching Fairs					
Fu	ınction	System A and System B CPU Module Operation			
CPU Module Operating Sta	atus	Standby System Operation			
	BACKUP	Red light ON (in Backup Mode)			
LED Indication	BACKUP	Amber light ON (in Separate Mode)			
	CONTROL	Light OFF			
Special Relay	SM1516	ON (Standby system)			
Special Relay	(Operation System Status)	On (Standby System)			
	System Switching Request	Cannot execute system switching (ignores system switching request)			
	from Network Module	Carnot execute system switching (ignores system switching request)			
System Switching	System Switching Instruction	Cannot execute system switching (instruction cannot be executed due to			
Request	System Switching metraction	standby system operation)			
	System Switching Request	Cannot execute system switching			
	from GX Developer, etc.	Returns error code 4240H on startup (Can't execute on standby system).			
Communication from GX	Communication specified by	Communication error			
Developer, etc.	control system CPU module	Returns error code 4248H on startup (inconsistency).			

If the system switching has failed, power OFF the system A and B, connect a perfect cable to the CPU module, and then power ON the both systems simultaneously. With this operation, the system A will operates as the control system.

(2) Monitoring the Watchdog Timer During System Switching

The redundant system suspends the watchdog timer from being monitored during system switching.

Therefore, the "WDT ERROR (error code: 5001)" will not occur in the system switching scan even if the scan time exceeds the monitoring time set in the scan time watchdog timer.



(3) Enabling System Switching During Online Program Change

System switching is disabled during online program change.

In order to prevent system switching during online program change, the redundant system disables the redundant CPU module from performing system switching prior to online program change, and enables it to perform system switching upon completion of online program change.

If the communication is interrupted between the redundant CPU module and GX Developer due to cable disconnection or other reason during online program change, the redundant system CPU module cannot complete the online program change and may remain to be disabled from performing system switching.

As long as the redundant CPU module is in this status, either of manual system switching or system switching by network module system switching request cannot be performed.

In this case, enable the system switching by performing the following operation, in order to enable the manual system switching or system switching by network module system switching request.

- Turn on the control system CPU module special relay "Disable prohibition of system switching during Online program change" (SM1709).
- Perform online program change again to complete it.



5.4 Operation Mode Change Function

2 types of redundant system operation mode change are available.

- · Change from the backup mode to separate mode
- · Change from the separate mode to backup mode

Refer to Section 5.1.3 for details on the backup mode and separate mode.

(1) Operation Mode Change Procedure

The operation mode change is performed in the control system CPU module by the redundant operation of GX Developer.

(a) Changing from the Backup Mode to Separate Mode

- 1) Connect GX Developer to the control system CPU module.
- 2) Select "Online" "Redundant operation" from the menu bar of GX Developer to open the "Redundant operation" screen.
- 3) Open the GX Developer online Redundancy Procedure window. Check the "Change operation mode" at the redundant operation area, and then select "Separate mode" from the list.
- 4) Click the Execute button.
- 5) Set the RUN/STOP switch of the standby system CPU module to RUN→STOP→RUN, or use GX Developer to change from remote STOP to remote RUN. With this setting, the CPU module starts running and executes.*1

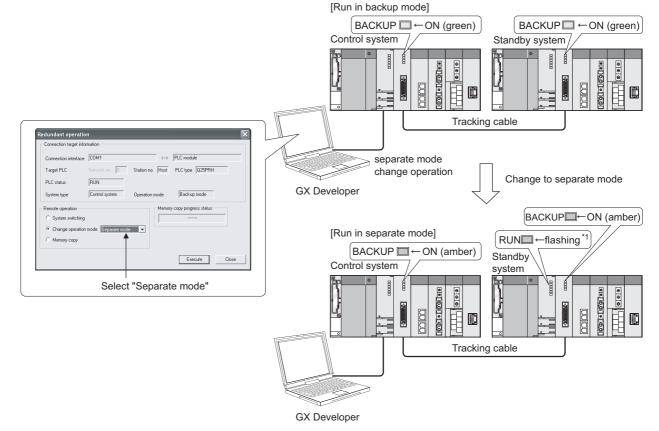


Diagram 5.33 Operation when Changing from Backup Mode to Separate Mode

* 1: When changing from the backup mode to the separate mode, the RUN LED of the standby system CPU module will flash and will be in a stop status.



(b) Changing From Separate Mode to Backup Mode *1

- 1) Connect GX Developer to the control system CPU module.
- 2) Select "Online" "Redundant operation" from the menu bar of GX Developer to open the "Redundant operation" screen.
- 3) Open the GX Developer online Redundancy Procedure window. Check the "Change operation mode" at the redundant operation area, than select "Backup mode" from the list.
- 4) Click on the Execute button.

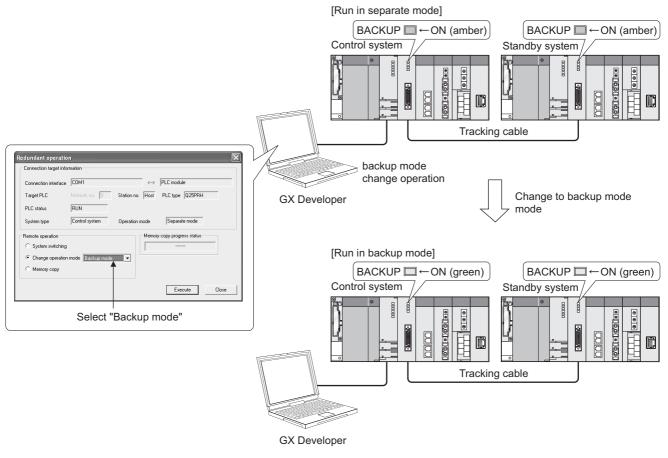


Diagram 5.34 Operation when Changing from Separate Mode to Backup Mode

- * 1: The operation mode can be changed from the separate mode to backup mode by either of the following methods:
 - •Powering on system A and system B simultaneously
 - •Setting the RESET/L.CLR switches of both CPU modules to reset switch neutral position simultaneously.

(c) Precautions

 After the operation mode is changed from the separate mode to backup mode, the standby system CPU module resumes the Consistency Check Between Systems A and B.

When returning to the backup mode, make sure to make the settings so that the control system and standby system will be consistent in advance. Refer to Section 5.1.4 for details on the Consistency Check Between Systems A and B.

2) To change the operation mode back to backup mode, use the same GX Developer that changed the mode from backup mode to separate mode. If the control system CPU module, however, is powered off or is reset in separate mode, the operation mode can be changed back to backup mode using any GX Developer.

When different GX Developer is used to change the operation mode back to backup mode, the error dialog box (Diagram 5.35) appears.

If the error dialog box appears, change GX Developer to the one used to

change the mode to separate mode or reset the control system CPU module.




Diagram 5.35 Error Dialog Box Displayed on GX Developer

- 3) The operation mode cannot be changed from separate mode to backup mode using GX Developer when the control system CPU module operation is stopped (the "RUN" LED of the CPU module is flashing).
- 4) Operation mode cannot be changed in the following situations:
 - When standby system is powered off or the standby system CPU module is being reset.

If the error dialog box (Diagram 5.36) appears on GX Developer, turn the standby system on again or clear reset on the CPU module and then change the operation mode.



Diagram 5.36 Error Dialog Box Displayed on GX Developer

• When the communication with the standby system is disabled due to tracking cable disconnection.

If the error dialog box (Diagram 5.37) appears on GX Developer, check the tracking cable connection and change the operation mode.



Diagram 5.37 Error Dialog Box Displayed on GX Developer



 When the operation mode change request is issued to the standby system CPU module

(If the system switching is executed in the separate mode, the operation mode change request is issued to the new control system CPU module.) If the error dialog box (Diagram 5.38) appears on GX Developer, specify the control system CPU module and make the operation mode change request.



Diagram 5.38 Error Dialog Box Displayed on GX Developer

 When the operation mode change request and the system switching request are issued simultaneously

The operation mode will not be changed even after the system switching is completed.

If the error dialog box (Diagram 5.39) appears on GX Developer, after the system switching, repeat the operation mode change.



Diagram 5.39 Error Dialog Box Displayed on GX Developer

 When the operation mode change request is issued to the CPU module in the debug mode

If the error dialog box (Diagram 5.40) appears, cancel Debug Mode in the redundancy parameters.(Section 5.1.3)



Diagram 5.40 Error Dialog Box Displayed on GX Developer

 When a hardware failure or watchdog timer error has occurred in the control system CPU module

If the error dialog box (Diagram 5.41) appears on GX Developer, cancel the specified control system CPU error and change the operating mode.



Diagram 5.41 Error Dialog Box Displayed on GX Developer

 During online program change
 If the error dialog box (Diagram 5.42) appears on GX Developer, wait for RUN write to complete and then change the operation mode.



Diagram 5.42 Error Dialog Box Displayed on GX Developer

During memory copy from control system to standby system
 If the error dialog box (Diagram 5.43) appears on GX Developer, wait for memory copy from the control system to the standby system to complete and then change the operation mode.



Diagram 5.43 Error Dialog Box Displayed on GX Developer

 When a stop error occurs in the control system CPU module (the "RUN" LED: flashing)

If the error dialog box (Diagram 5.44) appears on GX Developer, cancel the control system CPU error and change the operation mode.



Diagram 5.44 Error Dialog Box Displayed on GX Developer



(2) Operations When Changing Operation Mode

The CPU module operations after operation mode change and the input/output processing to the remote station are shown in Table 5.41.

Refer to Table 5.41 for operations during operation in the corresponding operation mode.

Table5.41 Operations When Changing Operation Mode

				S When Changing Operatio		
		Function		Control system	ackup Mode to Separate Mode Standby system	
	Operation	Operation statu	s: RUN	Continues execution.	Stops. (Starts operation when the RUN/STOP switch is operated from RUN to STOP to RUN.)	
		Operation statu	s: STOP, PAUSE, stop error	Stops (continues).	Stops (continues).	
	Program e	xecution type		Takes over the current setting.	Takes over the current setting.	
Program execution	EI/DI settir	ng		Takes over the current setting.	Takes over the current setting.	
execution	IMASK set	ting		Takes over the current setting.	Takes over the current setting.	
	DUTY sett	ing		Takes over the current setting.	Takes over the current setting.	
	File registe	er setting		Takes over the current setting.	Takes over the current setting.	
	Instruction instruction		everal scans (dedicated	Continues the instruction execution.	- (since operation was not executed before operation mode change.)	
Device men	nory (includin	ng special relays	and special registers)	Takes over the current status.	Takes over the current status.	
Signal flow			With tracking setting	Takes over the current status.	Takes over the current status.	
Signal now			Without tracking setting	Takes over the current status.	Clears.	
	"RUN"	Operation statu	s: RUN	Turns on (continues).	Turns off and then flashing. (Turns on when the RUN/STOP switch is operated from RUN to STOP to RUN.)	
LED		Operation statu	s: STOP, PAUSE, stop error	Turns off (continues).	Turns off (continues).	
	"BACKUP"			ON (green) and then ON (orange).	ON (green) and then ON (orange).	
	Other than	"RUN" and "BA	CKUP"	Takes over the current status.	Takes over the current status.	
	I/O from/to	main base unit	Input	Continues execution.	Continues execution.	
	1/0 110111/10	main base unit	Output	Continues execution.	Starts output.	
	I/O from/to	extension base	Input	Continues execution.	Does not execute input.	
	unit		Output	Continues execution.	Does not execute output.	
	CC-Link IE	Controller	Link to CPU	Continues execution.	Continues execution.	
	Network		CPU to link	Continues execution.	Does not execute refresh. (No change from before operation mode change)	
	MELSECN	IET/H PLC to	Link to CPU	Continues execution.	Continues execution.	
	PLC netwo		CPU to link	Continues execution.	Does not execute refresh. (No change from before operation mode change)	
I/O	MELSECN	IET/H remote	Link to CPU	Continues execution.	Continues execution.	
	I/O networ		CPU to link	Continues execution.	Does not execute refresh. (No change from before operation mode change)	
	Auto refres	sh to network	Intelligent module to CPU	Continues execution.	Continues execution.	
	module on	main base unit	CPU to intelligent module	Continues execution.	Continues execution.	
	Auto refres	sh of network	Intelligent module to CPU	Continues execution.	Does not execute auto refresh.	
	module on unit	extension base	CPU to intelligent module	Continues execution.	Does not execute auto refresh.	
	SB/SW ref	resh (CC-Link	Link to CPU	Continues execution.	Continues execution.	
		er Network, IET/H, CC-Link)	CPU to link	Continues execution.	Does not execute refresh. (No change from before operation mode change)	

	Separate Mode to Backup Mode		
Control system	Standby system		
Continues execution.	Stops.		
Stops (continues).	Stops (continues).		
Takes over the current setting.	Takes over the current setting.		
Takes over the current setting.	Changes to the DI status (interrupt disable).		
Takes over the current setting.	Takes over the current setting.		
Takes over the current setting.	Takes over the current setting.		
Takes over the current setting.	Takes over the current setting.		
Continues the instruction execution.	Continues the instruction execution.		
Takes over the current setting.	Takes over the current setting.		
Takes over the current setting.	Takes over the current setting.		
Takes over the current setting.	Takes over the current setting.		
Turns on (continues).	Turns on, flickers and then turns off.		
Turns off (continues).	Turns off (continues).		
Lit orange and then lit green.	Lit orange and then lit green.		
Takes over the current setting.	Takes over the current setting.		
Continues execution.	Continues execution.		
Continues execution.	Stops output.		
Continues execution.	Does not execute input.		
Continues execution.	Does not execute output.		
Continues execution.	Continues execution.		
Continues execution.	Does not execute refresh. (No change from before operation mode change)		
Continues execution.	Continues execution.		
Continues execution.	Does not execute refresh. (No change from before operation mode change)		
Continues execution.	Continues execution.		
Continues execution.	Does not execute refresh. (No change from before operation mode change)		
Continues execution.	Continues execution.		
Continues execution.	Continues execution.		
Continues execution.	Does not execute auto refresh.		
Continues execution.	Does not execute auto refresh.		
Continues execution.	Continues execution.		
0 " "	Does not execute refresh.		
Continues execution.	(No change from before operation mode change)		

Table 5.41 Operations When Changing Operation Mode (Continue)

	Function		From B		
	Function		Control system	Standby system	
		Device memory			
Data tracking (Section 5.5.: Redundant function		SM/SD (system dependent)	Stops tracking.		
	Data tracking	SFC information			
	(Section 5.5.3)	PID control instruction information	Stops tracking.		
		Signal flow (with tracking setting)	Stops tracking.		
	Consistency check between System A & B (Section 5.1.4)			e checked when operation mode change is made. us consistency check between System A & B.	

From S	From Separate Mode to Backup Mode					
Control system	Standby system					
	Continues execution.					
	Starts tracking.					
	Starts tracking.					
	Starts tracking.					
	Starts tracking.					
Makes consistency chec	ck between System A & B for the following items.					
When an error is detected,	a self-diagnostic error occurs in the standby system.					
	• File					
	Operation status					
• 1	Main base mounting status					
	Parameter valid drive					

(a) Operations When Changing from Backup Mode to Separate Mode

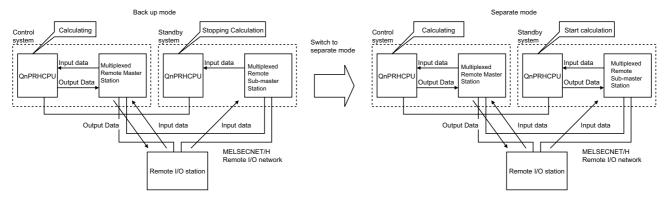


Diagram 5.45 Operations When Changing from Backup Mode to Separate Mode

(b) Operations When Changing from Separate Mode to Backup Mode

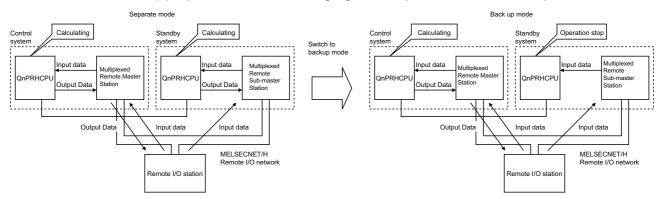


Diagram 5.46 Operations When Changing from Separate Mode to Backup Mode

Memo

OVERVIEW
2
ATION

SYSTEM

TRACKING CABLE

PROCEDURE FOR STARTING UP A REDUNDANT SYSTEM

5.4 Operation Mode Change Function	5 - 68
	_



(3) Processing After Operation Mode Change

Table 5.42 indicates the redundant system operations after operation mode change.

Table5.42 Operations After Operation Mode Change

In Backup Mode							
		Control System	Standby System				
ltem	During Normal RUN and During Continuation Error	During Stop	During Stop Error	During Normal RUN and During Continuation Error	During Stop	During Stop Error	
Program Execution	Executes the program	Does not execute the program		Does	not execute the pro	gram	
Signal Flow Memory	Reflects the operation result of the control system.	Holds.		Renews the old tracked from When	When the setting is "Enable tracking of signal flow memory" Renews the old data into the signal memory flow data tracked from the control system CPU module. When the setting is "No tracking": Holds the current status.		
RUN LED	ON	OFF	1		OFF		
END Processing	Execu	utes it.			Executes it.		
Consistency Check Between Systems A and B	Does not exec	cute the check		Executes the check while the control system is running. Does not execute it when the control system is in STOP status or has developed a stop. Does not execute the check		Does not execute the check	
Tracking	Executes t	he function		Executes the function		Does not execute the function.	
Program Change in Ladder Mode During RUN	Executable			Executes the online program change in the control system. Does not execute it in the standby system only.			
Writing files in RUN	Exect	utable	Executes system	Executes the function when control system has been rewritten. Standby system rewrite only is not possible			
Input from Input Module on Main Base Unit	Inpu	uts it	switching				
Output to Output Module on Main Base Unit	Outp	uts it.		Turns OFF output swite Does not execute standby	ching e output (Y) in the	Does not output it	
Output from input module on extension base unit	Inpu	uts it		Does not execute in		ut	
Output from input module on extension base unit	Outp	Outputs it.		Does not execute output			
Automatic Refresh to Network Module on Main Base Unit (CPU module→ network module)	Executes the function			Executes the function Does not execute output it		Does not execute output it	
Automatic Refresh from network Module on Main Base Unit (Network Module→ CPU Module)	Executes the function			Executes the function		1	
Auto refresh to network module on extension base unit (CPU module→ network module)	e on Executes auto refresh			Does not execute auto refresh			
Auto refresh from network module on extension base unit (Network Module→ CPU Module)	Executes auto refresh			Does not execute auto refresh			

In Separate Mode						
	Control System		Standby System			
During Normal RUN and During Resume Error	During Stop	During Stop Error	During Normal RUN and During Resume Error	During Stop	During Stop Error	
Executes the program	Does not execu	ute the program	Executes the program *3	Does not execu	ute the program	
Reflects the operation result of the control system.	Holds.		Reflects the operation result of the standby system.	Holds.		
ON	0	FF	ON	0	FF	
	Executes it			Executes it		
Does not execute the check			Does not execute the check			
Executes the function			Executes the function Does not e function			
Executes the che	eck on the specified (CPU module only.	Executes only on specified CPU module			
Executes only on specified CPU module			Executes only on specified CPU module			
	Input it		Input it			
Outp	out it	Does not output it	Outp	out it	Does not output it	
	Executes input		Does not execute input			
	Executes output		Does not execute output			
Executes the function		Does not perform output it	Executes the function		Does not perform output it	
Executes the function			Executes the function			
Executes auto refresh			Does not execute auto refresh			
E	Executes auto refresi	h	Does	s not execute auto re	fresh	

Table 5.42 Operations After Operation Mode Change (Continue)

	In Backup Mode						
	Control System			Standby System			
ltem	During Normal RUN and During Continuation Error	During Stop	During Stop Error	During Normal RUN and During Continuation Error	During Stop	During Stop Error	
Refresh between CC-Link IE Controller Network CPU Module → Network Module	Executes the function					Executes the function	
Transient Requested from Other Station in CC-Link IE Controller Network	Executes the function		function Executes the function		n		
Refresh between MELSECNET/H PLC to PLC Network CPU Module ← Network Module	Executes the function					Executes the function	
Transient Requested from Other Station in MELSECNET/H PLC to PLC Network	Executes t	he function	Executes system switching		Executes the function	n	
Input from MELSECNET/H Remote I/O network (Input Refresh from Network Module to CPU Module)	Inputs it			Inpu	uts it	Does not input it	
Output to MELSECNET/H Remote I/O net (Output Refresh From CPU Module to Network Module) *1				Does not output it Executes the function			
SB/SW Refresh from Network Module to CPU Module *2	Executes the function					n	
SB/SW Refresh from CPU Module to Network Module *2	Executes the function			Executes t	he function	Does not execute the function	

* 1: When a stop error occurs in both system CPU modules, all output (Y) to the remote I/O station is turned off

Remote I/O station output can be held when a stop error occurs in both system CPU modules. Please refer to the following manuals for information on how to hold remote I/O station output.

Q Corresponding MELSECNET/H Network System Reference Manual (Remote I/O network)

CC-Link System Master / Local Module User's Manual

* 2: Indicates refresh of SB (Link special relay)/SW (Link special register used for) CC-Link IE Controller Network, MELSECNET/H PLC to PLC network, MELSECNET/H Remote I/O network, and CC-Link.

In Separate Mode						
	Control System			Standby System		
During Normal RUN and During Resume Error	During Stop	During Stop Error	During Normal RUN and During Resume Error	During Stop	During Stop Error	
Executes the function		Does not execute the function	Executes refresh from network module to CPU module Does not execute refresh from CPU module to network module		Does not execute the function	
	Executes the function		Executes the function			
Executes the function		Does not execute the function			Does not execute the function	
Executes the function			Executes the function			
Inputs it		Inputs it	Inpu	uts it	Inputs it	
Outputs it Turns OFF output (Y)		Does not output it		Does not output it		
	Executes the function			Executes the function		
Executes the	he function	Does not execute the function	Executes t	he function	Does not execute the function	

* 3: When changing from the backup mode to separate mode, the RUN LED will flash and programs will not be executed.

Set the RUN/STOP switch of the standby system CPU module to RUN \rightarrow STOP \rightarrow RUN, or use GX Developer to change from remote STOP to remote RUN. With this setting, the CPU module starts running and executes programs





5.5 Tracking Function

5.5.1 Tracking Function Overview

(1) Tracking Function

The tracking function maintains the data of the control system and standby systems consistent so that the redundant system can continue to operate with the standby system in case the control system goes down.

As the tracking data settings have been made by the default in the redundant CPU, tracking can be done without changing the tracking settings. *1

Tracking can be done in either backup mode or separate mode. *2

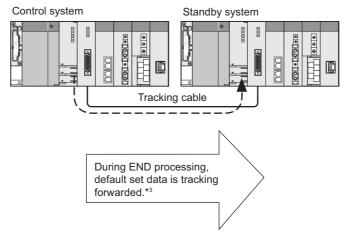


Diagram 5.47 Data Transfer by Tracking Function

- * 1: Following tracking data are set by default:
 - Internal devices
 - SFC data
 - •PID control instruction data

Refer to Section 5.3 for the tracking data setting.

- * 2: Please refer to Section 5.5.3, for data tracking in the backup mode and separate mode.
- * 3: If the data for tracking is changed, data after the change will be tracked.(Section 5.5.3)

REDUNDANT SYSTEM FUNCTIONS



(2) Tracking Data

There are 2 types of tracking data: tracking data based on the range set by the user and tracking data regardless of the settings, i.e., automatic tracking data.

(a) Tracking Data Range Setting by User

The tracking data range and tracking timing can be set by the user.

As the tracking data range has been set by default in the redundant CPU, tracking will be executed even without the user making the tracking settings.

(b) Automatic Tracking Data

The data will be automatically tracked regardless of the tracking settings. The automatic tracking data range cannot be changed by the user.

Refer to Section 5.5.3 for details on the tracking data settings.

(3) Changing Tracking Data Settings

The tracking data range settings can be changed in the following cases:

- To shorten the tracking time
- To add to the tracking data (file register, etc.)
- To change the tracking timing in a program
- To track signal flow memory

Change the tracking data setting at the tracking settings in the redundant parameter settings of GX Developer.

Refer to Section 5.5.4 for details on changing the tracking data settings.

Remark

When changing the tracking data settings at the tracking settings in the redundant parameter settings, the data can be divided into blocks (tracking block). Each block can be set to be tracked or not for each scan with the special relay for

data tracking execution (Data tracking block specification trigger: SM1520 to SM1583).

Refer to Section 5.5.5, for details on tracking blocks and tracking triggers.



(4) Precautions

Tracking transfer cannot be performed in the following cases. Scan time will shorten by the tracking transfer time.

(a) The tracking cable is disconnected or is a failure. (TRK. DISCONNECT (error code: 6130))

Make sure the tracking cable is connected or change the cable.

- (b) If the following malfunctions occur on the standby system:
 - · Standby system power is off
 - · A stop error occurs on the standby system CPU module
 - The standby system CPU module is resetting (Tracking can be performed if reset is cleared.)

When tracking device setting is not made, the program is executed with the values before refresh at first scan after system switching.

Set the following devices as tracking devices.

- Device that makes auto refresh setting to the intelligent function module on the extension base unit with GX Configurator
- Device that makes auto refresh setting to the CC-Link master module on the extension base unit

REDUNDANT SYSTEM FUNCTIONS

5.5.2 Tracking Execution Procedure

The procedure for executing tracking in Diagram 5.48.

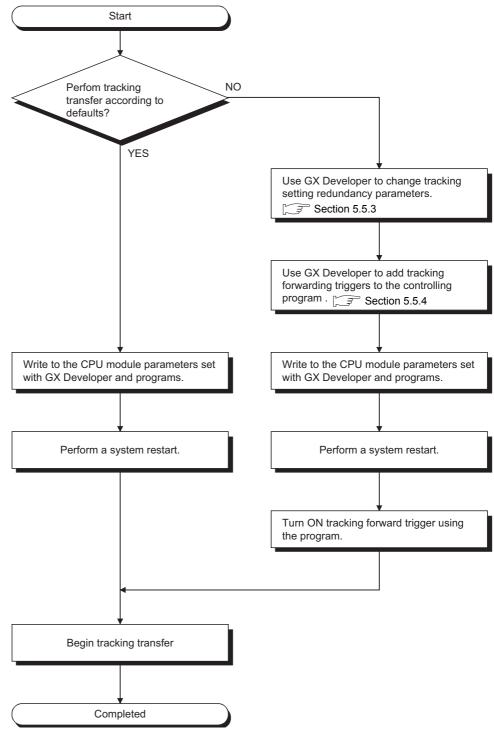


Diagram 5.48 Tracking Execution Procedure



5.5.3 Tracking Data

Tracking data are shown in Table 5.43

Table5.43 Tracking Data Settings

			Auto	Setting	Operating	g Mode *3
	Туре	Description	Tracking *1	Change by User *2	Backup Mode	Separate Mode
	Internal Device Data of input (X), output (Y), internal relay (M) and others used in programs		○ *4	0	0	0
Device	Special Relay	Data turned ON or OFF by user or system	0	×	\cap	0
Data		(Factored by years an auditor				
	Special Register	Data stored by user or system (Fig. 12) Table 5.47)	0	×	0	0
Signal Flow Memory		Data that determines whether the rise and fall instructions will be executed or not in sequence programs	×	0	0	×
SFC data		Data used to execute SFC	0	×	0	×
PID Control Instruction		PID control data specified by PIDINIT and S.PIDINIT instructions	0	×	0	×

- * 1: \bigcirc Auto tracking enabled, \times Auto tracking disabled
- * 2: \bigcirc Setting change enabled, \times Setting change disabled
- * 3: \bigcirc Tracking enabled, \times Tracking disabled
- * 4: The device range set by default will be transferred.

(1) Tracking Data Range Setting by User

The tracking data range and tracking timing can be set by the user.

This applies to the internal devices and signal flow memory.(Set whether the signal flow memory will be tracked or not.)

Up to 100k words of internal devices and signal flow memory can be transferred for each tracking..

(a) Internal devices

Internal devices are data of input (X), output (Y), internal relay (M) and others used in programs.

Table 5.44 shows internal devices that can be tracked.

1) Internal Device Default Setting Range

The default tracking range is set to the internal devices as shown in Table 5.44. When changing the number of the device points to be used in the PLC parameter device setting using GX Developer, the number after change will be the tracking range.

By default, all device points in the tracking range are to be tracked.

REDUNDANT SYSTEM FUNCTIONS



Table 5.44 Internal Devices That Can Be Tracked

Device	Default Tracking Range	Tracking Range Set by User	
Input	X0 to X1FFF	X0 to X1FFF	
Output	Y0 to Y1FFF	Y0 to Y1FFF	
Internal relay *1	M0 to M8191	M0 to M8191	
Latch Relay *1	L0 to L8191	L0 to L8191	
Step Relay	S0 to S8191	S0 to S8191	
Annunciator *1	_	F0 to F2047 *7	
Edge Relay *1	V0 to V2047	V0 to V2047	
Link Relay *1	B0 to B1FFF	B0 to B1FFF	
Link Special Relay	-	SB0 to SB7FF *6	
Timer (Contact Points and Current	T0 to T2047	T0 to T2047	
Value) *1	10 10 12047	10 10 12047	
Retentive Timer (Contact Points and	*2	*2	
Current Value)	_	_	
Counter (Contact Points and Current	C0 to C1023	C0 to C1023	
Value) *1	00 10 0 1020	00 10 0 1020	
Data Register *1	D0 to D12287	D0 to D12287	
Link Register *1	W0 to W1FFF	W0 to W1FFF	
Link Special Register	-	SW0 to SW7FF *6	
Index Register	Z0 to Z15	Z0 to Z15	
Special Relay	*3	*5	
Special Register	*4	*5	
File Register	_	ZR0 to ZR1042431	

-: Indicates data that is set to be not tracked by default.

- * 1: The number of device points to be used can be changed in the PLC parameter device settings using GX Developer.
 - If the number of points to be used is changed, the number after change will be the "default tracking range" or the "tracking range set by user."
- * 2: The number of retentive timer points is 0 by default.

 When setting the number of retentive timer points to be used in the PLC parameter device settings of GX Developer, the set number will be the "default tracking range" or the "tracking range set by user."
- * 3: For the special relays, the data in the range shown in Table5.46 will be automatically tracked:
- * 4: For the special registers, the data in the range shown in Table5.47 will be automatically tracked:
- * 5: Special relays and special registers used in the redundant system are transferred automatically. The tracking transfer range cannot be set by the user.
- * 6: Do not perform the tracking transfer to the link special relay (SB) and link special register (SW) used in the network module system since they are the data inherent to stations.
- * 7: Refer to Section 7.3 for the processing to be performed when the annunciator is tracked.



Please use the following settings when changing the internal device settings:

- Bit devices (including timer, retentive timer, counter)
 Multiples of 16 of the beginning device number
 Transfer range is set in 16 point units
- Word device
 Set in 1 point units



2) Changing the Internal Device Settings

Internal device settings are changed in the following cases:

Table 5.45 Internal Device Settings Change

Objective	Tracking Setting			
To shorten tracking time	 Change the settings so that only the devices actually used will be tracked. Divide the tracking data range into multiple blocks and change the tracking timing for each block. 			
To add file register or	Set the file register or annunciator to tracking blocks			
annunciator	No. 1 to 64.			
Program tracking timing to any time.	 Change the settings so that the tracking trigger of tracking block No. 1 will be turned on and off manually. Divide the tracking data range into into multiple blocks and turn the tracking trigger of each block on and off in the program. 			

(b) Signal Flow Memory

Signal flow memory records the operation execution result of each sequence program step, i.e., whether each sequence program step was executed or not. The signal flow memory information determines whether the rise, fall and SCJ instructions will be executed or not.

1) Default Tracking Settings

By default, signal flow memory is set to be not tracked.

2) Changing the Tracking Setting

When signal flow memory has not been tracked, the rise, fall and SCJ instructions may not function normally in the new control system after system switching.

In order to ensure these instructions function even if system switching occurs, change the settings so that signal flow memory will be tracked.

This setting reduces the number of internal device points that can be tracked at a time by 16k words.

⊠POINT

- 1. Precautions when disabling signal flow memory from being tracked
 - Rise instruction (PLS, ☐P, SP.☐)
 Even if the execution condition is changed from off to on during system switching, the rise instruction will not be executed after system switching.
 - Fall instruction (LDF, ANDF, ORF, MEF, PLF)
 If the execution condition is off during system switching, the fall instruction will be executed after system switching.
 - SCJ instruction
 If the execution condition is on during system switching, the SCJ instruction will jump to the specified pointer without waiting 1 scan.
- Signal flow memory tracking capacitySignal flow memory as much as program capacity will be tracked.



(2) Automatic Tracking Data

REDUNDANT SYSTEM FUNCTIONS

Automatic tracking data is the data that the redundant CPU tracks regardless of the redundant parameter tracking settings.

The data settings cannot be changed by changing the redundant parameter tracking settings .

This applies to the SFC data, PID control instruction data. some special relays and special registers.

(a) SFC data

SFC data is necessary for continuing the SFC program.

SFC data is tracked when using the SFC program in the backup Mode.

(b) PID control instruction data

PID control instruction data to be automatically tracked is the data that is specified for PID control by the PIDINIT and S.PIDINIT instructions.

The PID control data is tracked when executing the PIDINIT and S.PIDINIT instructions in the backup mode.

(c) Special Relays

Table 5.46 shows the automatically transferred special relays. Special relays are only transferred in Backup Mode.

Table 5.46 Automatically Transferred Special Relays

Number	Name	Number	Name
SM90 to SM99	Startup watchdog timer for step transition (Emabled only when SFC program exists)	SM701	Number of output characters selection
SM202	LED OFF command	SM702	Search method
SM206	PAUSE enable coil	SM703	Sort order
SM210	Clock data set request	SM710	CHK instruction priority ranking flag
SM213	Clock data read request	SM715	El flag
SM250	Max. loaded I/O read	SM722	BIN/DBIN instruction error disenabling flag
SM254	All stations refresh command	SM774	PID bumpless processing (for complate derivative)
SM255 to SM257	MELSECNET/H module 1 information	SM775	Selection of link refresh processing during COM instruction execution
SM260 to SM262	MELSECNET/H module 2 information	SM776	Enable/disable local device at CALL
SM265 to SM267	MELSECNET/H module 3 information	SM777	Enable/disable local device in interrupt program
SM270 to SM272	MELSECNET/H module 4 information	SM794	PID bumpless processing (for incomplate derlvative)
SM321	Startup/stop SFC program	SM1500 SM1501	Hold mode (S.IN, S.OUT instruction)
SM322	SFC program start status	SM1520 to SM1583	Data tracking block specefication trigger
SM323	Resence/absence of Continuous transition for entire blocks	SM1591	Standby system error detection disable flag at system switching
SM325	Output mode at block stop	SM1592	Enable/disable user system switching
SM326	SFC device clear mode	SM1598	Copy contents of standard ROM during memory copy
SM327	Output during end step execution	SM1649	Standby system cancel error flag
SM402	After RUN, ON for 1 scan only	SM1709	Disable prohibition of system switching during online program change
SM403	After RUN, OFF for 1 scan only	SM1710	Transfer tracking data during online program
SM551	Reads module service interval		change enable flag



(d) Special registers

Table 5.47 shows the automatically transferred special registers. Special registers are only transferred in Backup Mode.

Table5.47 Automatically Transferred Special Registers

Number	Name				
SD90 to SD99	tep transition watchdog timer setting value (Enabled only when SFC program exists)				
SD207 to SD209	LED display priority ranking				
SD210 to SD213	Clock data				
SD250	Loaded maximum I/O				
SD315	Time reserved for communication processing				
SD414	2n second clock setting				
SD415	2n ms clock setting				
SD550	Service interval measurement module				
SD774 to SD775	PID limit setting (for complete derivative)				
SD778	Refresh processing selection with the COM instruction is executed				
SD794 to SD795	PID limit setting (for incomplete derivative)				
SD1500 to SD1501	Basic period				
SD1649	Error number reset on standby system CPU				
SD1710	Waiting time for online program change (standby system)				

5.5.4 Tracking Data Settings

Make the tracking data settings at Tracking settings in Redundant parameter in GX Developer.

If no tracking settings are made by the user, Tracking device settings will be set to "Internal device block setting" (default) and tracking will be executed based on "Default Tracking Range" in Table 5.44 in Section 5.5.3 (1).

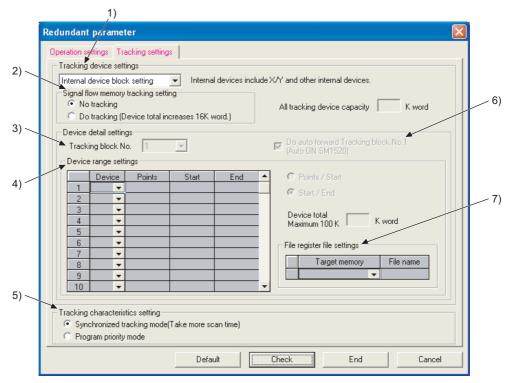


Diagram 5.49 Tracking Setting Screen

Table 5.48 Tracking Setting Items and Ranges

	Item		Range	Default	Reference
1	Tracking device setting		Internal device block setting Device detail settings	Internal device block setting	Section 5.5.3
2	Signal flow memory tracking	ng setting	No tracking Enable tracking of signal flow memory	No tracking	Section 5.5.3
3	Tracking block No.		• 1 to 64	1	Section 5.5.5
4	Device Points / Start Start / End		Table5.44 Tracking Range Set by User	Table5.44 Default Tracking Range	Section 5.5.3
5	Tracking characteristics setting		Synchronized tracking mode Program priority mode	Synchronized tracking mode	Section 5.5.7
6	Do auto forward Tracking b	olock No. 1	Do auto forward Tracking block No. 1 Do not auto forward Tracking block No. 1	Do auto forward Tracking block No. 1	Section 5.5.5
	Target memory		Memory card (SRAM) Standard RAM	-	_
7	File register file settings *2	File name	Sets tracking file register file name • Up to 8 half-width characters • Cannot include the following characters: \(\ / : ; * ? < > += [] . ,	-	-



- * 1: The following is the setting range in the detailed device settings:
 - •1 to 2048 devices can be set for one block

The total of the number of devices for all blocks is 2048 (maximum).

- •The device range settings for the timer, retentive timer and counter device will be doubled.
- •Tracking device capacity per block is up to 100k words, including single flow memory tracking capacity (16k words).
- •Tracking device points per range are:

Bit device: 0 to 32767 (set in 16 point units)

Timer, retentive timer and counter: 0 to 32767 (set in 16 point units)

Word device: 0 to 32767 (set in 1 point units)

- * 2: The file register file can be set in each tracking block.
- * 3: 16 device points of timer, retentive timer and counter is equivalent to 18 words.

⊠POINT

- 1. The same device No. cannot be set in 2 ranges for 1 tracking block. If the same device No. is set in 2 ranges in the tracking settings of GX Developer, an error will occur in GX Developer.
- 2. As 100k words can be set in one block and up to 64 blocks can be set, up to 6,400k words can be set as a total at the tracking settings in the redundant parameter settings of GX Developer.

However, up to 100k words can be tracked for each scan.

When setting tracking data to multiple tracking blocks, make sure that tracking capacity is within 100k words for each scan.

MELSEG Q series

REDUNDANT SYSTEM FUNCTIONS

(1) Tracking Blocks

(a) Tracking Block Overview


The internal device tracking range can be divided into multiple blocks, i.e., tracking blocks (tracking block No. 1 to 64) at the tracking settings in the redundant parameter settings of GX Developer.

(b) Tracking the Tracking Blocks

Set whether the tracking block will be tracked or not with the data tracking block specification trigger (SM1520 to SM1583) that corresponds to the target tracking block.

When the data tracking block specification trigger is turned ON, the device data set to the corresponding tracking block No. will be tracked.

[Program Example]



[Operation]

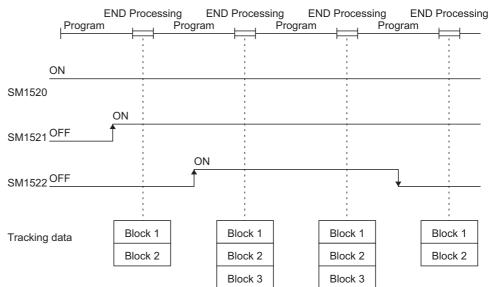


Diagram 5.50 Tracking Operation Timing by Tracking Trigger



(c) Default Tracking Block Setting

When the tracking settings are not made (default settings), devices will be set to tracking block No.1, based on the Default Tracking Range in Table 5.44.

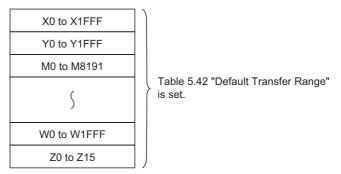


Diagram 5.51 Tracking device default settings (internal device block setting)

(d) Caution When Dividing Into Multiple Blocks

- 1) When tracking multiple blocks at a time, make sure that the tracking capacity is within 100k words.
 - If the tracking capacity exceeds 100k words, the continuation error "TRK. SIZE ERROR (error code: 6110) will occur and tracking cannot be performed.
- 2) When multiple blocks are set for tracking, they will be tracked in the setting order starting from the one of lowest No.

REDUNDANT SYSTEM FUNCTIONS



(2) Tracking Trigger

(a) Tracking Trigger Overview

A tracking block trigger is a special relay that determines whether to track the multiple blocks of internal device data.

Tracking block triggers are assigned to each tracking block. (FF Table5.49.) When executing tracking, turn on the tracking trigger that corresponds to each tracking No. to execute tracking in the program.

(b) Setting Tracking Trigger for Tracking Block No. 1

It is possible to make the settings at the tracking settings in the redundant parameter settings, so that the data tracking trigger (SM1520) for tracking block No. 1 will turn on automatically when power is turned on.

(By default, the tracking trigger for tracking block No. 1 turns on automatically and automatically tracks the device data in tracking block No. 1.)

Table5.49 Tracking Triggers

Number	Name	Description	Default	Set By User or System
SM1520	Tracking Block No. 1 Tracking Trigger	OFF: Disable Tracking ON: Enable Tracking	When setting batch of internal devices at the tracking: Turns on at the time of power ON/ reset/STOP to RUN. When the detailed device settings are made at the tracking settings: • The trigger turns on at the time of power ON/ reset/STOP to RUN, if tracking block No. 1 is set to be tracked in the automatic tracking parameter. • Turn off if tracking block No. 1 is set to not to be tracked in the automatic tracking parameter.	System / User
SM1521 SM1522 SM1523 SM1524 SM1525 SM1526 SM1527 SM1528 SM1529 SM1530 SM1531 SM1532 SM1533 SM1534 SM1535 SM1535 SM1536 SM1537 SM1538 SM1539 SM1540	Tracking Block No. 2 Tracking Trigger Tracking Block No. 3 Tracking Trigger Tracking Block No. 4 Tracking Trigger Tracking Block No. 5 Tracking Trigger Tracking Block No. 6 Tracking Trigger Tracking Block No. 7 Tracking Trigger Tracking Block No. 8 Tracking Trigger Tracking Block No. 9 Tracking Trigger Tracking Block No. 10 Tracking Trigger Tracking Block No. 11 Tracking Trigger Tracking Block No. 12 Tracking Trigger Tracking Block No. 13 Tracking Trigger Tracking Block No. 14 Tracking Trigger Tracking Block No. 15 Tracking Trigger Tracking Block No. 16 Tracking Trigger Tracking Block No. 16 Tracking Trigger Tracking Block No. 17 Tracking Trigger Tracking Block No. 18 Tracking Trigger Tracking Block No. 19 Tracking Trigger Tracking Block No. 19 Tracking Trigger Tracking Block No. 20 Tracking Trigger Tracking Block No. 21 Tracking Trigger	OFF: Disable Tracking ON: Enable Tracking	OFF	User



Table5.49 Tracking Triggers (Continued)

	Tables.43 Tracking Triggers (Continued)							
Number	Name	Description	Default	Set By User or System				
SM1541	Tracking Block No. 22 Tracking Trigger							
SM1542	Tracking Block No. 23 Tracking Trigger							
SM1543	Tracking Block No. 24 Tracking Trigger	1						
SM1544	Tracking Block No. 25 Tracking Trigger							
SM1545	Tracking Block No. 26 Tracking Trigger							
SM1546	Tracking Block No. 27 Tracking Trigger							
SM1547	Tracking Block No. 28 Tracking Trigger							
SM1548	Tracking Block No. 29 Tracking Trigger							
SM1549	Tracking Block No. 30 Tracking Trigger							
SM1550	Tracking Block No. 31 Tracking Trigger							
SM1551	Tracking Block No. 32 Tracking Trigger							
SM1552	Tracking Block No. 33 Tracking Trigger							
SM1553	Tracking Block No. 34 Tracking Trigger							
SM1554	Tracking Block No. 35 Tracking Trigger							
SM1555	Tracking Block No. 36 Tracking Trigger							
SM1556	Tracking Block No. 37 Tracking Trigger							
SM1557	Tracking Block No. 38 Tracking Trigger							
SM1558	Tracking Block No. 39 Tracking Trigger							
SM1559	Tracking Block No. 40 Tracking Trigger							
SM1560	Tracking Block No. 41 Tracking Trigger	OFF: Disable						
SM1561	Tracking Block No. 42 Tracking Trigger	Tracking						
SM1562	Tracking Block No. 43 Tracking Trigger	ON: Enable	OFF	User				
SM1563	Tracking Block No. 44 Tracking Trigger	Tracking						
SM1564	Tracking Block No. 45 Tracking Trigger							
SM1565	Tracking Block No. 46 Tracking Trigger							
SM1566	Tracking Block No. 47 Tracking Trigger							
SM1567	Tracking Block No. 48 Tracking Trigger							
SM1568	Tracking Block No. 49 Tracking Trigger							
SM1569	Tracking Block No. 50 Tracking Trigger							
SM1570	Tracking Block No. 51 Tracking Trigger							
SM1571	Tracking Block No. 52 Tracking Trigger							
SM1572	Tracking Block No. 53 Tracking Trigger							
SM1573	Tracking Block No. 54 Tracking Trigger							
SM1574	Tracking Block No. 55 Tracking Trigger							
SM1575	Tracking Block No. 56 Tracking Trigger							
SM1576	Tracking Block No. 57 Tracking Trigger							
SM1577 SM1578	Tracking Block No. 58 Tracking Trigger Tracking Block No. 59 Tracking Trigger	-						
SM1578 SM1579	Tracking Block No. 59 Tracking Trigger Tracking Block No. 60 Tracking Trigger	-						
SM1579 SM1580	Tracking Block No. 60 Tracking Trigger Tracking Block No. 61 Tracking Trigger	-						
SM1580 SM1581	Tracking Block No. 61 Tracking Trigger Tracking Block No. 62 Tracking Trigger	-						
SM1581	Tracking Block No. 62 Tracking Trigger Tracking Block No. 63 Tracking Trigger	-						
	Tracking Block No. 64 Tracking Trigger	-						
SM1583	Tracking block No. 64 Tracking Higger							

REDUNDANT SYSTEM FUNCTIONS



5.5.6 Tracking Execution

When a tracking trigger is turned on, device data of the tracking block No. that corresponds to the tracking trigger will be tracked.

Tracking target data is different depending on the operation mode and the operating statuses of both systems.

(1) In Backup Mode

The Tracking target data in the backup mode is shown in the Table 5.50 according to the operating statuses of both systems.

Table 5.50 Tracking Target Data According to Operating Statuses of Both Systems

Operating Status		Tracking Data					
	Standby System	Device Data *1					
Control System		Internal Device	Special Relay and Special Register	Signal Flow	SFC Data	PID Control Instruction Data	
	RUN	0	0	0	0	0	
RUN	STOP PAUSE	0	0	0	0	0	
	Stop Error	×	×	×	×	×	
	RUN	0	0	0	0	0	
STOP PAUSE	STOP PAUSE	0	0	0	0	0	
	Stop Error	×	×	×	×	×	

 \bigcirc :Tracked , \times :Not tracked

* 1: Device data

- •Indicates the internal devices set at the tracking settings in the redundant parameter settings. (Section 5.5.3)
- •Indicates the special relays and special registers that will be automatically tracked.

(Section 5.5.3)



(2) In Separate Mode

The tracking data by system operating status in the separate mode is displayed in Table 5.51.

Table5.51 Tracking Data By System Operating Status

Operating Status		Tracking Data				
		Device Data ^{*1}				
Control System	Standby System	Internal Device	Special Relay and Special Register	Signal Flow	SFC Data	PID Control Instruction Data
	RUN	0	×	×	×	×
RUN	STOP PAUSE	0	×	×	×	×
	Stop Error	×	×	×	×	×
	RUN	0	×	×	×	×
STOP PAUSE	STOP PAUSE	0	×	×	×	×
	Stop Error	×	×	×	×	×
Stop Error	RUN	×	×	×	×	×
	STOP PAUSE	×	×	×	×	×
	Stop Error	×	×	×	×	×

 $\bigcirc :\! \mathsf{Performs} \ \mathsf{tracking}$, $\ \times :\! \mathsf{Does} \ \mathsf{not} \ \mathsf{perform} \ \mathsf{tracking}$

* 1: Device data:

•Internal device refers to device set in the redundancy parameters tracking setting.

(Section 5.5.3)

•Special relays and special registers refers to the automatically tracked special relay and special register.

(Section 5.5.3)



5.5.7 Tracking Mode

Tracking mode determines processing when a new tracking request occurs before the previous tracking processing is completed.

(If the previous tracking has been completed while the control system CPU module is executing the END processing, the next tracking will be initiated.)

There are 2 types of tracking modes:

REDUNDANT SYSTEM FUNCTIONS

- Synchronous tracking mode
- Asynchronous tracking mode

(1) Tracking Mode For Each Operation Mode and System Operating Status

Tracking mode is determined by the operation mode and system operating status as shown in Table 5.52.

Table 5.52 Tracking Mode by Operation Mode and System Operating Status

Operati	ng Status	Operation Mode				
Control System	Standby System	Backup Mode	Separate Mode	Backup Mode to Separate Mode	Separate Mode to Backup Mode	
	RUN	Synchronous tracking mode *3		Synchronous to asynchronized tracking mode *1	Asynchronous to synchronized tracking mode *2	
RUN	STOP PAUSE Stop Error			Asynchronous to asynchronized tracking mode	Asynchronous to asynchronized tracking mode	
STOP PAUSE	RUN STOP PAUSE Stop Error	Asynchronous tracking mode	Asynchronous tracking mode			
Stop Error	RUN STOP PAUSE Stop Error	-		-	-	

- * 1: Tracking mode will change to asynchronous mode when the backup mode is changed to separate mode
- * 2: Tracking mode will change to synchronous mode within maximum 150ms after the separate mode is changed to backup mode.
- * 3: When the special relay "Device memory tracking during RUN write (SM1710)" is turned on to execute tracking during online program change, tracking during online program change is executed in the asynchronous tracking mode. (Section 5.6.2)



(2) Synchronized Tracking Mode

This method performs tracking to the standby system for each scan while the control system CPU module is executing the END processings.

If the previous tracking is not complete during END processing, the system will wait and perform the next tracking after it has been completed.

2 types of synchronized tracking modes are available: synchronized tracking mode and program priority mode.

The default tracking mode is synchronized tracking mode.

Change the tracking mode settings at the tracking settings in the redundant parameter settings.

(a) Synchronized Tracking Mode

In synchronized tracking mode, the control system CPU stands from tracking start to finish, and executes the scan execution type program upon tracking completion.

For this reason, when system switching occurs, the new control system CPU starts operation based on the scan tracking data of up to 1 scan before However, scan time increases by the amount of tracking time.

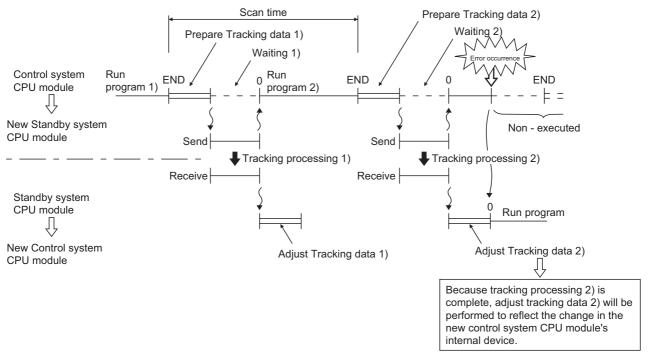


Diagram 5.52 Synchronized Tracking Mode Operation Timing

MELSEG Q corios

(b) Program Priority Mode

In program priority mode, the control system CPU module executes the scan execution type program as soon as tracking starts.

If tracking time is longer than program execution time, the next tracking cannot start until the current tracking is completed.

In this mode, the scan time can be made shorter than in synchronized tracking mode.

However, if system switching occurs, the new control system CPU starts operation based on the tracking data of up to 2 scans before.

1) tracking when program run time ≧ tracking time

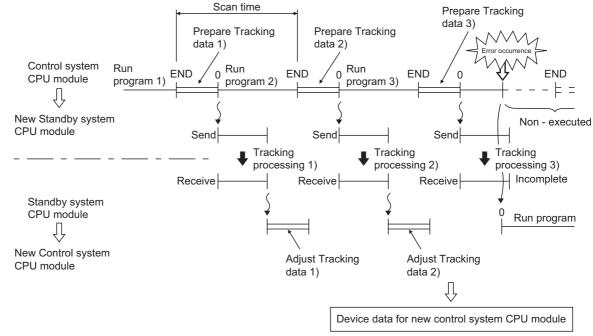


Diagram 5.53 Tracking Operation Timing When Program Execution Time ≥ Tracking Processing Time

2) Tracking when program run time < tracking time

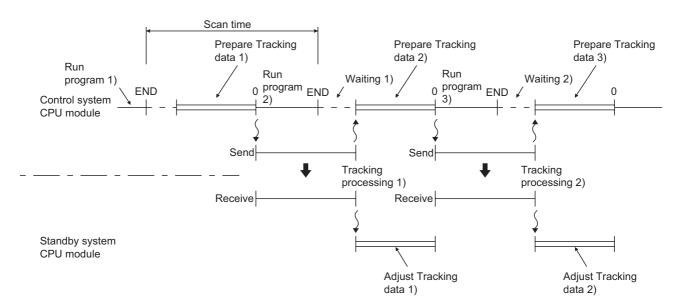


Diagram 5.54 Tracking Operation Timing When Program Execution Time < Tracking Processing Time



(3) Asynchronous Tracking Mode

In this mode, the control system CPU prioritizes program operation over tracking processing.

If the previous tracking is not complete while executing the END processings, the control system CPU module suspends the next tracking and starts the program operation.

(a) Tracking when Control System is in RUN, Standby System is in STOP and System is in Backup Mode

1) tracking when program run time ≧ tracking time

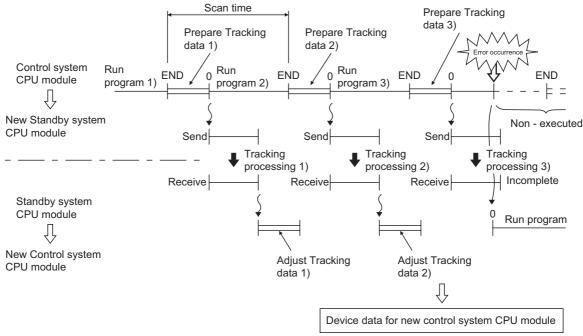


Diagram 5.55 Tracking Operation Timing When Program Execution Time ≥ Tracking Processing Time

2) Tracking when program run time < tracking time

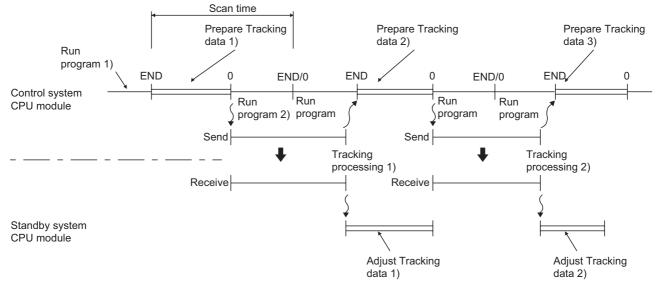


Diagram 5.56 Tracking Operation Timing When Program Execution Time < Tracking Processing Time

REDUNDANT SYSTEM FUNCTIONS

(b) Tracking in Separate Mode

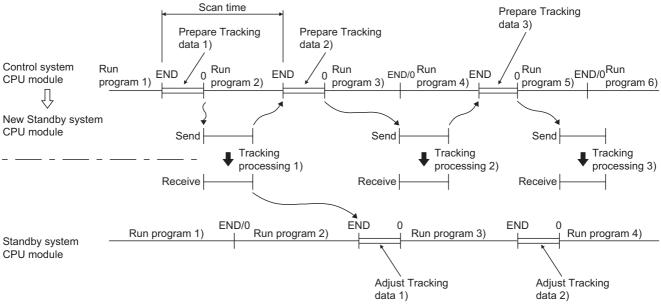


Diagram 5.57 Tracking Operation Timing in Separate Mode



5.5.8 Device Data Used By The New Control System

When the tracking from the control system CPU module is complete, the standby system CPU stores the received tracking data into the specified devices sequentially.

When system switching occurs, the new control system CPU begins operation based on the received tracking data, which varies depending on the reception condition at the time of system switching.

Table 5.53 shows device data used by the new control system CPU module depending on the tracking data reception condition.

Table 5.53 Device Data Used by New Control System CPU Module

		Tracking Data Received			
System Switching Timing	Tracking Data Not Received	Receiving Tracking Data	Reception of Tracking Data		
		Receiving Hacking Data	Completed *1		
Device in which Initial Value is	CPU Module Device Data	CPU Module Device Data	Received Tracking Data		
not set	Ci o Module Device Data	Ci o Module Device Data			
Device in which Initial Device	Preset Initial Device Data	CPU Module Device Data	Received Tracking Data		
Value is set	Treset fillial Device Data	Of a Module Device Data	Treecived Tracking Data		

^{* 1:} If received tracking data is not stored in the specified device, the CPU module will begin operation after storing tracking data in the specified device.

[Tracking in Program Synchronized Mode]

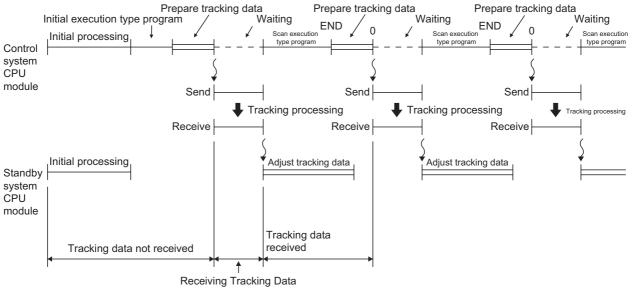


Diagram 5.58 Tracking Operation Timing in Program Synchronized Mode

5.6 Online Program Change for Redundancy

In the backup mode, GX Developer writes the same program to the control system and standby system CPU modules to keep them consistent.

Write to the control system and standby system is executed in the following conditions:

- \bullet Writing to the CPU module that is in STOP status ([] Section 5.6.1)
- Writing to the CPU module that is running (Section 5.6.2)

5.6.1 Writing to the CPU Module in STOP Status

(1) Operation When Writing to CPU Module in STOP status

When writing the parameters and programs either system CPU module, GX Developer will write the same parameters and programs to the other system as well.

(2) Procedure for Writing to the Control System and Standby System

GX Developer writes to the control system first and then the standby system, regardless of connection route, i.e., the system to which GX Developer is connected. The following diagram shows the writing operation on the assumption that GX Developer is connected to the standby system. (Write of program B to the control system and standby system is executed in the order (1) and (2).)

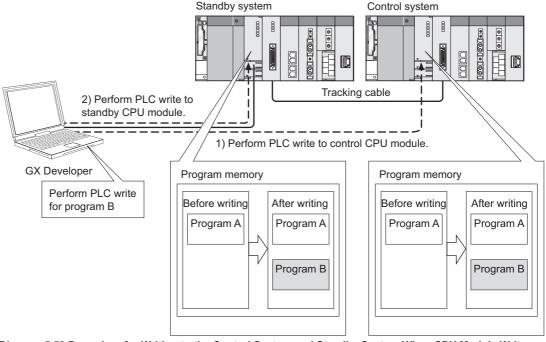


Diagram 5.59 Procedure for Writing to the Control System and Standby System When CPU Module Writes Program during STOP



(3) Precautions

(a) If programs cannot be written to the standby system CPU module

In the following cases, the data will be written into only the CPU module to which GX Developer is connected:

- · Either or both powers on control system/standby system are OFF
- Either or both CPU modules on control system/standby system are in RESET
- · Either or both systems have a hardware failure
- Either or both CPU modules on control system/standby system have "Watchdog timer error (error code: 5000 or 5001)"
- · Tracking cable disconnection or malfunction

In these cases, the error dialog box in Diagram 5.60 will appear on GX Developer.




Diagram 5.60 Error Dialog Box Displayed on GX Developer

(b) Operations prohibited during online program change

Do not perform the following operations in either control system or standby system during online program change:

- System power OFF
- · CPU module reset
- Tracking cable connection or disconnection

If any of the above operations is performed, "Consistency check between system A and B" may cause the "FILE DIFF. (error code: 6000) stop error in the standby system CPU module.

In addition, the error dialog box in Diagram 5.61 will also appear on the GX Developer that performed the PC write.




Diagram 5.61 Error Dialog Box Displayed on GX Developer

If the error dialog box Diagram 5.61 appears on GX Developer, remove the condition indicated by the error dialog box and redo the PLC write.

(c) Writing a program via module mounted to extension base unit

Writing a program via a module mounted to the extension base unit is disabled. For details, refer to the following manuals.

GX Developer Version 8 Operating Manual

PX Developer Version 1 Operating Manual (Programming Tool)

MELSEG Q series

(d) Access to files being written

REDUNDANT SYSTEM FUNCTIONS

The files being written by GX Developer cannot be accessed by other GX Developer.

If you access the files being written, the error dialog box in Diagram 5.62 will appear:



Diagram 5.62 Error Dialog Box Displayed on GX Developer

Access the files again after the writing operation has been completed.

(e) Data cannot be written to files being accessed by other GX Developers
If data is written to the files being accessed by other GX Developers, the error
dialog box in Diagram 5.63 will appear.



Diagram 5.63 Error Dialog Box Displayed on GX Developer

Redo the PLC write after completion of the processing performed during access by other GX Developers.

(f) Write Processing in Separate Mode

In the separate mode, GX Developer writes to the CPU module of the system that is specified in the connection target settings.

GX Developer will not write to the CPU module of the system that is not specified in the connection target settings



(g) Writing of CC-Link parameter setting

If writing to the programmable controller with setting 5 or more at "No. of boards in module" in CC-Link network parameter while the following conditions are met, the error dialog box in Diagram 5.63 appears.

- The first five digits of serial number for the Redundant CPUs is "09101" or lower.
- GX Developer version is 8.58L or later.



Diagram 5.64 Error dialog box appearing on GX Developer

Clicking the OK button displays the following error dialog box. Replace the Redundant CPU by the one whose first five digits of serial number is "09102" or higher.



Diagram 5.65 First five digits of serial number for the Redundant CPU on system A is "09101" or lower.



Diagram 5.66 First five digits of serial number for the Redundant CPU on system A is "09102" or higher and that for the Redundant CPU on system B is "09101" or lower.

REDUNDANT SYSTEM 51-UNCTIONS

REDUNDANT SYSTEM NETWORKS

PROGRAMMING CAUTIONS

TROUBLESHOOTING

5.6.2 Program Change While CPU is Running

Data are written to both systems while CPU is running, in the following cases:

- Online program change
- · Writing files in RUN
- T/C set value change

Refer to the following manual for details on the above operations.

CPU User's Manual (Function Explanation, Program Fundamentals)

(1) Operations When Changing Programs While CPU is running

When changing the program of the control system CPU module during RUN in the backup mode, the same program will be written to the standby system CPU module. Even if a stop error occurs in the control system during the online program change and system switching occurs, the online program change to both systems will continue.

(2) Procedure for Writing to the Control System and Standby System

When performing the online program change to the control system CPU module by GX Developer, regardless of the connection route.

When the online program change is performed to the control system CPU module, data will be written to the control system and standby system CPU modules. Diagram 5.65 shows the operation in the case of program change in ladder mode during PLIN

(The program change in ladder mode during RUN is executed in the order (1) and (2).)

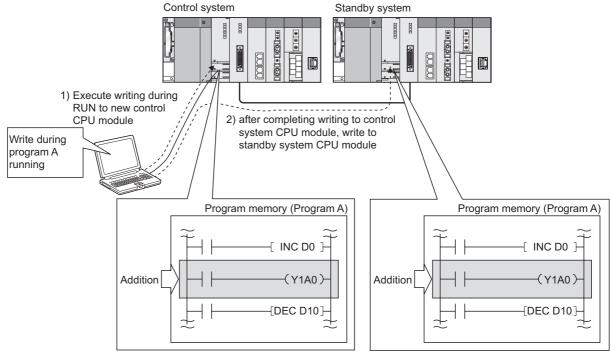


Diagram 5.65 Procedure for Writing to Control System and Standby System When Program Is Changed during CPU RUN



(3) Tracking Execution During Online Program Change

Use the special relay "SM1710" (Transfer tracking data during online program change enable flag) to enable or disable the tracking execution of the following control data during online program change.

- Internal device (Table5.44)
- Special relay (Table 5.46)
- Special register (Table5.47)
- SFC data (Section 5.5.3 (2))
- PID control instruction data (Section 5.5.3 (2))

Make sure to set SM1710 to on or off (whether or not to execute tracking) before executing online program change.

If the special relay is turned on during online program change, tracking will not be executed.

When SM1710 is off, tracking will be suspended until online program change is complete.

If a system switching occurs during online program change, the new control system CPU module may output old data.

For example, if output (Y) is turned on in the control system during online program change, the output (Y) on information will not be tracked to the standby system CPU module since tracking has not been performed.

If system switching occurs under these conditions, output will turn on and off at the time of the system switching.

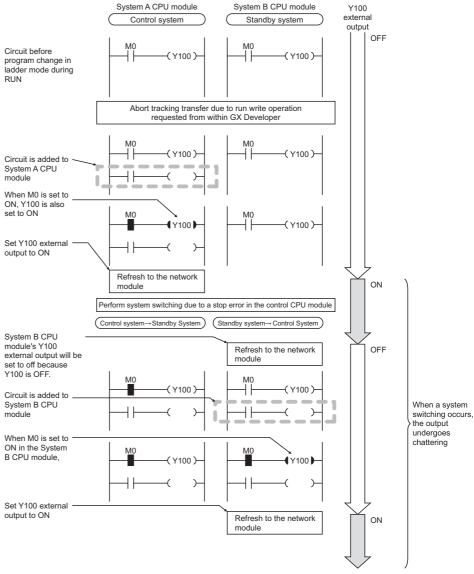


Diagram 5.66 Operation When System Switching Occurs during Online Program Change



(b) When SM1710 is ON

When SM1710 is on, if a system switching occurs, old data will not be output because tracking is performed also during online program change. (Refer to Section 5.5.4 for tracking data settings.)

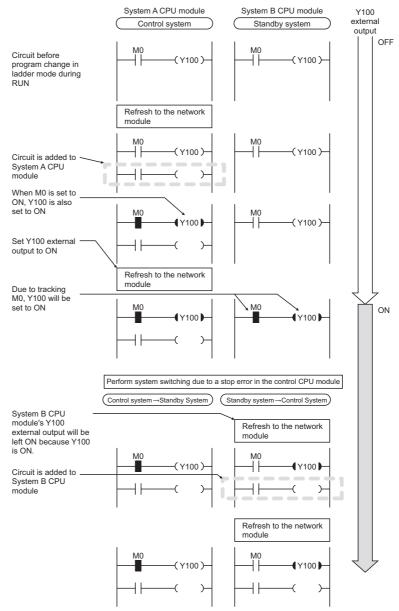


Diagram 5.67 Operation When System Switching Occurs during Online Program Change

However, even if the program of the new control system CPU module has not been changed due to the system switching timing, the data calculated in the previous control system after system switching may be tracked.

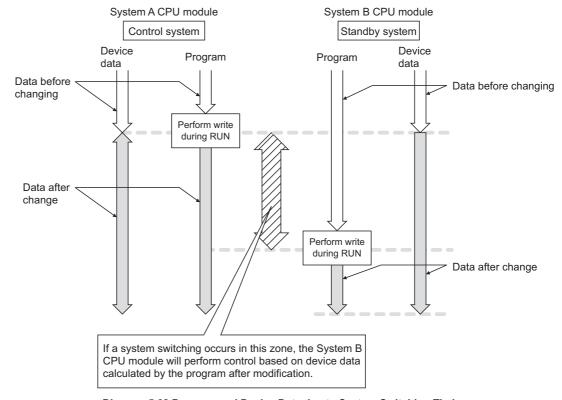


Diagram 5.68 Program and Device Data due to System Switching Timing



(4) System Switching During Online Program Change

Table 5.54 shows the operation when the reason for system switching occurs during online program change.

Table 5.54 System Switching During RUN Write Redundancy Compliance Execution

Туре	System Switching Condition	System Switching Execution During RUN Write
	Stop error	0
Automatia System	System switching request by network module	× *1
Automatic System Switching	System power OFF	0
Owitching	CPU module reset	0
	CPU module hardware malfunction	0
Manual System	System switching instruction	× *1
Switching	System switching request from GX Developer	× *2

 \bigcirc Yes, \times No

- * 1: The "CAN'T SWITCH (error code: 6220)" continuation error occurs in control system CPU module that executed the system switching instruction.
 - "System switching has failed due to online program change" is set in the detailed information special relay.
- * 2: The error dialog box in Diagram 5.69 will appear on the GX Developer which requested the system switching:



Diagram 5.69 Error Dialog Box Displayed on GX Developer

(5) Waiting Time Check for Online Program Change to Standby System

The waiting time check for online program change to the standby system abnormally completes the online program change and enables the online program change again when a communication error occurs between GX Developer and the control system/ standby system CPU module.

When the time from when the online program change to the control system is completed until the online program change to the standby system starts falls outside the SD1710 setting range, this function judges it as a communication error and abnormally completes the online program change.

SD1710 defaults to 90 seconds and can be set within the range 90 to 3600 seconds.



(6) Special Relays And Special Registers For Online Program Change

(a) Special Relays For Online Program change

Special relays for online program change are shownin Table5.55

Table 5.55 Special Relays For Online Program change

Number	Name	Explanation
		(1) Turning this relay from OFF to ON enables manual system switching during online program change redundant tracking. After the manual system switching disable status is canceled, the system automatically turns off SM1709.
	Manual system switching disable/	(2) System switching due to any of the following conditions is executed even during
SM1709	enable setting during online program change redundant	online program change redundant tracking, regardless of the status of this relay. • Power off, reset, hardware failure, CPU stop error
	tracking	(3) In either of the following statuses, the system switching disable status can also be canceled by this relay.
		Multiple-block online program change redundant tracking execution status
		File batch online program change redundant tracking execution status
		Online file writing redundant tracking execution status
		(1) Set whether the tracking of the following data will be executed or not during online
		program change redundant tracking.
	Transfer tracking data during online program change enable flag	Device memory (Including SM/SD that will automatically execute tracking)
		PID control command information, SFC information
SM1710		, ,
		multiple-block online program change or online file writing redundant tracking execution status.
		(3) This SM is also transferred form control system CPU module to standby system
		CPU module by tracking data.

(b) Special Registers For Online Program Change

Special registers for online program change are shownin Table5.56

Table 5.56 Special Registers For Online Program Change

Tables.56 Special Registers For Online Program Change			
Number	Name	Explanation	
Number SD1710	Name Waiting time for online program change (standby system)	 Set in seconds the waiting time of the standby system CPU module from when online program change to the control system CPU module is completed by the online program change for redundancy function until the online program change to the standby system CPU module starts. If no online program change request is issued to the standby system CPU module within the preset time after completion of the online program change to the control system CPU module, both system CPU modules judge it as the failure of the online program change for redundancy. In this case, both system CPU modules resume the consistency check between system A & B suspended during the online program change. Also, the control system CPU module is set to accept a 	
	,	new request of online program change for redundancy. (3) When both systems are powered on, 90 seconds are set to SD1710 as the default value.	
		(4) Set the value within the range 90 to 3600 seconds. When the setting is 0 to 89 seconds, it is regarded as 90 seconds for operation. If the setting is outside the allowed range, it is regarded other than 0 to 3600 seconds for operation.	
		(5) The waiting time for a start of online program change to the standby system CPU module is checked with the SD1710 setting during redundant tracking of multiple-block online program change or online file writing.	



(7) Precautions

(a) When program memory space is insufficient for writing files in RUN

To write files to the program memory in RUN, a working memory area (free area) as large as the size of the files is required.

If a sufficient working memory area is not reserved in the program memory, writing files in RUN is not executable.

However, if the necessary space is available in a memory card (SRAM card or ATA card), a batch of files can be written into the card during RUN.

(b) Memory used for writing files in RUN

When writing files in RUN, the same kind of memory is used for the control and standby system CPU modules.

If different memories are reserved for them, writing files in RUN is not executed.

Table5.57 Memories for Control System and Standby System CPU Modules and Executability of Writing Files in RUN

Memory available for control	Memory available for standby system			
system	Program memory	Memory card		
Program memory	\circ	×		
Memory card	X	0		

When writing files in RUN fails the error dialog box in Diagram 5.70 appears.




Diagram 5.70 Error Dialog Box Displayed on GX Developer

(c) Operations disabled during online program change

Do not perform the following operation during online program change:

- · System power OFF
- CPU module reset
- Tracking cable connection or disconnection

Executing any of the above operations may corrupt the contents of program memory.

(d) Processing when the target programs are different between the control system and standby system CPU modules

If the target programs are different between the control system and standby system CPU modules, it will be written to the control system CPU module only. If this happens, the error dialog box in Diagram 5.71 will appear on GX Developer:



Diagram 5.71 Error Dialog Box Displayed on GX Developer

(e) Access to programs being changed online

The programs being changed online cannot be accessed by GX Developer. If programs in RUN write by GX Developer are accessed, the error dialog box in Diagram 5.72 will appear on GX Developer:



Diagram 5.72 Error Dialog Box Displayed on GX Developer
Access the programs again after the online program change is complete.

(f) When online program change cannot be executed to either control system or standby system

In the following cases, online program change cannot be executed to either control system or standby system:

1) Online program change when a fault has occurred in the standby system

The error dialog box illustrated below will appear if online program change is
executed during the following:

- · Standby system power is OFF
- · Standby system CPU is resetting
- · WDT error occurring on the standby system CPU
- Tracking cable not connected or malfunctioning



Diagram 5.73 Error Dialog Box Displayed on GX Developer

2) Changing programs being accessed by the other GX Developer online The error dialog box Diagram 5.74 will appear if online program change is executed to programs being accessed by the other GX Developer:



Diagram 5.74 Error Dialog Box Displayed on GX Developer



3) Changing programs being accessed by the other GX Developer online

The error dialog box in Diagram 5.75 will appear if online program change is executed to the CPU module during system switching or operation mode change:



Diagram 5.75 Error Dialog Box Displayed on GX Developer

4) Online program change to CPU module during system switching or operation mode change

The error dialog box in Diagram 5.76 will appear if online program change is executed during memory copy from the control system to the standby system:




Diagram 5.76 Error Dialog Box Displayed on GX Developer

(g) Online program change in Separate Mode

In the separate mode, online program change is executed only to the system that specified in the target connection settings.

Online program change is not executed to the CPU module of the system that is not specified in the target connection settings.

(h) Extension of scan time due to online program change

If online program change is executed, the control system CPU module scan time will extended.

Refer to the following manual for information on control system CPU module scan time extension:

GPU User's Manual (Function Explanation, Program Fundamentals)

(i) Signal Flow Processing

The signal flow in the changed steps or program turns on.

Therefore, if a running program is changed online, the rise, fall and SCJ instructions will do the following:

1) Rise instruction (PLS instruction, ☐ P instruction, SP.☐ instruction)

Even if the execution condition changes from off to on when online program change is complete, the rise instruction will not be executed.

It will be executed when the execution condition is turned off and on again.

2) Fall instruction (LDF, ANDF, ORF, MEF, PLF)

If the execution condition is off when online program change is complete, the fall instruction will be executed again.

3) SCJ instruction

If the execution condition is on when online program change is complete, a jump to the specified pointer will be executed without waiting 1 scan.

(j) Consistency check between both systems during online program change

1) File Consistency Check

REDUNDANT SYSTEM FUNCTIONS

The file consistency check cannot be performed during online program change.

Therefore, during online program change, an error will not occur even if the programs of the control system and standby system CPU modules are temporarily different.

However, if one of the followings occurs during online program change, an error may occur during the file consistency check even when online program change is executed normally.

- Either control system or standby system CPU module is changed from STOP (PAUSE) to RUN
- Either control system or standby system CPU module is reset, then unreset (RESET/L.CLR switch is set to the neutral position)
- Either control system or standby system is powered OFF and then ON
- The tracking cable is disconnected and then connected

2) Operating Status Consistency Check

The operation status consistency check cannot be performed during online program change.

3) Main base unit configuration

The main base unit configuration check cannot be performed during online program change.

However, if one of the following conditions occurs during online program change, it will be performed.

- Standby system CPU module is reset and then unreset (RESET/L.CLR switch is set to the neutral position)
- Standby system is powered OFF and ON
- · Tracking cable is disconnected and connected

4) Parameter valid drive settings consistency check

The parameter valid drive settings consistency check cannot be performed during online program change.

However, if one of the following conditions occurs during online program change, it will be performed.

- Standby system CPU module resets and clears reset
- Standby system power is turned OFF and ON
- · Tracking cable is disconnected and connected

5) Memory Card Setting Status Consistency Check

The memory card setting status consistency check cannot be performed during online program change.




5.7 Memory Copy From Control System To Standby System

(1) Overview of Memory Copy From Control System To Standby System Function

Memory copy form control system to standby system function transfers the parameters, programs, file register and other data from the control system CPU module to the standby system CPU module to make the standby system and control system consistent.

The applicable memory is standard RAM, standard ROM and program memory. (Memory cards are irrelevant.)

This function is used to make the memory contents of the control system and standby system CPU modules consistent when replacing the standby system CPU module, etc.

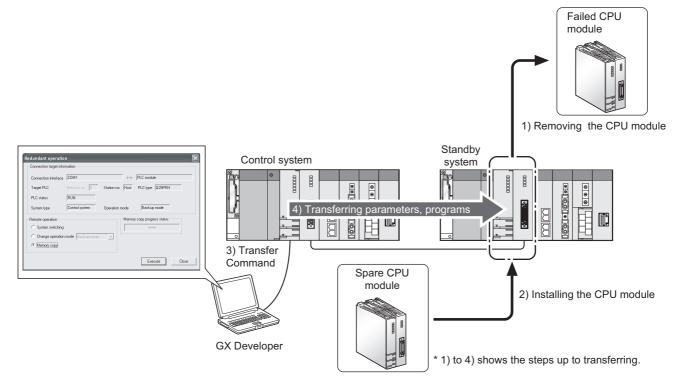

(a) Executing memory copy

Memory copy can be executed using either of the followings.

- · GX Developer
- · Special relays and special registers

(b) Special Relays and Special Registers for Memory Copy

Table 5.58 shows the special relays and special registers for the memory copy function.

Table 5.58 Special Relays and Special Registers for Memory Copy

Туре	Number	Description	Set by User or System	Remarks
	SM1595	Turn on this relay to start memory copy after storing	User	Specific to control
	31011393	3D1H into SD1595.	USEI	system CPU module
	SM1596	This relay turns on during memory copy. This relay turns off after memory copy. *1	System	Applicable to both control system and standby system CPU modules
Special Relays	SM1597	This relay turns on after memory copy. *1 Turn off this relay when starting memory copy. In the case of memory copy by GX Developer, GX Developer will turn off this relay before starting memory copy.	System / User	Applicable to both control system and standby system CPU modules
	SM1598	Turn on this relay when not copying memory from standard ROM. Default: Off (Execution of standard ROM memory copy)	User	Specific to control system CPU module
Special Registers	SD952	Stores the status upon completion of memory copy. (Stores the same value as SD1596.) Backed up for a power failure, this register is not initialized when power is switched off and then on or the RESET/L.CLR switch is moved to the reset position and then to the neutral position. It is initialized by latch clear operation.	System	Applicable to both control system and standby system CPU modules
	SD1595	Store 3D1H (standby system CPU module I/O No.) into this relay before turning on SM1595	User	Specific to control system CPU module
	SD1596	This relay stores the status upon completion of memory copy. (0: Completion)	System.	Applicable to control system and standby system CPU modules

^{* 1:} If one of the followings occurs during memory copy from control system to standby system, the memory copy will be stopped.

In this case, the "Memory copy to other system status" flag (SM1596) turns off and the "Memory copy to other system completion" flag (SM1597) turns on.

- •Standby system power OFF
- •Standby system CPU module reset
- •Tracking cable disconnection or malfunction



(c) Memory Copy Precautions

1) Before memory copy, the standby system CPU memory will be automatically formatted.

Then, the "PRG. MEM. CLEAR (error code: 6400)" stop error will occur in the standby system CPU module.

However, if a stop error has occurred before memory copy, the "PRG. MEM CLEAR" is not detected.

2) Memory copy is stopped when any of the following operations is performed during memory copy.

At this time, the memory contents of the standby system CPU module will be illegal.

Perform any of the following operations after confirming that memory copy is completed.

- · Power off the control system or standby system.
- Reset the control system or standby system CPU module.
- · Disconnect the tracking cable.

If the following error occurs during memory copy, the memory copy is also stopped with the memory contents of the standby system CPU module being illegal.

Tracking cable fault

(d) How to confirm memory copy completion

Completion of memory copy can be confirmed by the special relays and GX Developer.

1) Confirmation by special relays

When memory copy is completed, the special relay "Memory copy to other system status flag (SM1596)" turns off and "Memory copy to other system completion flag (SM1597)" turns on.

Check whether SM1596 and SM1597 are ON or OFF to confirm memory copy completion.

Also, whether memory copy is normally completed or abnormally completed can be checked by the special register "Memory copy completion status (SD1596)".

- When memory copy is normally completed: SD1596: 0
- When memory copy is abnormally completed: SD1596: other than 0 (error code)



2) Confirmation by GX Developer

Whether memory copy is normally completed or abnormally completed can be checked on the "Redundant operation" screen of GX Developer.

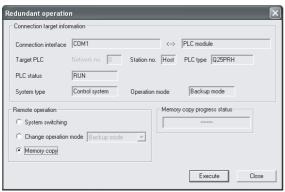


Diagram 5.77 Redundant Operation Screen Showing Normal Completion

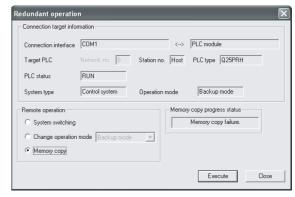


Diagram 5.78 Redundant Operation Screen Showing Abnormal Completion

(2) Memory Copy from Control System to Standby System Using GX Developer

The following provides the procedure for executing memory copy function using GX Developer and the relevant operations.

(a) Procedure

1) Connect the control system and standby system CPU modules with a tracking cable and power on the standby system.





Diagram 5.79 LED Indications When Tracking Cable Is Connected

- * 2: If the standby system CPU module is replaced and the parameters are not stored in the new CPU module, the "MISSING PARA. (error code: 2200)" stop error will occur.
- Connect GX Developer to the control system CPU module.
 Identify the control system CPU module on the "CONTROL" LED or with the special relay (SM1515 (Control Status): ON, SM1516 (Standby status): OFF).

3) Select "Memory copy" on the Redundant operation screen of the Online dialog box on GX Developer, and click the Execute button.

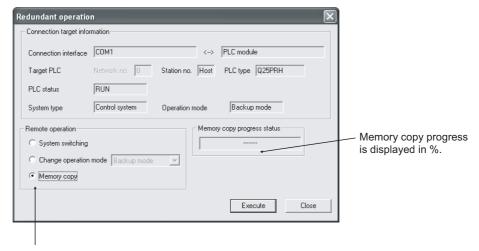

Select "Memory copy".

Diagram 5.80 Redundant Operation Screen

4) When the memory copy confirmation dialog box appears, click the "Yes" button.

This transfers the control system data to the standby system.



Diagram 5.81 Confirmation Dialog Box Displayed on GX Developer

Then, the "BACKUP" LED of the standby system CPU module will flash (red).

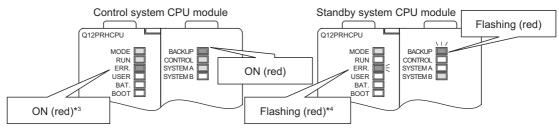


Diagram 5.82 LED Indications during Memory Copy

- * 3: When memory copy begins, the "MEM. COPY EXE. (error code: 6410)" continuation error will occur in the control system CPU module, and then the "STANDBY SYS. DOWN (error code: 6300)" continuation error will occur.
- * 4: When memory copy begins, the "PRG. MEM. CLEAR (error code: 6400)" stop error will occur in the standby system CPU module.

5) When memory copy is complete, the "BACKUP" LED of the standby system CPU module will turn on (red).

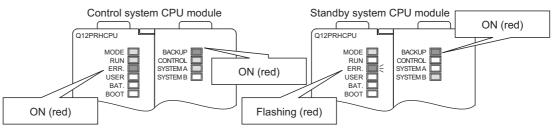


Diagram 5.83 LED Indications at Memory Copy Completion

6) When memory copy is complete, restart the standby system or reset the standby system CPU module. It will operate as the standby system CPU module.

Then, the "BACKUP" LED of the standby system CPU module will turn on (green).

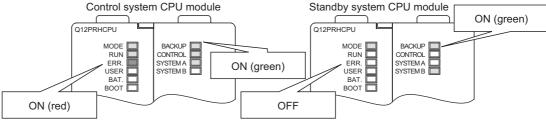


Diagram 5.84 LED Indications during Standby System CPU Module Operation



(b) Operations when executing Memory Copy

The operation at memory copy execution is shown in Diagram 5.85.

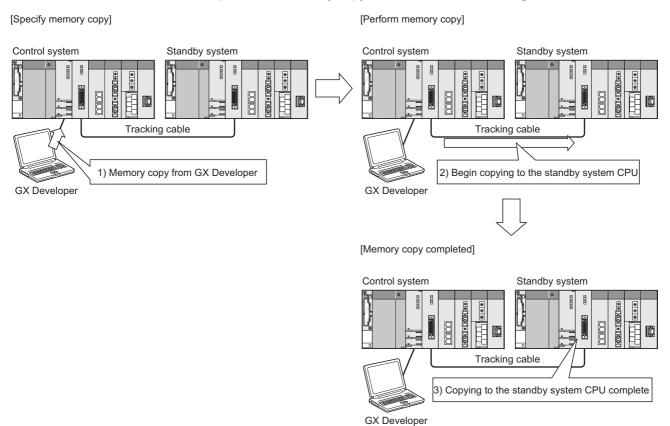


Diagram 5.85 shows the operation performed when memory copy is executed.

(3) Memory Copy From Control System to Standby System Using Special Relays and Special Registers

The following provides the procedure for executing memory copy function using the special relays and special registers and the relevant operations

(a) Steps

1) Connect the control system and the standby system with the tracking cable, and turn the standby system power ON.

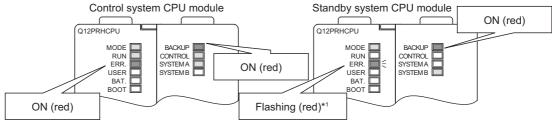


Diagram 5.86 LED Indications when Tracking Cable Is Connect

- * 1: If the standby system CPU module is replaced and the parameters are not stored in the new CPU module, the "MISSING PARA. (error code: 2200)" stop error will occur.
- 2) Make sure SM1596 and SM1597 are turned OFF. If SM1596 or SM1597 is ON, turn it OFF.

3) When 3D1H is stored in the special register (SD1595) and the special relay (SM1595) is turned ON, the contents of control system memory will be copied to the standby system.

Then, the "BACKUP" LED of the standby system CPU module will turn ON (red).

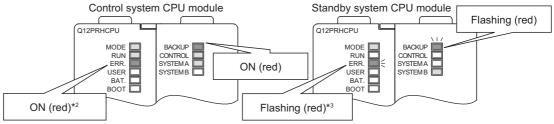


Diagram 5.87 LED Indications during Memory Copy

- * 2: When memory copy begins, the "MEM. COPY EXE. (error code: 6410)" continuation error will occur in the control system CPU module, and then a "STANDBY SYS. DOWN (error code: 6300)" resume error will occur.
- * 3: When memory copy begins, the "PRG. MEM. CLEAR (error code: 6400)" stop error will occur in the standby system CPU module.
- 4) When memory copy is complete, SM1597 will turn ON. Then, the "BACKUP" LED of the standby system CPU module will turn ON (red).

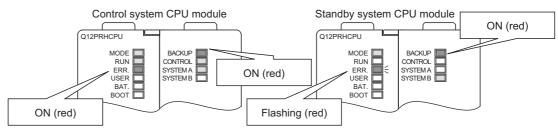


Diagram 5.88 LED Indications at Memory Copy Completion

5) After completing memory copy to the other system, restart the standby system or reset the standby system CPU module. It will operate as the standby system CPU module.

Then, the "BACKUP" LED of the standby system CPU module will turn ON (green).

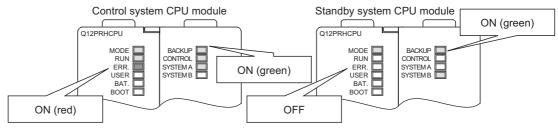


Diagram 5.89 LED Indications during Standby System CPU Module Operation



(b) Memory Copy Operations

Diagram 5.90 illustrates the processes that take place in memory copy.

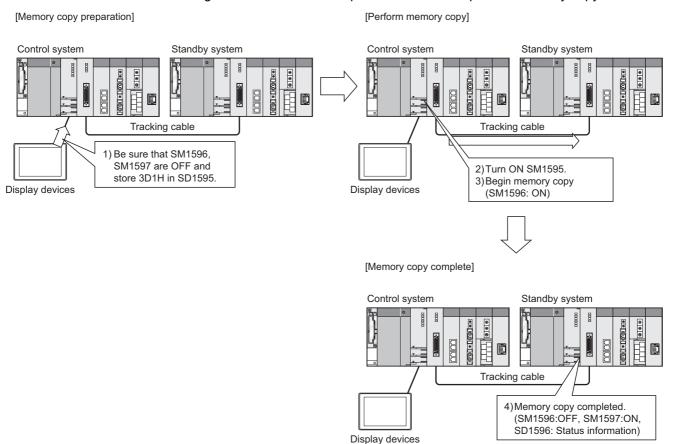


Diagram 5.90 Operation When Memory Copy Is Executed

(c) Memory Copy special relay and special register status

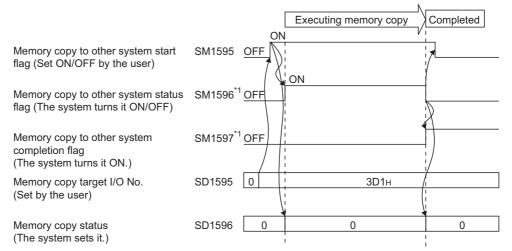


Diagram 5.91 Memory Copy Special Relay and Special Register Status

* 1: If any of the following malfunctions occur during memory copy from the control system to the standby system, memory copy will stop.

If this happens, the "Memory copy to other system status" flag (SM1596) will turn OFF, and the "Memory copy to other system completion" flag (SM1597) will turn ON.

- Standby system power OFF
- •Standby system CPU reset
- •Tracking cable disconnection or malfunction

POINT

- 1. When the special relay "Memory copy to other system status executed" flag (SM1596) or the "Memory copy to other system completion" flag (SM1597) is ON, memory copy will not be to other system status executed even if the "Memory copy to other system start" flag (SM1595) is turned ON. In this case, no error code will not be stored in "Memory copy target I/O No." (SD1596) in the special register.
 Turn OFF SM1596 or SM1597 if either of them is ON, then execute memory copy again.
- 2. When a transfer target I/O No. other than the standby CPU module ($3D1_H$) is set to "Memory copy target I/O No." (SD1595) and memory copy is executed, the "Unsupported transfer target I/O No. (error code: 4248_H) will be stored in SD1596.
 - In this case, memory copy will not be executed.



(4) Error Occurrence During Memory Copy

If any of errors listed in Table5.59 occurs during memory copy, the contents of standby system memory will be corrupted.

In this case, memory copy is not complete, but the special relay "Memory copy in process" flag (SM1596) will turn OFF and the "Memory copy complete" flag (SM1597) will turn ON.

Remove the cause of the error and execute memory copy again.

Table5.59 Error Occurrence During Memory Copy

Cause	Memory Copy Using GX Developer	Memory Copy Using Special Relays and Special Registers
Control system power OFF Control system CPU reset	The following error dialog box will appear: MELSOFT application Cannot communicate with the PLC. Execute again after checking the connections with the PLC. c55:01808201 OK	-
Standby system power OFF Standby system CPU reset	The following error dialog box will appear: MELSOFT application Unable to communicate with PLC. The following reasons may be responsible. The power supply of the standby system was turned off. reset status. Buser WOT error status. PLC has a fly problem. <es:010e4241></es:010e4241>	4241 _H will be stored in SD1596 of the control system CPU module.
Tracking cable disconnection Tracking cable failure	The following error dialog box will appear: MELSOFT application The tracking cable has a communication problem. Please encoute it again after confirming the state of the tracking cable. <es:010a4242></es:010a4242>	4242 _H will be stored in SD1596 of the control system CPU module.
USB cable disconnection RS-232 cable disconnection	The following error dialog box will appear: MELSOFT application Cannot communicate with the PLC. Execute again after checking the connections with the PLC. ES:01808201>	-

(5) Precautions

(a) GX Developer Functions Disabled During Memory Copy

The GX Developer cannot perform the following operations on either the control system or the standby system during memory copy:

- 1) PC remote formatting
- 2) Program memory to ROM
- 3) PC write (flash ROM)
- 4) CPU module write during RUN
- 5) System switching
- 6) Operation mode change

(b) Restrictions on Memory Copy

Memory copy cannot be done using either GX Developer or the special relays and special registers under the conditions shown in Table5.60.

Table 5.60 Restrictions on Memory Copy

	Memory Copy Operation			
Execution Conditions	Memory Copy Using GX Developer	Memory Copy Using Special Relays and Special Registers		
Memory copy executed to the standby system CPU module	The following error dialog box will appear: MELSOFT series GX Developer Cannot execute this function when the PLC is not control system.	-		
Memory copy executed in Debug Mode	The following error dialog box will appear: MELSOFT series GX Developer Cannot execute this function when the PLC status is debug mode.	424D _H will be stored in SD1596 of the control system CPU.		
Memory copy re-executed during memory copy	The following error dialog box will appear: MELSOFT application The memory copy function is being executed. Please execute it again for a while after time. <es:010a4247></es:010a4247>	4247 _H will be stored in SD1596 of the control system CPU.		
During online program change or similar operation to the control system CPU module	The following error dialog box will appear: MELSOFT application This peripheral device or another peripheral device are operating online change function. Please execute it again after it completed online change function. <e5:010a424c></e5:010a424c>	424C _H will be stored in SD1596 of the control system CPU.		
Memory copy target I/O No. (SD1595) is any value other than 3D1H	-	4248 _H will be stored in SD1596 of the control system CPU.		
Standby system power OFF Standby system CPU module reset	The following error dialog box will appear: MELSOFT application Unable to communicate with PLC. The following reasons may be responsible. The power supply of the standby system was turned off. User WDT error status. PLC has a H/W problem. <e5:010a4241></e5:010a4241>	4241 _H will be stored in SD1596 of the control system CPU.		
Tracking cable disconnection	The following error dialog box will appear: MELSOFT application The tracking cable has a communication problem. Please execute it again after confirming the state of the tracking cable. <es:0104242> OK OK</es:0104242>	4242 _H will be stored in SD1596 of the control system CPU.		



5.8 Online Module Change (Hot Swapping)

In the redundant system, following modules can be replaced online.

- Module mounted to the extension base unit (I/O module, analog module etc.)
- Module mounted to the remote I/O station in the MELSECNET/H Remote I/O network (I/O module, analog module etc.)
- · Power supply module when the power supply modules are duplicated
- I/O module mounted on the main base unit where the Redundant CPU is mounted (Only when the extension base unit is not connected)

The network module mounted on the control system main base unit cannot be replaced online (while the system power is ON).

When replacing the network module mounted on the control system main base unit, make sure to switch it to the standby system using GX Developer or the system switching instruction (SP. CONTSW instruction).

The standby system is not actually controlling. Therefore, there will be no effect on the redundant system control if the standby system is powered off.

When powering the standby system OFF, the "STANDBY SYS. DOWN (error code: 6300)" continuation error will occur in the control system CPU module.

(1) Module mounted to the extension base unit

The online module change (hot swapping) is applicable for a module mounted to the extension base unit.

However, there are restrictions on the module where the online module change is applicable.

(For modules that can be replaced online, refer to Section 2.4)

For replacing modules where the extension base unit is connected online, refer to the following manual.

GCPU User's Manual (Hardware Design, Maintenance and Inspection)

(2) Module mounted on the MELSECNET/H remote I/O station

The MELSECNET/H remote I/O station supports online module change.

If a module mounted on the MELSECNET/H remote I/O station has a failure, the module can be replaced without stopping system control.

However, the target module of online module change is restricted.

(Refer to Section 2.4 (4) for details.)

Refer to the following manual for information on online change of the module mounted on the MELSECNET/H remote I/O station.

 $\cite{Corresponding MELSECNET/H Network System Reference Manual}$

(Remote I/O network)

User's Manual of the corresponding module

(3) Redundant Power Supply Module

When a pair of redundant power supply modules is used in each system of the redundant system, one redundant power supply module can be replaced at a time after powering off the module.

As another redundant power supply module supplies power to the modules mounted on the same base unit, the redundant system control can be continued during the replacement.

Refer to Section 8.3.3, for details.

(4) I/O module mounted to main base unit where Redundant CPU is mounted

The I/O modules mounted on the control system and standby system main base units can be replaced online.

If an error occurs in an I/O module mounted on the control system or standby system main base unit, the module can be replaced without stopping system control.

Note that a module mounted to the main base unit cannot be replaced online when the extension base unit is connected.

Refer to the following manual, for details.

GPU User's Manual (Hardware Design, Maintenance and Inspection)



5.9 Network Module Redundant Group Settings

(1) Network Module Redundant Group Settings

When a pair of Ethernet modules is used in each system of the redundant system, by making the network module redundant group settings of the Ethernet modules, system switching can be disabled even if an error occurs in one network. However, if a communication error occurs in both Ethernet modules, system switching will occur.

[Example:]

Diagram 5.92 and Diagram 5.93 show the operations when an error occurs in the communication between the control system and standby system via the Ethernet.

 Diagram 5.92 show the processes that take place when a malfunction occurs on one of the networks with network module redundant group settings.

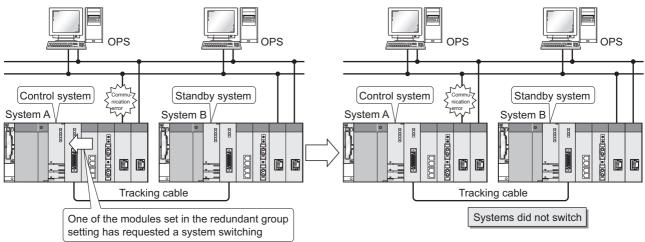


Diagram 5.92 Operation When Error Occurs on One of the Networks

 Diagram 5.93 the processes that take place when a malfunction occurs on both networks with network module redundant group settings.

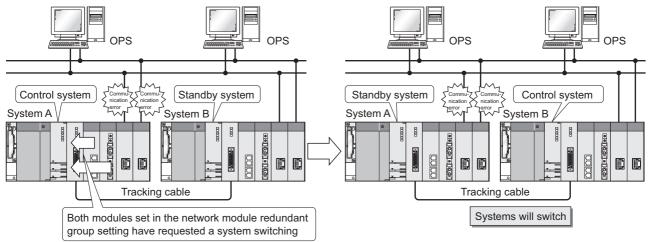


Diagram 5.93 Operation When Error Occurs on Both Networks

(2) Redundant Group Settings

Redundant group settings are made in the network parameter group settings using GX Developer.

Set "Group" or leave it block in the network module set to the lower I/O No.

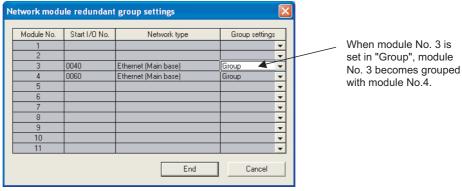


Diagram 5.94 Network module redundant group setting Screen

(3) Confirming a System Switching Request by a Network Module

If a network module requests a system switching, the SD1590 bit for the module No. will change to "1". $^{\star 1}$




Diagram 5.95 Network Module That Issued System Switching Request

- * 1 : The module No. corresponds to the slot number on the main base unit.
 - •Module No. 0...Slot 0
 - •Module No. 1...Slot 1
 - •Module No. 2...Slot 2
 - .
 - •Module No. 11...Slot 11

(4) When a non-redundant network module is set in the redundant group settings

If redundant group settings are made for a network module that does not support redundant systems, a stop error, "PARAMETER ERROR (error code: 3000)" will occur.

In this case, check the network parameter group settings.



5.10 Redundant CPU Functions Restricted in Redundant System

This section explains the following Redundant CPU functions that are restricted in a redundant system.

- Enforced ON/OFF of external I/O
- Remote operation

Refer to the following manual for details of each function.

CPU User's Manual (Function Explanation/Program Fundamentals)

5.10.1 Enforced ON/OFF of external I/O

The Redundant CPU can forcibly turn ON/OFF the enforced ON/OFF of external I/O operation from GX Developer.

The registered ON/OFF information can be cleared by GX Developer operation.

(1) CPU modules that can be forcibly turned ON/OFF

The enforced ON/OFF of the external I/O can be executed for only the control system CPU module. (It cannot be executed for the standby system CPU.)

If registration/change/clear of the forced I/O ON/OFF status is made to the standby system CPU, the error dialog box (in Diagram 5.96) will appear on GX Developer.

In this case, change the connection target of GX Developer to the "control system".






Diagram 5.96 Error Dialog Box That Appears When Forced ON/OFF/Cancel Is Executed in Standby System

(2) Tracking of Registered Forced ON/OFF Information from Control System to Standby System

The forced ON/OFF information registered in the control system CPU module is tracked to the standby system CPU module.

(Track the registered forced ON/OFF information from the control system CPU module to the standby system CPU module in the "backup mode" or "separate mode".)

Hence, if system switching occurs, the external I/O forced ON/OFF can be continued according to the forced ON/OFF information registered by GX Developer before system switching.

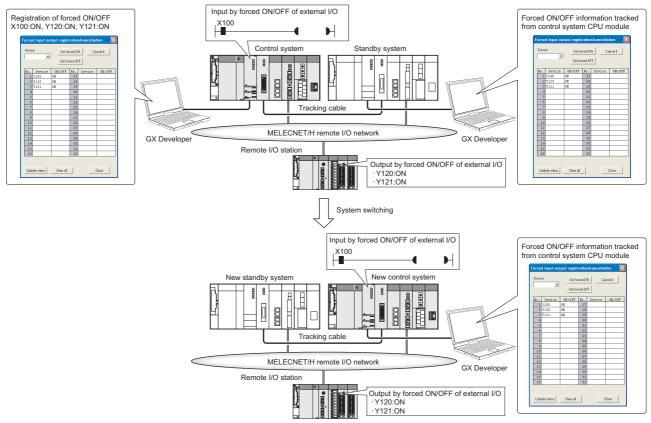


Diagram 5.97 Input/Output by Forced ON/OFF of External I/O at System Switching Occurrence

(3) Operation of Input/Output of which forced ON/OFF information has been registered at Operation Mode Change

If the operation mode is changed, the forced ON/OFF information before operation mode change remains.

Hence, if the operation mode is changed, the external I/O forced ON/OFF can be continued according to the forced ON/OFF information before operation mode change.

If the operation mode is in the separate mode, the external I/O forced ON/OFF by GX Developer can be executed for only the control system CPU module.

If in the separate mode, the external I/O forced ON/OFF registration cannot be executed individually for the control system and standby system CPU modules.



- (4) Operation When Control System/Standby System Is Powered Off and Then On/CPU Module Is Reset and Then its RESET Switch Is Set to Neutral Position
 - (a) In the backup mode
 - Operation when control system is powered off and then on/control system CPU module is reset and then its RESET switch is set to neutral position

System switching occurs when the control system is powered off/the control system CPU module is reset.

The input/output of which forced ON/OFF has been registered remains the ON/OFF status according to the forced ON/OFF information of the new control system CPU module.

Table 5.61 Operation When Control System Is Powered Off and Then On/Control System CPU Module Is Reset and Then its RESET Switch Is Set to Neutral Position

Iten	Module mounted on main base unit including Redundant CPU	Module mounted on remote I/O station
Inpu	Device X remains ON/OFF according to the forced ON/OFF information.	
Outp	External output ON/OFF is continued according to the forced ON/OFF information.	

2) Operation when standby system is powered off and then on/standby system CPU module is reset and then its RESET switch is set to neutral position

If the standby system is powered off/the standby system CPU module is reset, the forced ON/OFF information of the control system CPU module does not change.

The input/output of which forced ON/OFF has been registered continues the ON/OFF status according to the forced ON/OFF information of the control system CPU module.

Table 5.62 Operation When Standby System Is Powered Off and Then On/Standby System CPU Module Is Reset and Then its RESET Switch Is Set to Neutral Position

Item	Module mounted on main base unit including Redundant CPU	Module mounted on remote I/O station
Input	Device X remains ON/OFF according to the forced ON/OFF information.	
Output	External output ON/OFF is continued according to the forced ON/OFF information.	

REDUNDANT SYSTEM FUNCTIONS

(b) In the separate mode

1) Operation when control system is powered off and then on/control system CPU module is reset and then its RESET switch is set to neutral position

When the control system is powered off/the control system CPU module is reset, the forced ON/OFF information is all cleared.

The input/output of which forced ON/OFF has been registered all return to the status before the forced ON/OFF registration.

However, when the control system is powered off/the control system CPU module is reset, the master station on the MELSECNET/H remote I/O network changes to the sub master station. Therefore, the output to the remote I/O station holds the status when the control system was powered off/the control system CPU module was reset.

Table 5.63 Operation When Control System Is Powered Off and Then On/Control System CPU Module Is Reset and Then its RESET

Switch Is Set to Neutral Position

Item	Module mounted on main base unit including Redundant CPU	Module mounted on remote I/O station
		[After power is switched on/RESET switch is set to neutral
Input	Device X changes according to the external input.	position]
		Device X changes according to the external input.
	The external output changes according to device Y.	[When power is switched off/CPU is reset]
Output		The output status when the control system is powered off/
		the control system CPU module is reset is held.
		[After power is switched on/RESET switch is set to neutral
		position]
		The external output changes according to device Y.

Operation when standby system is powered off and then on/standby system CPU module is reset and then its RESET switch is set to neutral position

If the standby system is powered off/the standby system CPU module is reset, the forced ON/OFF information of the control system CPU module does not change.

The input/output of which forced ON/OFF has been registered remains the ON/OFF status according to the forced ON/OFF information of the control system CPU module.

Table 5.64 Operation When Standby System Is Powered Off and Then On/Standby System CPU Module Is Reset and Then its RESET

Switch Is Set to Neutral Position

	Item	Module mounted on main base unit including Redundant CPU	Module mounted on remote I/O station
Ī	Input	Device X remains ON/OFF according to the forced ON/OFF information.	
	Output	External output ON/OFF is continued according to the forced ON/OFF information.	

3) Turning power supply OFF or reset operation when the extension base unit is connected

Do not turn OFF the power supply of the control system or perform reset operation in the separate mode when the extension base unit is connected. (If doing so, turn ON both systems simultaneously or cancel the reset.)



5.10.2 Remote Operation for Redundant System

In the redundant system, the following remote operations can be performed by GX Developer or other means.

(The remote operation for the Redundant CPU can be executed regardless of the communication route.)

- Remote RUN
- Remote STOP
- Remote PAUSE
- · Remote latch clear
- · Remote reset

The remote operation for the Redundant CPU can be executed in any of the following methods.

- · Remote operation from GX Developer
- CC-Link IE Controller Network module, MELSECNET/H module dedicated instruction
- · Remote operation by MC protocol
- · Remote operation function from OPS using EZSocket

(1) Target CPU modules of remote operation

(a) In the backup mode

- Remote RUN, remote STOP, remote PAUSE or remote latch clear can change the operation status of the CPU module(s) in the system or both systems specified in the Connection Setup of GX Developer or other means.
- Remote reset can be executed for only the control system CPU module. Performing remote reset for the control system CPU module resets both systems.

(b) In the separate mode

Remote operation can be performed for only the CPU module of the system specified in the Connection Setup of GX Developer or other means.

(2) Target Specification for Remote Operation

As the target CPU module of remote RUN, remote STOP, remote PAUSE or remote latch clear, select the CPU module of either system or the CPU modules of both systems in the Connection Setup of GX Developer.

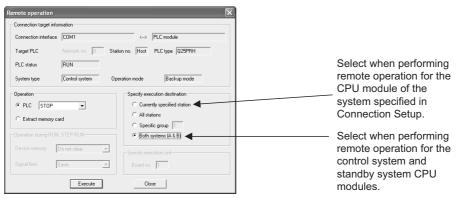


Diagram 5.98 Remote Operation Screen

(a) Remote operation for the system specified in the Connection Setup of GX Developer

When "Currently specified station" is selected at the execution destination area on the Remote operation screen of GX Developer, remote operation is performed for only the system specified in the Connection Setup, which can be selected from [Online] from the menu bar of GX Developer.

(The current station can be selected in the "backup mode" and "separate mode".) For example, when remote STOP is executed after the "control system" is specified on the Connection Setup screen, remote STOP is executed for the current control system CPU module.

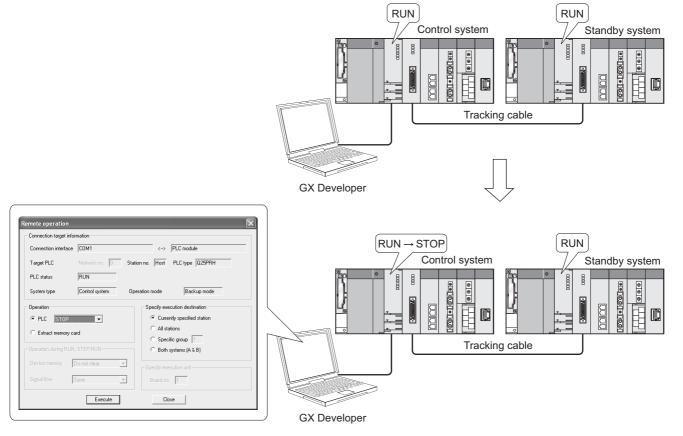


Diagram 5.99 Remote STOP Operation When Current Station Is Specified

OVERVIEW



(b) Remote operation for both systems

When "Both systems (A & B)" is selected at the execution destination area on the Remote operation screen of GX Developer, remote operation is performed for the control system and standby system.

Remote operation for "Both systems" can be selected in the backup mode only. (In the separate mode, "Both systems" cannot be selected at the execution destination area on the Remote operation screen of GX Developer.)

When "Both systems (A & B)" is selected, GX Developer executes remote operation in order of the "standby system CPU module" and "control system CPU module".

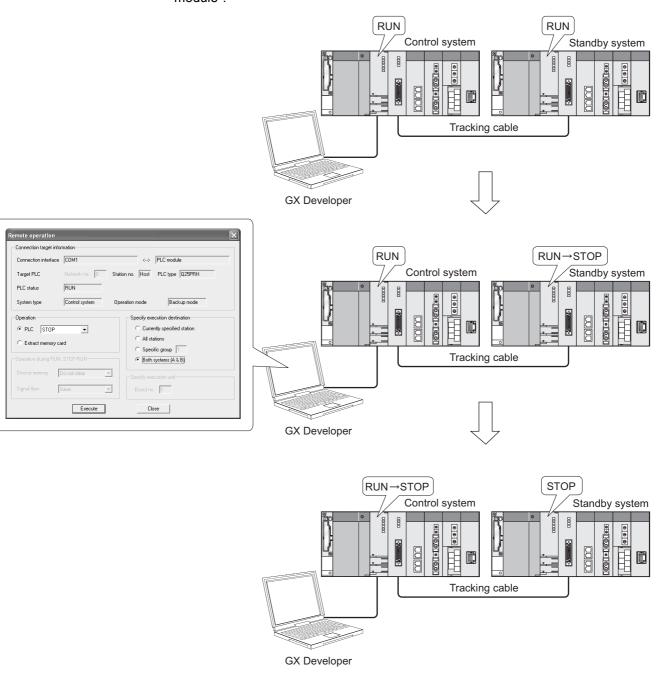



Diagram 5.100 Remote STOP Operation When Both Systems Are Specified


(3) Remote reset operation

(a) In the backup mode

In the backup mode, performing remote reset operation for the control system resets both systems.

(Both systems are reset also when "Currently specified station" is selected at the execution destination area on the Remote operation screen of GX Developer.)

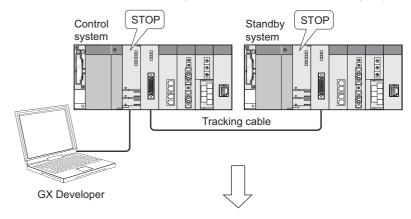

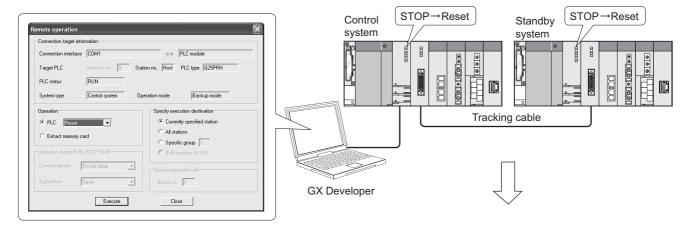

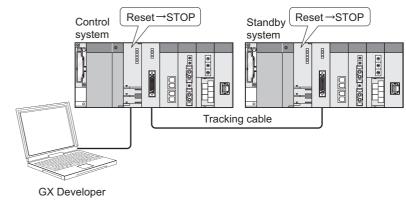


Diagram 5.101 Remote Reset Operation

NOL

OVERVIEW

SYSTEM CONFIGURATION

TRACKING CABLE

PROCEDURE FOR STARTING UP A REDUNDANT SYSTEM

REDUNDANT SYSTEM **51** FUNCTIONS

REDUNDANT SYSTEM
NETWORKS

PROGRAMMING CAUTIONS




Remote reset operation cannot be performed for the standby system. If remote reset operation is performed for the standby system by GX Developer, the error dialog box in Diagram 5.102 will appear.



Diagram 5.102 Error Dialog Box Displayed on GX Developer

(b) In the separate mode or debug mode

In the separate mode or debug mode, remote reset can be executed for only the system specified in the Connection setup of GX Developer. The operation status of the unspecified system does not change.

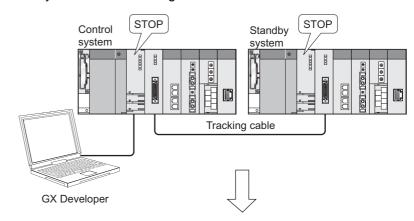

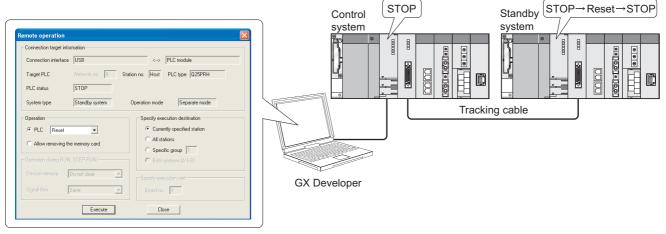


Diagram 5.103 Remote Reset Operation in Separate Mode

(c) Precautions when executing remote reset operation

The following describes the precautions to be taken when performing remote reset for both systems in the backup mode.

1) Remote reset when control system CPU module is in the STOP status and standby system CPU module is in the RUN status

System switching will occur when remote reset operation is performed for the control system CPU module when the control system CPU module is in the STOP status and the standby system CPU module is in the RUN status. To disable system switching at the time of remote reset, change the operation statuses of the control system and standby system CPU modules to the STOP status, and then perform remote reset.

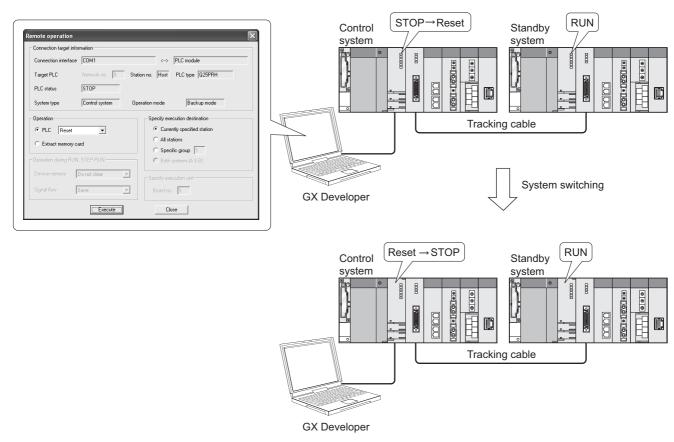



Diagram 5.104 Remote Reset Operation When Control System CPU Module Is in STOP Status and Standby System CPU Module Is in RUN Status



2) When watchdog timer error has occurred in the standby system CPU module

When a watchdog timer error has occurred in the standby system CPU module, only the control system CPU module is reset and the standby system CPU module is not reset.

When performing remote reset for the standby system CPU module in which a watchdog timer error has occurred, set the communication route where the tracking cable is not relayed.

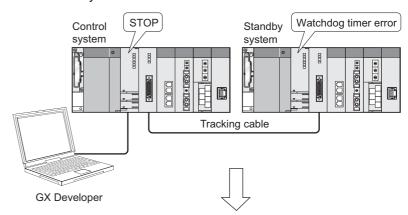

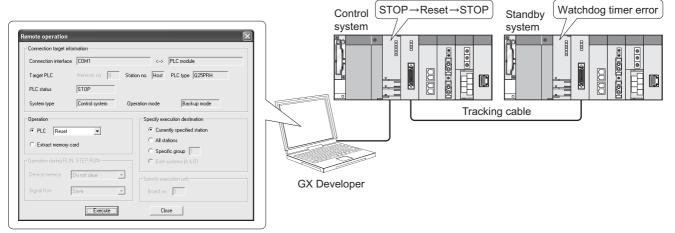


Diagram 5.105 Remote Reset Operation When Watchdog Timer Error Has Occurred in Standby System CPU Module

OVERVIEW

SYSTEM CONFIGURATION

TRACKING CABLE

PROCEDURE FOR STARTING UP A REDUNDANT SYSTEM

5

REDUNDANT SYSTEM FUNCTIONS

REDUNDANT SYSTEM NETWORKS

PROGRAMMING CAUTIONS

TROUBLESHOOTING

3) Remote reset after execution of remote operation for control system or standby system CPU module from other route

When remote operation is being performed for the control system or standby system CPU module from GX Developer in the other route, the standby system CPU module is not reset if remote operation is performed for the control system CPU module.*1

When performing remote reset for the control system or standby system CPU module, cancel the remote operation for the standby system CPU module from GX Developer or other means that executed the remote operation for the standby system CPU module.

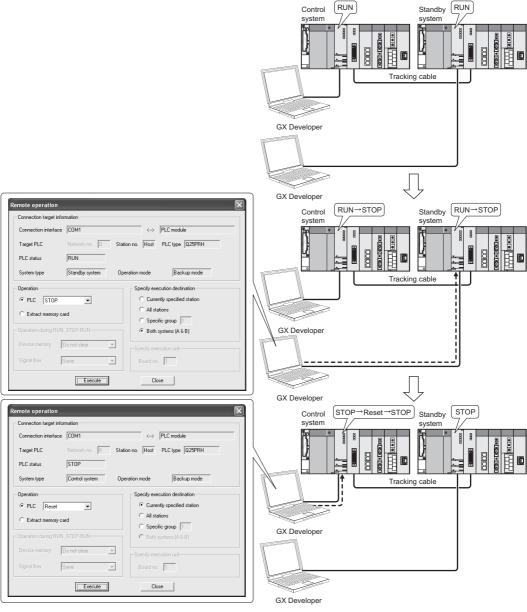


Diagram 5.106 Remote Reset Operation after Execution of Remote STOP for Control System or Standby System CPU Module from Other Route

* 1: How to confirm remote operation execution

Whether remote operation has been executed or not can be checked by the special register "CPU operation status (SD203)".

When the CPU operation status is changed by remote operation, "2 (remote operation from GX Developer/serial communication module)" is stored into b4 to b7 of SD203.



5.11 Access to Module Mounted on Extension Base Unit

Table 5.65 shows the access to a module mounted on the extension base unit when accessing from the control system and when accessing from the standby system.

Table 5.65 Access to Module Mounted on Extension Base Unit

Item		Execution timing	Name	Access from control system		Access from standby system		
			Name	Backup mode	Separate mode	Backup mode	Separate mode	
I/O access	Refresh	At END processing	Input from input module	Execute	Execute	_ *5	_ *5	
	Kellesii		Output from output module	Execute	Execute	Not execute	Not execute	
	Instruction	At instruction - execution	Direct access of input device (DX)	Executable	Executable	Inexecutable	Inexecutable	
			Direct access of output device (DY)	Executable	Executable	Inexecutable	Inexecutable	
			I/O refresh instruction	Executable	Executable	Inexecutable	Inexecutable	
	Refresh	At END processing	Refresh of intelligent function module	Executable	Executable	Inexecutable	Inexecutable	
			Refresh of CC-Link IE Controller Network module	Inexecutable*1	Inexecutable*1	Inexecutable*1	Inexecutable*1	
Access to buffer			Refresh of MELSECNET/H module	Inexecutable*1	Inexecutable*1	Inexecutable*1	Inexecutable*1	
			Refresh of CC-Link master module	Executable	Executable	Inexecutable	Inexecutable	
			Device initial value of link direct device (J□\□)	Inexecutable*1	Inexecutable*1	Inexecutable*1	Inexecutable*1	
			Device initial value of intelligent function module (U□\G□)	Executable	Executable	Inexecutable	Inexecutable	
memory	Instruction	At instruction execution	Data link instruction	Executable	Executable	Inexecutable	Inexecutable	
			Refresh instruction	Executable	Executable	Inexecutable	Inexecutable	
			Read/write from/to intelligent function module/ special function module	Executable	Executable	Inexecutable	SM1593=ON: Inexecutable (An error does)	
			Link direct device (J□\□)	Inexecutable*1	Inexecutable*1	Inexecutable*1	not occur)	
			Intelligent function module (U□\G□)	Executable	Executable	Inexecutable	SM1593=OFF: Stop error	
	Monitor	At END processing	Buffer memory batch monitor/device batch monitor	Executable*2	Executable*2	Inexecutable*4	Inexecutable*4	

(To the next page)

Table 5.65 Access to Module Mounted on Extension Base Unit (Continued)

Item		Execution	Name	Access from control system		Access from standby system	
		timing	Name	Backup mode	Separate mode	Backup mode	Separate mode
Dedicated	Dedicated	At instruction	Intelligent function module	Inexecutable*3	Inexecutable*3	Inexecutable*3	*3
instruction	instruction	execution	(U□\G□)	inexecutable	inexecutable °	inexecutable	inexecutable ⁹

- * 1: CC-Link IE Controller Network, MELSECNET/H module cannot be mounted to the extension base unit.
- * 2: An error code (4248_H) is returned to the request source when system switching occurs during monitoring.
- * 3: An error (OPERATION ERROR: 4122) occurs.
- * 4: Accessing to a module mounted on the extension base unit from the standby system is disabled. When buffer memory batch monitor or device batch monitor is executed from GX Developer, the following message box is displayed.
 - 1) When executing buffer memory batch monitor
- 2) When executing device batch monitor





* 5: Input (X) from the input module on the extension base unit will be an undefined value.





CHAPTER6 REDUNDANT SYSTEM NETWORKS

This chapter explains the redundant system networks on the assumption that the operation mode has been set to backup mode.

6.1 Communication with GX Developer and PX Developer

6.1.1 Communication Methods with GX Developer

The communication between GX Developer and redundant CPU module can be made through the following three paths.

- CPU module direct connection
- · Routing a network module
- Routing an intelligent function module

In the case of GX Developer, select [Online] - [Specify Connection] from the menu bar, and specify the connection path on the displayed dialog box.

And, specify the communication target system from the following: "Not specified" (default), "Control system", "Standby system", "System A" and "System B". (Fig. 12) Table 6.1)

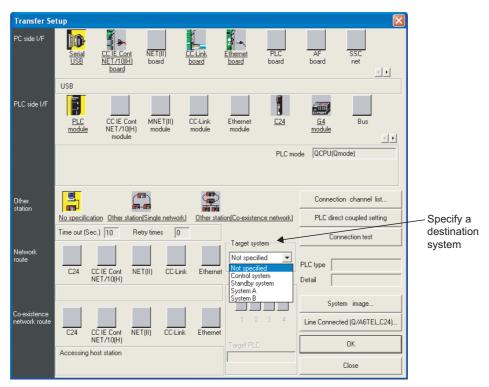


Diagram 6.1 Connection Setup Screen

REDUNDANT SYSTEM NETWORKS

Table6.1 GX Developer System Specification and Communication Paths

Table6.1 GX Developer System Specification and Communication Paths						
System Specification		Communication Path				
Not specified (Default)	Select this option to communicate with only the CPU module connected to GX Developer.	System A - Control System B - Standby System Specified (default) Tracking cable GX Developer Communicate with the connected CPU module				
Control System	Select this option to communicate with the control system CPU module using GX Developer. If system switching occurs, communication is done with the new control system CPU module. If the CPU module connected to GX Developer is the control system, communication is done with that CPU module. If the CPU module connected to GX Developer is the standby system, communication is done with the other system (the control system) via the tracking cable.	System A - Control System System B - Standby System Tracking cable Communicate with the control system CPU module System A - Control System System B - Standby System Tracking cable Control system GX Developer Communicate with the control system CPU module				
Standby System	Select this option to communicate with the standby system CPU module using GX Developer. If system switching occurs, communication is done with the new standby system CPU module. If the CPU module connected to GX Developer is the standby system, communication is done with that CPU module. If the CPU module connected to GX Developer is the control system, communication is done with the other system (the standby system) via the tracking cable.	System A - Control System B - Standby System GX Developer Communicate with the standby system CPU module System A - Control System System B - Standby System Tracking cable Communicate with the standby system CPU module System B - Control System System B - Standby System Tracking cable Communicate with the standby system CPU module				
System A	Select this option to communicate with system A CPU module using GX Developer. If system switching occurs, communication continues with the new system A CPU module. If the CPU module connected to GX Developer is system A, communication is done with that CPU module. If the CPU module connected to GX Developer is system B, communication is done with the other system (system A) via the tracking cable.	System A - Control System System B - Standby System GX Developer Communicate with the System A's CPU module System A - Control System System B - Standby System Tracking cable Communicate with the System A's CPU module GX Developer				
System B	Select this option to communicate with system B CPU module using GX Developer. If system switching occurs, communication continues with the new system B CPU module. If the CPU module connected to GX Developer is system B, communication is done with that CPU module. If the CPU module connected to GX Developer is system A, communication is done with the other system (system B) via the tracking cable.	System A - Control System System B - Standby System GX Developer Communicate with the System B's CPU module System A - Control System System B - Standby System Tracking cable GX Developer Communicate with the System B's CPU module GX Developer				






6.1.2 Confirming the Connection Target on GX Developer

The current communication target CPU module and the connection path can be confirmed on the following GX Developer screen .

Display information for the connected system in monitor status (control system/standby system and System A/System B).

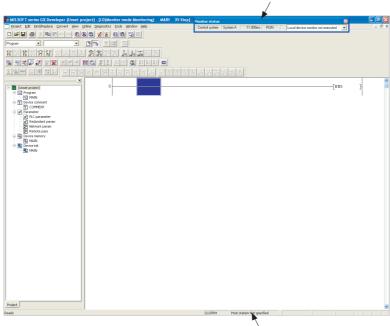

Display information for the system specified in connection settings (control system/standby system and System A/System B).

Diagram 6.2 GX Developer Ladder Monitor Screen

MELSEG Q series

REDUNDANT SYSTEM NETWORKS



This section describes cautions on access from GX Developer and PX Developer.

(1) Cautions when the System Connected to GX Developer/PX Developer and the Specified System are Different

(a) Communicating with a CPU Module via a Tracking Cable

When the system for the CPU module to which GX Developer/PX Developer is connected is different from the specified system, communication is done with the CPU module of the other system (specified system) via the tracking cable. (Fig. Table 6.1)

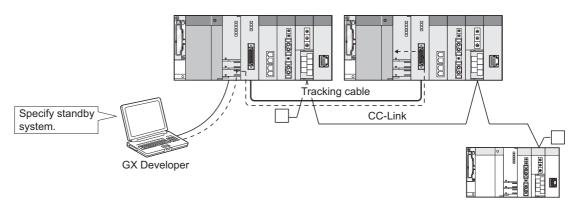


Diagram 6.3 Communication with CPU Module via Tracking Cable

(b) Accessing a Network Module via a Tracking Cable

Communication with a network module on the other system via a tracking cable is not available for GX Developer and PX Developer.

To communicate with a network module on the other system (e.g, network diagnosis of the other system), reconnect the GX Developer and PX Developer to the CPU module on the other system.

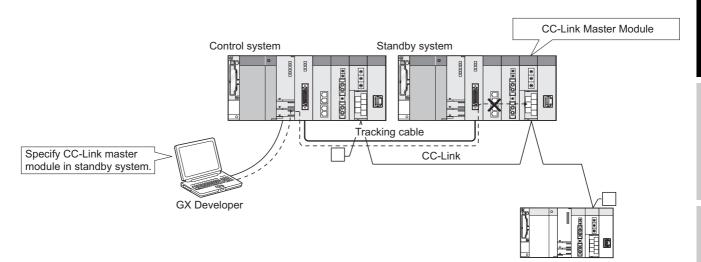


Diagram 6.4 Access to Network Module via Tracking Cable



(2) Corrective Action when a Line Down Occurs during Access via a Network

(a) In the case of other than monitoring

A communication error occurs when accessing to a module mounted on the extension base unit via the network using the function other than [Monitor] of GX Developer or PX Developer.

As for functions other than [Monitor] of GX Developer or PX Developer, change the connection destination at [Transfer setup] and retry the communication. For MC protocol commands that can be used for communications made via a module on an extension base unit, refer to Appendix 7.

MELSOFT products connectable to a module mounted on the extension base unit are GX Developer and PX Developer. However, there are restrictions on applicable functions. For details, refer to the following manuals.

GX Developer Version 8 Operating Manual

PX Developer Version 1 Operating Manual (Programming Tool)

(b) In the case of monitoring

When a line down occurs during access via a network using PX Developer (monitoring tool), take the corrective action according to the system specified in the connection setup.

1) When "Not Specified" is Specified

A communication error occurs when "Not Specified" has been specified as the connection target using GX Developer or PX Developer (monitoring tool). Change the connection target in the connection set up of GX Developer or PX Developer (monitoring tool), and restart communication.

2) When "Control System", "Standby System", "System A", or "System B" is Specified

When "Control System", "Standby System", "System A", or "System B" has been specified as the connection target using GX Developer or PX Developer (monitoring tool), switch the connection path, and, communication will continue with the specified system.

MELSEG Q series

REDUNDANT SYSTEM NETWORKS



If a line down occurs in system A during access when PX Developer (monitoring tools) is connected to that system, and the connection target is specified as system A, communication is continued with system A via system B.

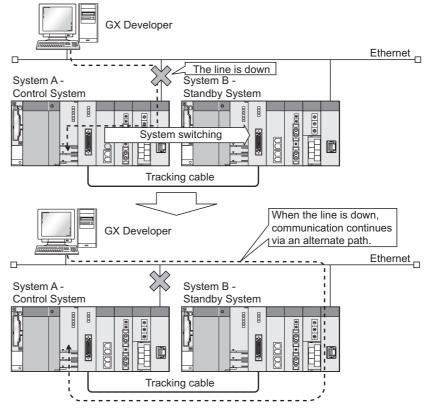


Diagram 6.5 Communication continuation through system switching

⊠POINT

Communication via a tracking cable is carried out when the route system's power supply is on, and the tracking cable is connected properly.

Communication via a tracking cable is not carried out in the following cases.

- · When the route system's power supply is off
- · When the route CPU module is reset
- · When a watchdog timer error occurs in the route CPU module
- When the connected system's power supply is off
- When the connected CPU module is reset
- · When a watchdog timer error occurs in the connected CPU module
- When the tracking cable is not connected or broken.

6 REDUNDANT SYSTEM NETWORKS



6.2 Redundant System Network Overview

A redundant system can be applied to the following seven networks. (Network modules must be mounted on the main base units.)

- CC-Link IE Controller Network
- MELSECNET/H PLC to PLC network
- MELSECNET/H Remote I/O network
- MELSECNET/10 PLC to PLC network *1
- Ethernet
- CC-Link
- PROFIBUS-DP
- * 1: When connecting to MELSECNET/10 PLC to PLC network in redundant system, set MELSECNET/H to MELSECNET/10 mode. For details, refer to the following manual.
 - Q Corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)

The above networks can continue the data link and communication with external devices, even when an error occurs in the control system.

However, system switching does not occur when an error occurs in the CC-Link. The system switching-dedicated instruction is necessary to perform system switching. Refer to the corresponding network manual, for details of the network used.

The network modules for networks other than the abovementioned and serial communication modules, etc., cannot be mounted on a main base unit for redundant system.

Mount them to the remote I/O station or extension base unit in the MELSECNET/H Remote I/O network.

OVERVIEW

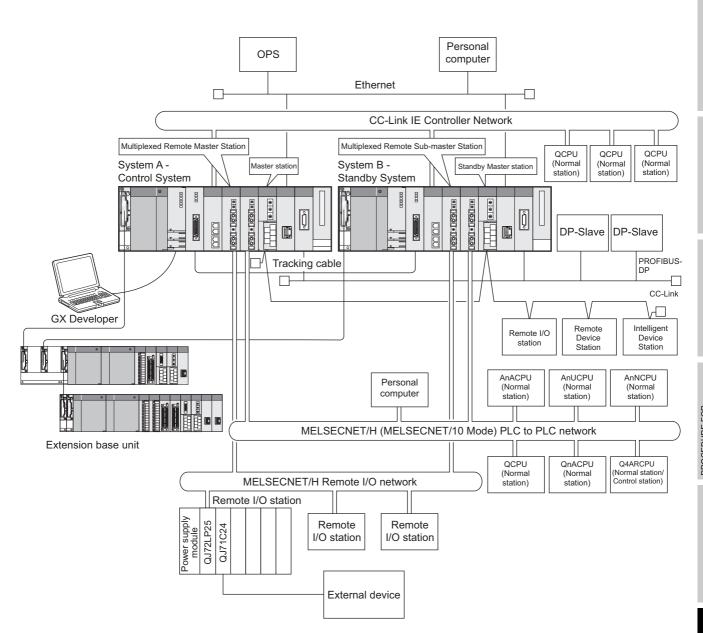


Diagram 6.6 Redundant System Network





6.2.1 CC-Link IE Controller Network or MELSECNET/H PLC to PLC network

In a redundant system, the data link is continued through system switching even when an error occurs in the control system or control system network.

(1) Overview of Communication between Control System and Standby System Network Modules

In a redundant system, the control system network module carries out cyclic data communication, as the control system and standby system form one system. The standby system network module receives cyclic data from the other station in order to continue control even when system switching occurs.

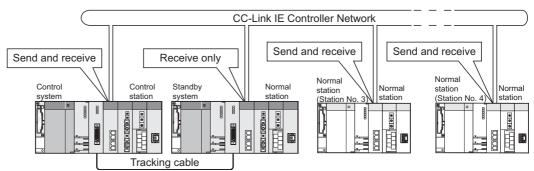


Diagram 6.7 Communication between Control System and Standby System Network Modules

(2) Redundant System Operation at System Switching due to Control System Error

When system switching occurs due to a control system error, the data link is continued by the network module mounted on the new control system.

[Example]

REDUNDANT SYSTEM NETWORKS

Diagram 6.8 shows the redundant system operation when a stop error occurs in the control system CPU module, on the assumption that the control system network module is the control station of station No. 1, and the standby system network module is the normal station of station No. 2.

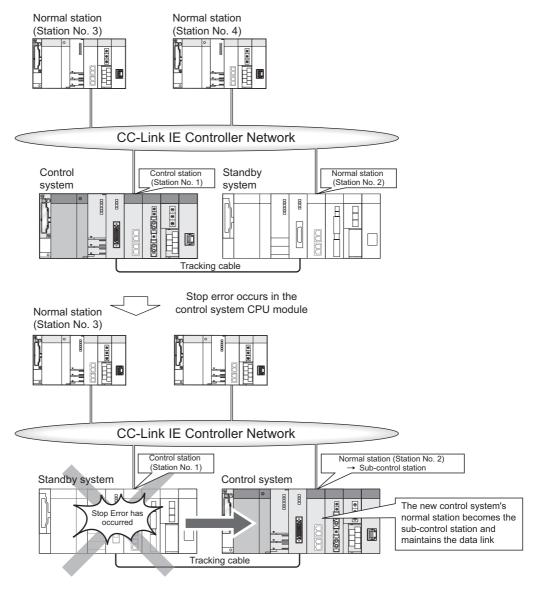


Diagram 6.8 Operation When System Switching Occurs Due to Control System Error

REDUNDANT SYSTEM NETWORKS



(3) Redundant System Operation when a Communication Error Occurs in CC-Link IE Controller Network or MELSECNET/H PLC to PLC Network

(a) Continuation of Data Link via System Switching

When a communication error occurs in CC-Link IE Controller Network or MELSECNET/H PLC to PLC network, system switching is performed according to the following procedure so that the data link will be continued.

- 1) When detecting a communication error, the control system network module issues a system switching request to the control system CPU module.
- 2) When receiving the system switching request from the network module, the control CPU module performs END processing. Through the processing, system switching is performed.
- 3) After system switching is completed, the new control system network module continues the data link.
 - The standby system network module does not issue a system switching request even when a communication error occurs in CC-Link IE Controller Network or MELSECNET/H PLC to PLC network.

6 REDUNDANT SYSTEM NETWORKS



[Example]

Diagram 6.9 shows the redundant system operation when the control system network module detects a communication error, on the assumption that the control system network module is the control station of station No.1, and the standby system network module is the normal station of station No. 2.

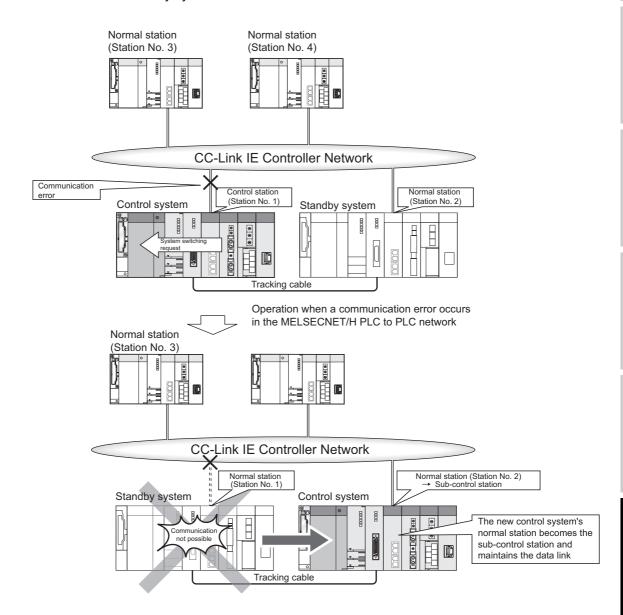


Diagram 6.9 Continuation of Data Link via System Switching





(b) Operation of New Standby System Network Module

The new standby system network module that has developed a communication error is cut off from the network.

When the network communication error is cleared, the new standby system network module is returned to the network as the normal station.

(4) Station No. Settings for the Network Module

Set the station Nos. for network modules mounted on system A and system B of a redundant system with consecutive numbers.

[Example]

If station No. 3 is set for system A network module, system B network module can be set as station No. 2 or station No. 4.

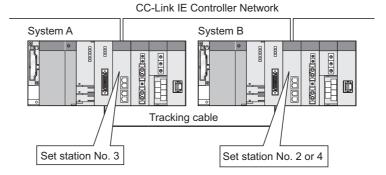


Diagram 6.10 Station No. settings for the network module

REDUNDANT SYSTEM NETWORKS



(5) Network Parameter Settings

The "host transmission ranges" of the network modules of system A and system B must be identical by making the pairing settings, as the systems form a redundant system.

For the control stations of network systems connected to a redundant system, make sure to make the pairing settings for the station Nos. of the network modules of system A and system B in the network parameter settings.*1

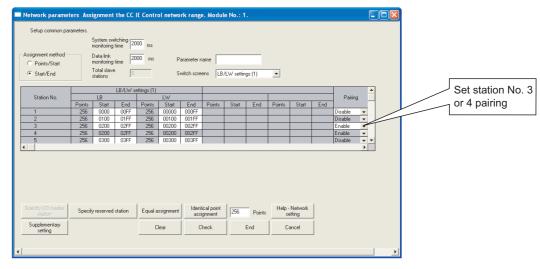


Diagram 6.11 Network Parameter Settings

* 1 : In the debug mode, the CPU module uses the parameters for system A to operate. Therefore, the station set as system B in the network parameters becomes absent station (disconnected station).

Refer to the following manual, for network parameters.

CC-Link IE Controller Network Reference Manual

Q Corresponding MELSECNET/H Network System Reference Manual
(PLC to PLC Network)





Pairing settings can be made for the following CPU modules that can work as the control station.

- Redundant CPU *1
- High performance model QCPU *1
- Process CPU *1
- Basic model QCPU *1
- Universal model QCPU *1
- Q4ARCPU *1 *2

When connecting a redundant system to the network that includes the CPU module other than above, for which control station network parameters have been set, change the system A or system B of the redundant system to the control station.

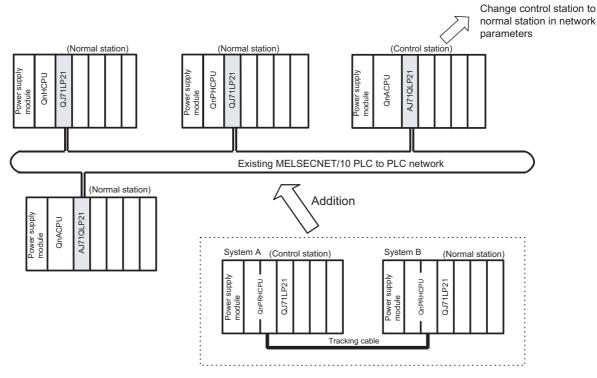


Diagram 6.12 Changing the Control Station When Adding Redundant System

- * 1 : Refer to Section 2.3, for GX Developer that supports a redundant system (including pairing settinas).
- *2 : The pairing settings cannot be made with the Q4ARCPU in the CC-Link IE Controller Network.

(6) Startup Order of System A and System B

No restrictions apply to the startup order of system A and system B when connected to the CC-Link IE Controller Network or MELSECNET/H PLC to PLC network. After starting up system A and system B, the control system and standby system are determined, and then the data link is continued.

REDUNDANT SYSTEM NETWORKS



(7) Precautions for Using Redundant System in CC-Link IE Controller Network or MELSECNET/H PLC to PLC Network

(a) Programming of CC-Link IE Controller Network or MELSECNET/H

CC-Link IE Controller Network or MELSECNET/H network detects a temporary communication error depending on conditions such as power supply ON/OFF or cable and noise.

Create the program using CC-Link IE Controller Network or MELSECNET/H so that it will not stop controlling even when the temporary communication error is detected.

(b) Error detection by turning ON/OFF other station (including standby system)

When turning ON/OFF power supply of the other station (including standby system) CPU module or booting and shutting down the personal computer where CC-Link IE Controller Network interface board or MELSECNET/H board is mounted, CC-Link IE Controller Network module or MELSECNET/H module of the control system may issue a system switching request, detecting a temporary communication error.

When the above-mentioned system switching request is issued before the standby system is started up, a continuation error "CAN'T SWITCH" may be detected in the control system CPU module. In this case, control can be continued normally. Therefore, create the program so that control will not be stopped due to error detection.

For canceling the error "CAN'T SWITCH", refer to Section 8.1.16. For details of CC-Link IE Controller Network or MELSECNET/H, refer to the following manual.

CC-Link IE Controller Network Reference Manual

Q Corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)

(c) Usage in debug mode when CC-Link IE Controller Network modules are mounted

When CC-Link IE Controller Network modules are mounted, do not connect CC-Link IE Controller Network module on both systmes to the network at the same time.

In the debug mode, the system B CPU module uses the same parameters for the system A CPU module for operation. Therefore, control station overlap and station number overlap occur when connecting to the network at the same time.





6.2.2 MELSECNET/H Remote I/O network

A redundant system uses a multiplexed remote I/O system of MELSECNET/H remote I/O network to continue the control of remote I/O stations even when system switching occurs. The multiplexed remote I/O network system consists of "multiplexed remote master station" that controls remote I/O stations, and "multiplexed remote sub-master stations" that is for backup of multiplexed remote master station.

In a redundant system, make sure to set system A as the multiplexed remote master station, and system B as the multiplexed remote sub-master station.

(1) Overview of Remote I/O Stations

The control system network module (multiplexed remote master station) performs data control with remote I/O station by data transmission, and data transmission with the multiplexed remote sub-master station.

The standby system network module (multiplexed remote sub-master station) receives data from remote I/O stations and sends/receives data to/from the multiplexed remote master station in order to take over the control of remote I/O stations even when system switching occurs.

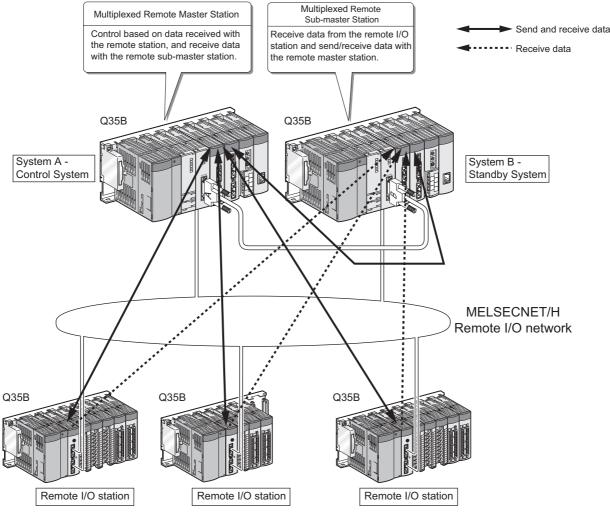


Diagram 6.13 Overview of Remote I/O Station

(2) Redundant System Operation at System Switching

REDUNDANT SYSTEM NETWORKS

When system switching occurs, the new control system network module operates as the master station, and takes over the control of remote I/O stations.

Diagram 6.14 shows a redundant system operation when a stop error occurs in the control system CPU module.

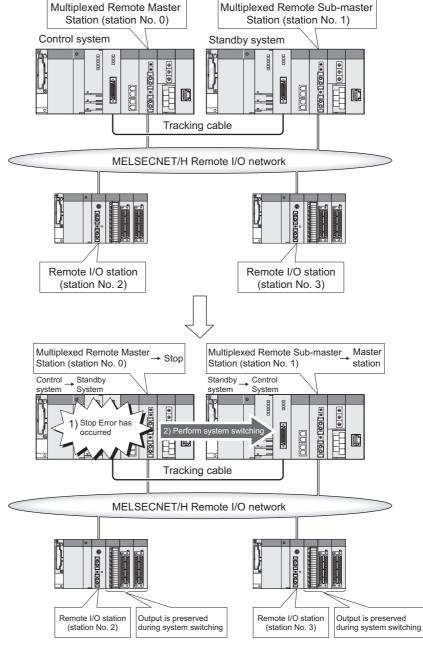


Diagram 6.14 Redundant System Operation at System Switching





(3) Redundant System Operation when a Communication Error Occurs in the MELSECNET/H Remote I/O Network

(a) System Switching Procedure

When a communication error occurs in the MELSECNET/H remote I/O network, system switching is performed according to the following procedure, so that the data link will be continued.

- When a communication error occurs in the MELSECNET/H remote I/O network, the control system network module issues a system switching request to the control system CPU module.
- 2) When receiving the system switching request from the network module, the control system CPU module performs END processing. Through the processing, system switching is performed.
- 3) After system switching is completed, the new control system network module continues the data link.

MELSEG Q series

REDUNDANT SYSTEM NETWORKS



The remote I/O station's output is held during system switching.

[Example]

Diagram 6.15 shows the redundant system when the control system network module detects a communication error, on the assumption that the control system network module is the master station, and the standby system network module is the sub-master station.

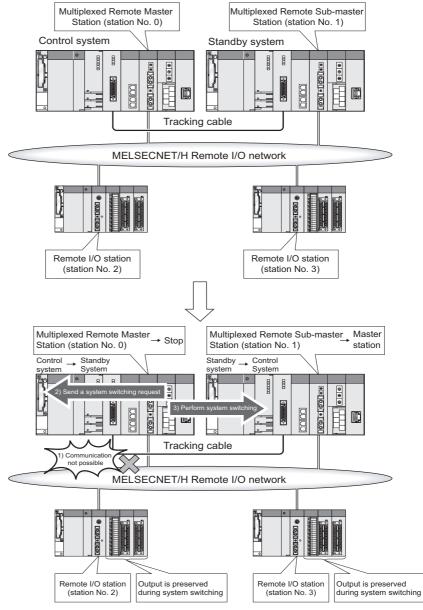


Diagram 6.15 Output Status during System Switching





(4) Network Module Station No. Settings

Set station No. 0 (multiplexed remote master station) for the network module which is mounted on system A.

Set any of station No. 1 to 64 for the network module that is mounted on system B. If the network module mounted on system B is set to station No. 0, the "LINK PARA.ERROR (error code: 3101)" stop error will occur.

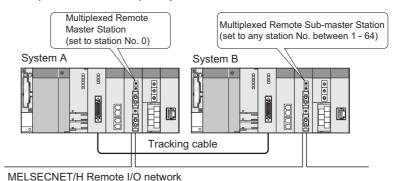


Diagram 6.16 Network Module Station No. Settings

(5) Network Parameter Settings

In the network parameters for system A and system B, set the network type identically as "MNET/H (multiplexed remote master)".*1

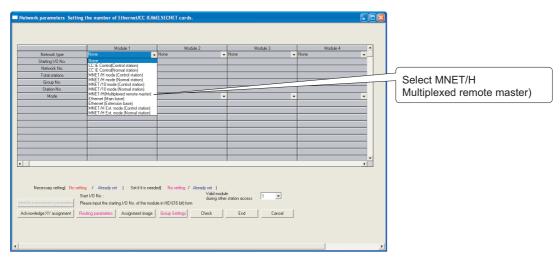


Diagram 6.17 Network parameter Setting the number of Ethernet/CC IE/MELSECNET cards

* 1 : In the debug mode, the CPU module uses the parameters for system A to operate. Therefore, the station set as system B in the network parameters becomes absent station (disconnected station).

Refer to the following manual for network parameters.

Q Compatible MELSECNET/H Network System Reference Manual (Remote I/O Network)

MELSEG Q series

REDUNDANT SYSTEM NETWORKS



No restrictions apply to the startup order of system A and system B when connected to the MELSECNET/H remote I/O network.

After starting up system A and system B, the control system and standby system are determined, and then the data link is started.

(7) Checking the Standby System Operating Status

After power-ON, the status of a MELSECNET/H module on the standby system can be checked with the following link special relays (SB) on the control system CPU module side.

- SB0075: Remote master station cyclic transmission status
- SB0076: Remote sub-master station cyclic transmission status

When both of the above link special relays (SB) are OFF, the MELSECNET/H module on the standby system is running normally.



(8) Detecting Configuration Mismatch for the Remote I/O Station in the Master Station and Sub-master Station

When a disconnection occurs in the system connected to the MELSECNET/H multiplexed remote I/O network, the accessible remote I/O stations might be different between the control system (master station) and standby system (sub-master station). In this case, as control cannot be continued after system switching, the "UNIT LAY. DIFF. (error code: 6036)" stop error (specific to the standby system in the backup mode) occurs in order to prevent system switching.

The abovementioned operation, i.e., checking whether the accessible remote I/O stations for the master station and sub-master station are identical, is called the "network separation check".

The "UNIT LAY. DIFF" occurs in the MELSECNET/H multiplexed remote I/O network that uses optical cables, when a disconnection occurs simultaneously at the following locations.

- Between the master station and sub-master station
- · Other than above location

In the diagram below, the "UNIT LAY. DIFF" occurs when a disconnection occurs simultaneously at point A and any of point B to D.

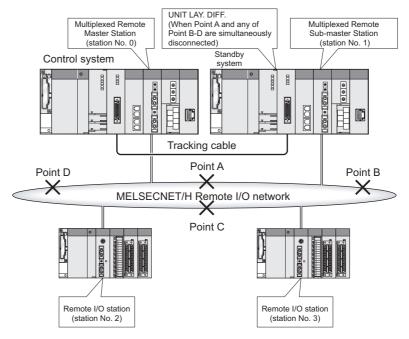


Diagram 6.18 Error Detection at Cable Disconnection

Table 6.2 shows the transmission possibilities when a disconnection occurs at Point A only and when a disconnection occurs simultaneously at Point A and Point C.

Table 6.2 Transmission Possibilities when Disconnection Occurs at Point A and Point C

	At Poin	t A Only	At Points A and C		
	System A CPU Module	System B CPU Module	System A CPU Module	System B CPU Module	
1 Station	0	0	×	0	
2 Stations	0	0	0	×	
3 Stations	0	0	×	0	


 \bigcirc :Possible, \times :Not Possible

REDUNDANT SYSTEM NETWORKS



(9) Operation Mode Setting for Error Occurrence

For Redundant CPUs and MELSECNET/H remote I/O stations, the operation mode for occurrence of "fuse blown" and "module verify error" can be preset in PLC RAS settings in PLC parameter.*2

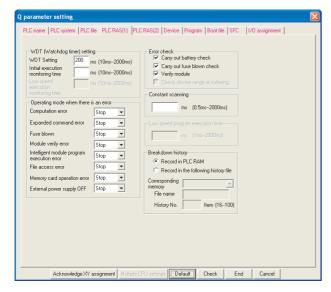

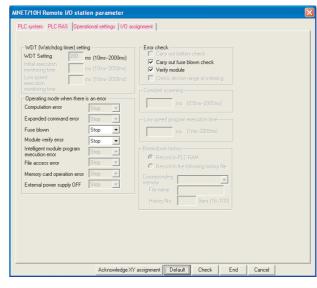


Diagram 6.19 In the case of Redundant CPU

Diagram 6.20 In the case of Remote I/O Station

Different error-time operation modes can be set to the Redundant CPU (remote master station) and remote I/O station.

When an error (fuse blown or module verify error) occurs in a Redundant CPU (remote master station) and a remote I/O station, the data link and output of the remote I/O station is determined by the combination of the error-time operation mode settings of the Redundant CPU (remote master station) and remote I/O station. The following describes the data link and output status of the remote I/O station determined by the combination of the parameter settings.

(a) Operation when error occurs in Redundant CPU (remote master station)

Table6.3 Operation When Error Occurs in Redundant CPU (Remote Master Station)

	peration mode for occurrence	Redundant CPU	Data link operation of MELSECNET/H remote I/O	Output operation from remote	
Redundant Remote I/O CPU station		control status	network	I/O station	
Stop	Stop Continue	Stops control. (Stop error)	All stations stop data link.	Depends on the output mode hold/clear settings for error occurrence.*3	
Continue	Stop Continue	Continues control. (Continue error)	All station continue data link.	All stations output normally.	

- * 2 : Refer to the following manual for details of the PLC RAS setting.
 - QCPU User's Manual (Function Explanation/Program Fundamentals)
- * 3 : Set the output mode for error occurrence in the I/O assignment detailed setting of the PLC parameter dialog box.

Refer to the following manual for details of the I/O assignment detailed setting.

QCPU User's Manual (Function Explanation/Program Fundamentals)





(b) Operation when error occurs in remote I/O station

Table6.4 Operation When Error Occurs in remote I/O station

Settings of operation mode for error occurrence Redundant Remote I/O		Redundant CPU control status Data link operation of MELSECNET/H remote I/O network		Output operation from remote I/O station	
CPU	station		Hetwork		
	Stop	Ctone control	All stations stop data link.	Depends on the output mode	
Stop	Continue	Stops control. (Stop error)		hold/clear settings for error	
				occurrence.*4	
		Continues control. (Continue error)	The faulty station is disconnected	The output of the faulty station	
	Stop		from the system.	follows the hold/clear setting in	
Continue			The other stations continue	the error-time output mode.*4	
			normal data link.	All stations output normally.	
	Continue		All stations continue data link.	All stations output normally.	

^{* 4 :} Set the output mode for error occurrence in the I/O assignment detailed setting of the PLC parameter dialog box.

Refer to the following manual for details of the I/O assignment detailed setting.

QCPU User's Manual (Function Explanation/Program Fundamentals)

(10)Precautions for Using Redundant System in MELSECNET/H Remote I/O Network

(a) Programming of MELSECNET/H

The MELSECNET/H network detects a temporary communication error depending on conditions such as power supply ON/OFF or cable and noise. Create the program using the MELSECNET/H so that it will not stop controlling even when the temporary communication error is detected.

(b) Error detection by turning ON/OFF other station (including standby system)

When turning ON/OFF power supply of the other station (including standby system) CPU module or booting and shutting down the personal computer where the MELSECNET/H board is mounted, the MELSECNET/H module of the control system may issue a system switching request, detecting a temporary communication error.

When the above-mentioned system switching request is issued before the standby system is started up, a continuation error "CAN'T SWITCH" may be detected in the control system CPU module. In this case, control can be continued normally. Therefore, create the program so that control will not be stopped due to error detection.

For canceling the error "CAN'T SWITCH", refer to Section 8.1.16.
For details of the MELSECNET/H network system, refer to the following manual.

Q Corresponding MELSECNET/H Network System Reference Manual

(PLC to PLC network)

MELSEG Q series

REDUNDANT SYSTEM NETWORKS



External devices use MC protocol, fixed buffers, random access buffers, data link instructions, etc. to communicate with the CPU modules of a redundant system.

Partner products including EZ Socket*1 can also communicate with them through OPS connection.

Refer to the following manual below for details.

PQ-Corresponding Ethernet Interface Module User's Manual (Basic)

* 1: Indicates the FA communication middleware for programmable controllers, servos, robots, NC, etc. made by Mitsubishi Electric, which consists of the Windows® API (Application Programming Interface). By using EZ Socket, each partner company can easily develop FA-related application software using FA devices made by Mitsubishi Electric, which operate on Windows® personal computers.

⊠POINT

Ethernet module can be mounted to the main base unit or extension base unit. Note that dedicated instructions cannot be used when it is mounted to the extension base unit. When using dedicated instructions, mount it to the main base unit.





The control system Ethernet module can issue a system switching request to the control system CPU module when it detects a communication error or disconnection*2.

System switching is carried out when the control system CPU module receives the system switching request from that Ethernet module.

The system switching request can be set to be issued or not in the network parameters, as indicated in (3).

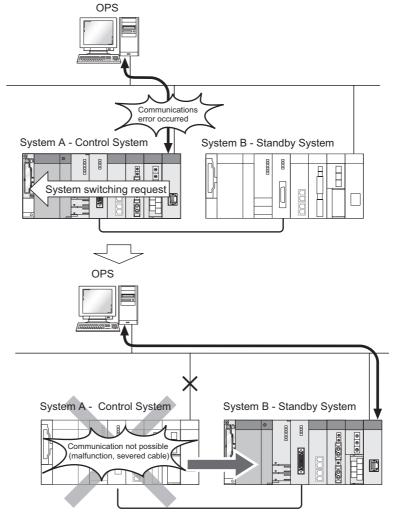


Diagram 6.21 Operation when a communication error or disconnection is detected

* 1: Only the QJ71E71-100 can detect disconnection.

Remark

A system switching request is not issued when Ethernet interface module is mounted to the extension base unit.



(1) Overview of Communication with External Devices

(a) Communication by MC Protocol, and Data Link Instructions

For MC protocol, external devices can communicate with the specified system, i.e., control system, standby system, system A, or system B.

(b) Communication by Fixed Buffers and Random Access Buffers

For fixed buffers and random access buffers, external devices can communicate with the control system Ethernet module only, as processing via sequence programs is necessary.

(2) External Device Operation at System Switching

When system switching occurs in a redundant system, external devices operate differently according to the communication method.

(a) In the case of OPS connection

When system switching occurs in a redundant system, the OPS automatically switches the connection path, and continues the communication.

[Example]

Diagram 6.22 shows the external device operation when the control system Ethernet module detects a communication error.

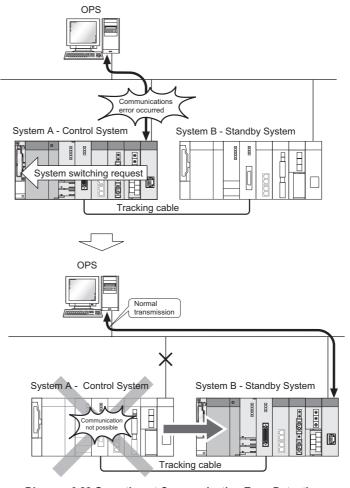


Diagram 6.22 Operation at Communication Error Detection





(b) Communication with the Control System/Standby System by MC Protocol or Data Link Instructions

Even when system switching occurs in a redundant system, communication can be continued if the communication path is normal.

When the communication cannot be continued the external device develops a communication error. In this case, review the communication path and restart the communication.

(c) Communication other than above

When system switching occurs in a redundant system, the external device develops a communication error occurs.

In this case, review the communication path and restart the communication.

(3) Network Parameter Settings

IP address, station No., and mode of Ethernet are set in [Redundant settings] of the network parameter in the redundant system.

(a) When mounting to the main base unit

When mounting to the main base unit, set [Network type] as [Ethernet (Main base)].

(b) When mounting to the extension base unit

When mounting to the extension base unit, set [Network type] as [Ethernet (Extension base)].

Write the set network parameters to the CPU modules of System A and System B.*1 Refer to the following manual, for network parameters.

PQ Corresponding Ethernet Interface Module User's Manual (Basic)

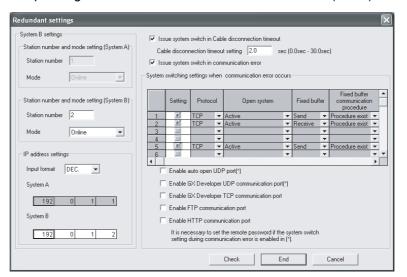


Diagram 6.23 Network Parameter Setting Screen

(4) System Startup Order

No restrictions apply to the startup order of system A and system B when connected to the Ethernet.

^{* 1 :} In the debug mode, the CPU module uses the parameters for system A to operate. Therefore, the station set as system B in the network parameters becomes absent station (disconnected station).

MELSEG Q series

REDUNDANT SYSTEM NETWORKS

6.2.4 CC-Link

A redundant system can continue the CC-Link control by CC-Link standby master function, even when system switching occurs.

When using this function, set the system A as "master station" that controls the data link, and system B as "standby master station" for backup of "master station".

Refer to the following manual, for CC-Link standby master function.

CC-Link System Master/Local Module User's Manual

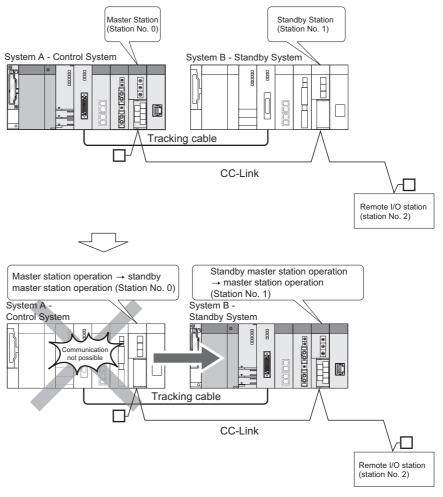


Diagram 6.24 CC-Link Operation at System Switching

⊠POINT

Auto refresh can be made when mounting the CC-Link master module to the extension base unit. Set the tracking device setting to the device where the auto refresh is performed.

When using the auto refresh, set [Refresh settings] of the network parameter. Set the tracking device setting to the device where the auto refresh is set.





(1) Overview of Remote Stations

In a redundant system, the control system master station controls remote stations and sends/receives data to/from standby system master station.

The standby system standby master station receives data from the remote stations and sends/receives data to/from the master station, in order to continue the CC-Link control even when system switching occurs.

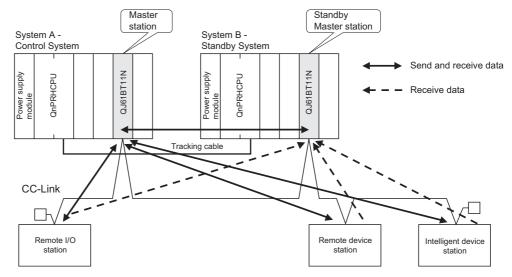


Diagram 6.25 Control of and Data Communication with Remote Stations

REDUNDANT SYSTEM NETWORKS



(2) Redundant system Operation at the time of System Switching

(a) When System Switching Occurs due to Control System Error

When an error occurs in the control system and system switching occurs, the new control system standby master station starts to operate as the master station and takes over the control of the remote stations.

Diagram 6.26 shows the redundant system operation when a stop error occurs in the control system CPU module.

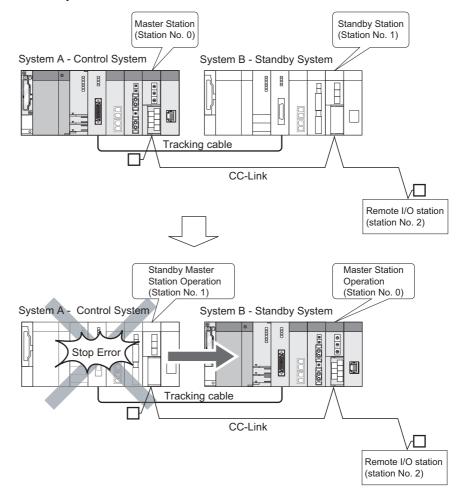


Diagram 6.26 Operation at System Switching due to Control System Error





(b) When System Switching Occurs due to Communication Error in Network other than CC-Link

When a communication error occurs in a network other than CC-Link, system switching occurs and the new control system takes over the control of the redundant system.

However, the new standby system master station does not switch to the standby master station, as it can communicate with remote stations.

Also, the new control system standby master station remains as the standby master station, and cannot control remote stations as the master station.

As a result, the new control system is unable to control the CC-Link.

Make sure to switch the data link control from the standby master station to the master station using the new control system's program.

Refer to Appendix 4 for program details.

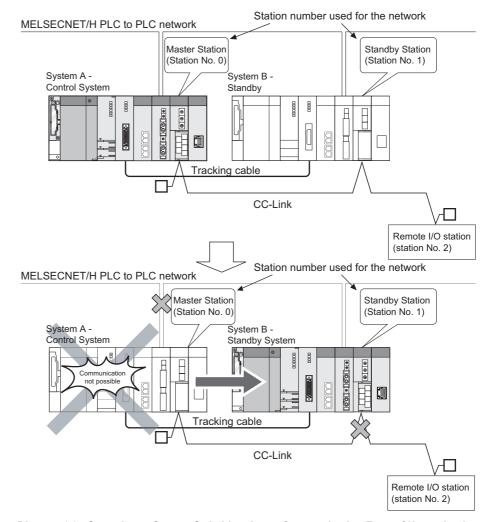


Diagram 6.27 Operation at System Switching due to Communication Error of Network other than CC-Link

REDUNDANT SYSTEM NETWORKS



(c) When System Switching is Manually Carried Out

When system switching is manually carried out, the new control system takes over the control of the redundant system.

However, the new standby system master station does not switch to the standby master station, as it can communicate with remote stations.

Also, the new standby system master station remains as the standby station and cannot control remote stations as the master station.

As a result, the new control system is unable to control the CC-Link.

Make sure to switch the data link control from the standby master station to the master station using the new control system's program.

Refer to Appendix 4 for program details.

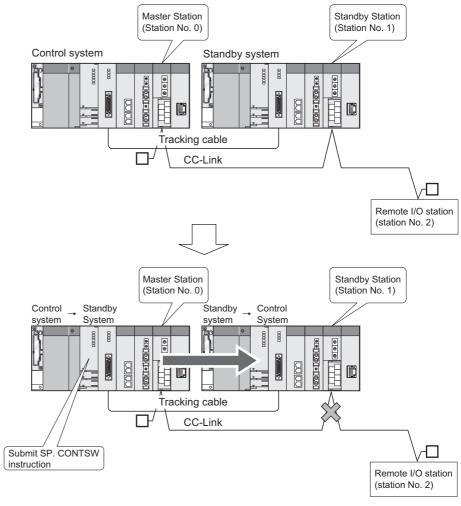


Diagram 6.28 Operation When System Switching Is Manually Carried Out





(3) Programs for Switching the Standby Master Station that Controls CC-Link

Refer to Appendix 4 for programs that switches the standby master station that controls the CC-Link from the previous control system standby master station to the new one when system switching occurs.

(4) Network Parameter Setting

Set [Type] (station type) of network parameter as follows:

- (a) When mounting to the main base unit
 Set station type as [Master station (Duplex function)].
- **(b) When mounting to the extension base unit**Set station type as [Master station (Extension base)].

Refer to Appendix 4 for network parameter settings.

(5) System Start-up

- (a) The QJ61BT11N whose first 5 digits of serial No. is "07112" or later When using the CC-Link, control by the CC-Link is enabled when starting up either system A or system B.
- (b) The QJ61BT11N whose first 5 digits of serial No. is "07111" or earlier When the redundant system is connected to CC-Link, start up the system so that system A will be the control system. Control via CC-Link cannot be performed when system B only is started up.

(6) Checking the operating status of standby system

After power-ON, the status of CC-Link master module on the standby system can be checked with the link special register (SW80) of the control system CPU module. If the normal data link status of the standby master station (the bit corresponding to the standby master station is OFF in SW80) stays ON for two seconds or more, the CC-Link master module on the standby system has started normally.

REDUNDANT SYSTEM NETWORKS

(7) Cautions

(a) Station number setting

Set CC-Link master module station number so that station number 0 is assigned to system A (master station), and other than station number 0 (standby master station) is assigned to system B.

(b) Tracking device setting

Set a device that makes auto refresh setting to the CC-Link master module on the extension base unit as a tracking device.

Do not set the link special relay (SB) and link special register (SW) as tracking transfer device to the CC-Link master module mounted on the main base unit.

(c) When using CC-Link

When the CC-Link master module is mounted on main base unit, the redundant system cannot start with the previous control system. (FF Appendix 5)

(d) Parameters in the debug mode

In the debug mode, the CPU module uses the parameters for system A to operate. Therefore, the station set as system B in the network parameters becomes absent station (disconnected station).

(8) Output Holding Time of Remote Station at System Switching

When system switching occurs, the remote station output is held until system switching is completed. (The remote station cannot be controlled from when system switching occurs until it is completed.)

Use the expression shown in Table6.5 to calculate the remote station output holding time (output holding time) at system switching occurrence.

Table6.5 Remote Station Output Holding Time

Reasons for System Switching	Output Holding Time Calculation Expression (ms)
Control system power off	•When (3 × LS) > 100ms
Control system CPU module reset	(Output holding time) = (error detection processing time*1) + 100 + 6 \times LS + SS + (I/O
Control system CPU module stop error	response time)
	•When 100ms > (3 × LS)
Control system CPU module hardware fault	(Output holding time) = (error detection processing time*1) + 200 + 3 \times LS + SS + (I/O
	response time)
System switching by GX Developer	•When (3 × LS) > 100ms
System switching by system switching	(Output holding time) = (error detection processing time*1) + 300 + 6 \times LS + 2 \times SS + (I/O
instruction	response time)
Out the second s	•When 100ms > (3 × LS)
System switching by system switching	(Output holding time) = (error detection processing time*1) + 400 + 3 \times LS + 2 \times SS + (I/O
request from network module	response time)

LS: Link scan time

Refer to the following manual for the link scan time calculation method.

CC-Link Master/Local Module User's Manual (Details)

SS: Sequence program scan time

* 1 : Use the value in Table6.6 as the error detection processing time.

Table6.6 Error Detection Processing Time

Transmission speed	Error detection processing time
10Mbps	5ms
5Mbps	8ms
2.5Mbps	15ms
625kbps	50ms
156 kbps	400ms



6.2.5 Serial Communication Modules

Mount the serial communication module on the MELSECNET/H remote I/O station or extension base unit. (The serial communication module cannot be mounted to the main base unit where the Redundant CPU module is mounted.)

Communication from the serial communication module to external devices can be made by MC protocol, nonprocedural protocol, and bidirectional protocol.

For MC protocol, external devices can communicate with the specified system, i.e., control system, standby system, system A, or system B.

Refer to the following manual for MC protocol.

GROUP OF CONTROL OF CO

⊠POINT -

When the extension base unit is mounted to the serial communication module, create programs using the FROM/TO instruction, since the dedicated instructions cannot be used.

For the sample program using the FROM/TO instruction, refer to Appendix 6.

MELSEG Q series

(1) Communication between External Devices and Control System CPU Module

(a) Communication by MC Protocol


1) When mounting to the extension base unit

There are restrictions on the connection destination depending on the command from the external device to MC protocol.

(Appendix 7 (1))

REDUNDANT SYSTEM NETWORKS

In addition, when system switching occurs, the communication timeout will occur since both old system and new system cannot respond. Therefore, perform retry processing by MC protocol.

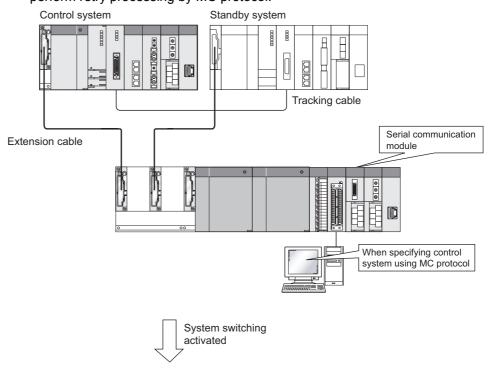

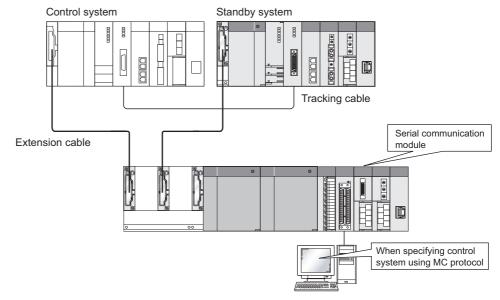


Diagram 6.29 Operation for Communication with Control System CPU Module by MC Protocol





2) When mounting to the main base unit

Specify the "control system" by MC protocol on each eternal device, and perform the communication with the control system CPU module. If the "control system" is specified by MC protocol, communication with the new control system CPU module can be performed, even when system switching occurs.

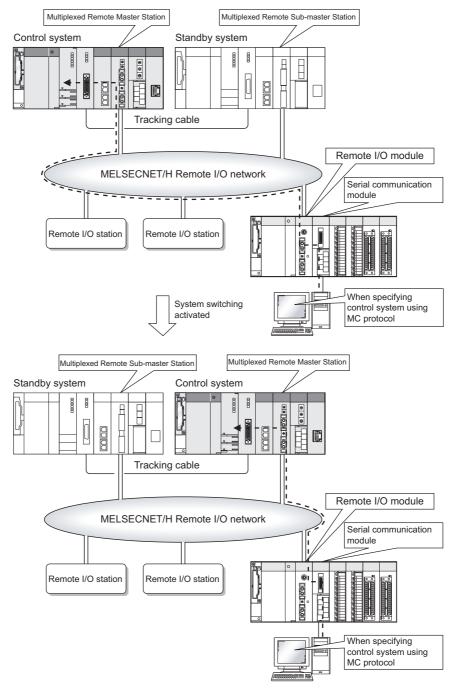


Diagram 6.30 Operation for Communication with Control System CPU Module by MC Protocol

(b) Communication by Nonprocedural Protocol/Bidirectional Protocol

For nonprocedural protocol/bidirectional protocol, communication with external devices can be performed using the control system CPU module's programs.



(2) Communication between External Devices and the Standby System CPU Module

(a) Communication by MC Protocol

REDUNDANT SYSTEM NETWORKS

Specify the "standby system" by MC protocol on each external device, and perform the communication with the control system CPU module. If the "standby system" is specified by MC protocol, communication with the new standby system CPU module can be performed, even when system switching occurs. Communication can be performed by MC protocol only.

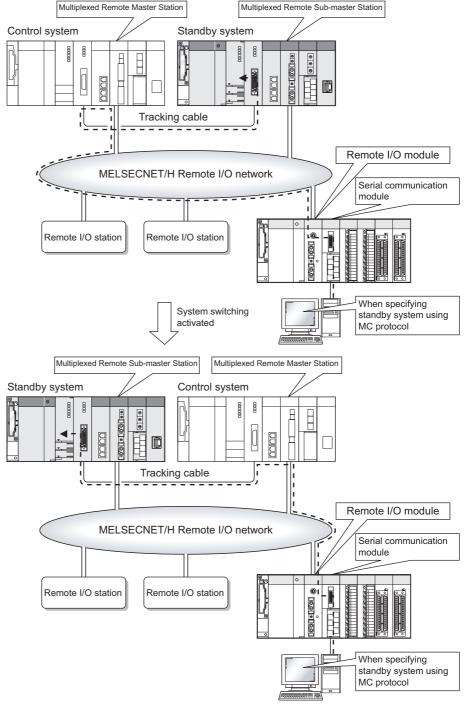


Diagram 6.31 Operation for Communication with Standby System CPU Module by MC Protocol





(3) Communication between External Devices and System A/System B

(a) Communication by MC Protocol

In order to perform the communication with the system A/system B CPU module, specify "System A" or "System B" on each external device by MC protocol.

If "System A" or "System B" is specified by MC protocol, communication with the specified system CPU module can be performed even when system switching occurs.

This communication can be performed by MC protocol only.

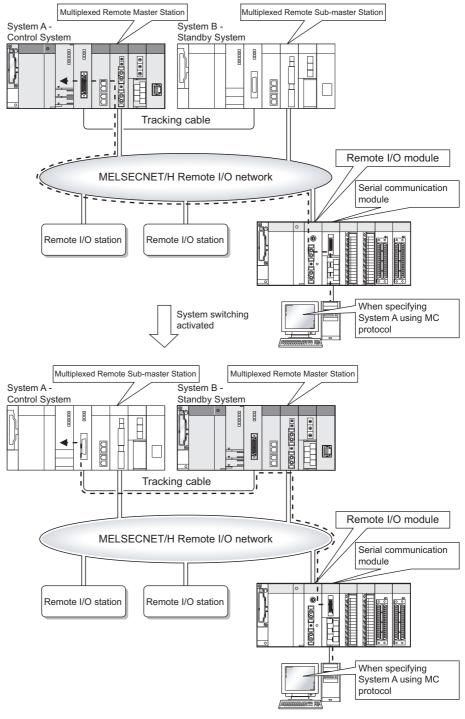


Diagram 6.32 Communication with System A CPU Module by MC Protocol

MELSEG Q series

REDUNDANT SYSTEM NETWORKS

6.2.6 PROFIBUS-DP

(1) Communication overview of the PROFIBUS-DP

In redundant system, when the PROFIBUS-DP master module detects a fault or communication failure with DP-Slaves, the standby system master module is switched to new control system master module and inherits the PROFIBUS communications.

(2) Operation at system switching

The PROFIBUS-DP master modules switch each system on the following cases.

- · When the PROFIBUS-DP master module detects a fault
- · When a communication failure with DP-Slaves is detected

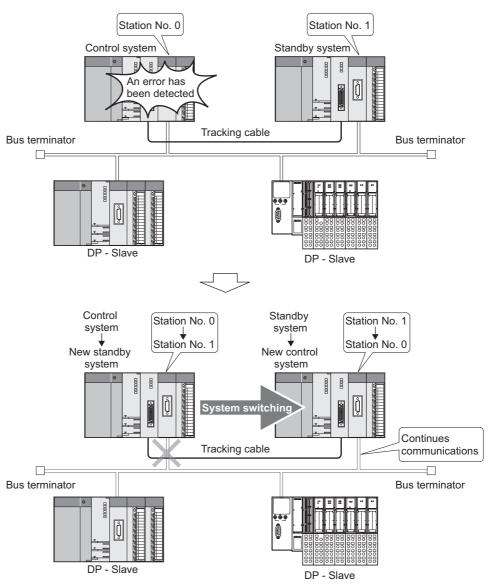


Diagram 6.33 Operation of the PROFIBUS-DP Master Module at System Switching





(3) Line redundant system

The line redundant system allows the system configuration using 2 lines, and either of the lines is used for slave station control. When an error occurs at the controlling line, the control is inherited to another line.

(4) Station number setting

Set the station number of the PROFIBUS-DP master module with GX Developer and GX Configurator-DP.

For details of setting method, refer to the following manual.

PROFIBUS-DP Master Module User's Manual

(5) Startup order of system A and system B

When using the PROFIBUS-DP master module, startup order of system A and system B is unrestricted.

After the both system is started up and assigned their system (Control system/ standby system), data link is started.

(6) Precautions when using the PROFIBUS-DP master modules in redundant system

(a) Function version of the PROFIBUS-DP master modules

Use the PROFIBUS-DP master modules of function version D or later.

(b) GX Developer version

Use GX Developer version 8.17T or later.

(c) At redundant system startup

 Check for an error of the PROFIBUS-DP master module at local station error information area (Un\G23071).

For local station error information area, refer to the following manual.

PROFIBUS-DP Master Module User's Manual

• When there is an error, clear the error to perform system switching.

(d) Continuing each function of the PROFIBUS-DP master module

For precautions to continue each function of the PROFIBUS-DP master module, refer to the following manual.

PROFIBUS-DP Master Module User's Manual

6.3 Communication between the Both Systems CPU Module and GOTs

REDUNDANT SYSTEM NETWORKS

When the GOT communicates with the standby system/control system CPU module, the communication target can be specified by the station No.

(The GOT cannot specify the system (control system, standby system, system A, or system B.))

Table6.7 shows connection method and connectability when the GOT is used in the redundant system. For the restrictions when the GOT is used in the redundant system, refer to the following manual.

GOT1000 Series Connection Manual (Mitsubishi Products)

Table 6.7 Connection Method of GOT and its Connectability in Redundant System

Connectio	n method	Connectability	Remarks
	Due competition		Not connectable since the stop error EXTEND BASE ERR. (error
	Bus connection	×	code: 2010)*1 occurs to the CPU module.
	CPU direct connection	0	
	Computer link		Not connectable since the serial communication module cannot be
	connection	×	mounted to the main base unit where the Redundant CPU is
Main base unit where			mounted.
Redundant CPU is	Ethernet connection	0	
mounted	CC-Link IE Controller	0	
	Network		
	MELSECNET/H PLC to PLC network	\circ	
	MELSECNET/10 PLC		
	to PLC network	0	
	CC-Link connection	0	
	Bus connection	×	Not connectable (No error occurs to the CPU module.)
	Computer link		
	connection	0	
	Ethernet connection	\circ	
	CC-Link IE Controller	×	Not connectable since CC-Link IE Controller Network module
Extension base unit	Network	^	cannot be mounted to the extension base unit.
	MELSECNET/H PLC to	×	Not connectable since MELSECNET/H module cannot be mounted
	PLC network MELSECNET/10 PLC		to the extension base unit. Not connectable since MELSECNET/H module cannot be mounted
	to PLC network	×	to the extension base unit.
	CC-Link connection	0	
	Bus Connection	×	
MELOCONET":	CPU Direct Connection	0	
MELSECNET/H remote I/O station	Computer Link		
I/O station	Connection	O	
	Ethernet connection	0	
	Bus Connection	×	
MELSECNET/10 remote	CPU Direct Connection	×	Not connectable since MELSECNET/10 is not compatible with the
I/O station	Computer Link	×	Redundant CPU.
	Connection	^	

 \bigcirc : Applicable, \times : N/A

^{* 1:} EXTEND BASE ERR. (error code: 2012) occurs to the CPU module whose first 5 digits of serial No. is "09012" or later.



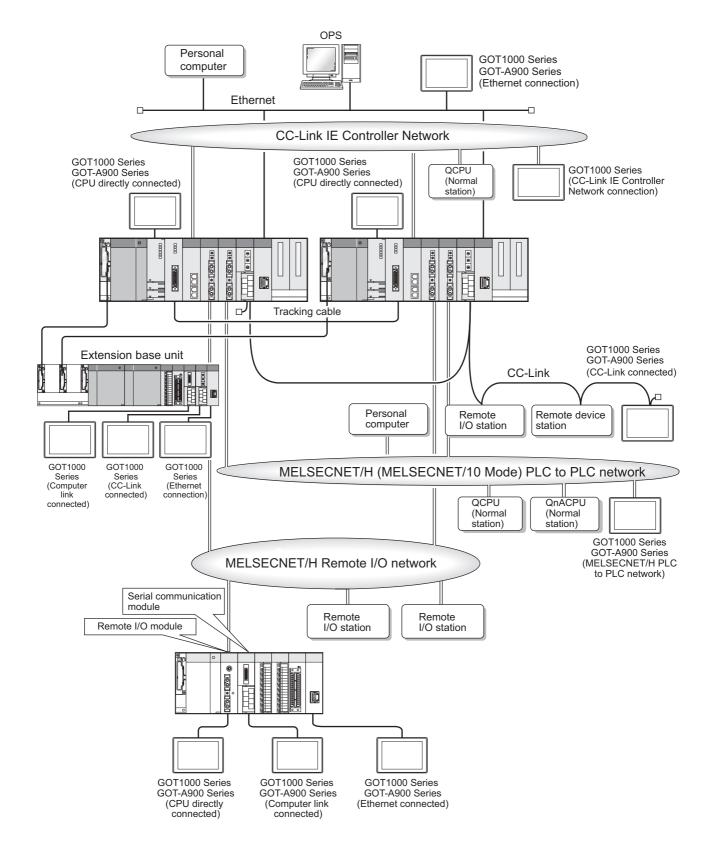


Diagram 6.34 GOT Connection Method Applicable to a Redundant System



6.3.1 When connecting GOTs to MELSECNET/H remote I/O station

For MELSECNET/H network connection, connect GOTs to a remote I/O module or serial communication module mounted on a MELSECNET/H remote I/O network remote I/O station.

The GOT cannot be connected to the base unit of a remote I/O station (bus connection). When connected to the base unit of a remote I/O station, the GOT will result in a communication error.

(1) GOT connection methods

Make sure to connect GOTs to a remote I/O station via "CPU direct connection" or "computer link connection".

For CPU direct connection, connect the GOT to the remote I/O module mounted on the remote I/O station via the RS-232 port.

For computer link connection, connect the GOT to a serial communication module mounted on a remote I/O station via the RS-232 port.

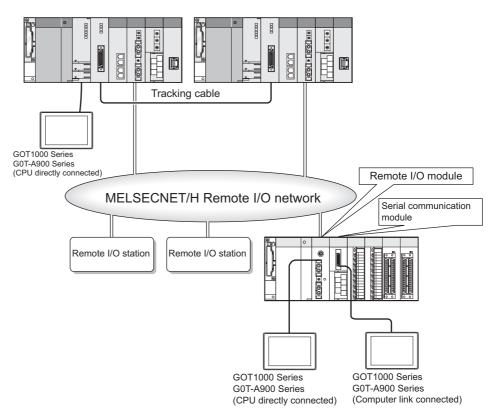


Diagram 6.35 GOT Connection Method

6 REDUNDANT SYSTEM NETWORKS



(2) Communication method

The GOT communicates with the control system CPU module since the remote I/O module communicates with the network module which operates as the master station by specifying station No. 0 in the GOT.

Even when system switching occurs, the remote I/O module communicates with the network module which operates as the master station in the new control system. Therefore, the GOT communicates with the new control system CPU module. For details, refer to the following manual.

GOT1000 Series Connection Manual (Mitsubishi Products)

REDUNDANT SYSTEM NETWORKS



6.3.2 When Connecting GOTs to CC-Link

As for the GOT, connect it to the CC-Link on the main base unit or CC-Link on the extension base unit, or connect it to the CC-Link communication module (AJ65BT-G4-S3) connected to the CC-Link.

The GOTs will work as intelligent device stations or a remote device stations, depending on the CC-Link communication module used.

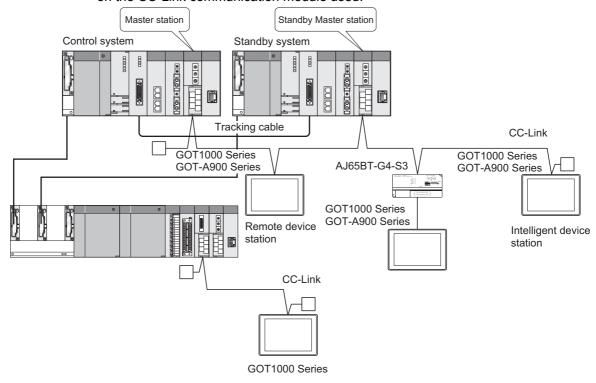


Diagram 6.36 System When Connecting GOTs to CC-Link

(1) GOT connection methods

The connection method for connecting GOTs to the CC-Link is referred to as "CC-Link connection".

In this method, mount a CC-Link communication unit (GOT-dedicated product) to a GOT, and then connect it to the CC-Link.

(2) Communication method

The GOT communicates with the control system CPU module of the master station by specifying station No. 0 in the GOT.

Even when system switching occurs, the network module of the new control system operates as the master station. Therefore, the GOT communicates with the new control system CPU module. (When connection is made via the extension base unit, the GOT always monitors the control system.)

For details, refer to the following manual.

GOT1000 Series Connection Manual (Mitsubishi Products)





6.3.3 Communication when the GOT is Connected to CC-Link IE Controller Network, MELSECNET/H, or MELSECNET/10 PLC to PLC Network

Connect GOTs to a CC-Link IE Controller Network, MELSECNET/H, or MELSECNET/10 PLC to PLC network.

(1) GOT connection type

The following shows connection type of the GOT.

- "CC-Link IE Controller Network connection" *1
- "MELSECNET/H connection (PLC to PLC network)"
- "MELSECNET/10 connection (PLC to PLC network)"

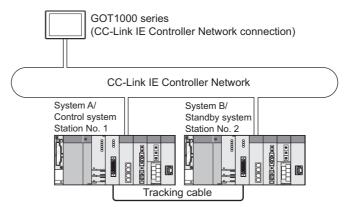


Diagram 6.37 GOT Connection Method (CC-Link IE Controller Network)

* 1: GOT-A900 series cannot be used in the CC-Link IE Controller Network connection.

(2) Communication method

(a) GOT1000 series

The GOT can monitor the control system of the redundant system by setting the Q redundant setting.

The monitoring target can be changed automatically even when system switching occurs.

For the function to enable this automatic changing of the monitoring target at the GOT, refer to the following manual.

GOT1000 Series Connection Manual (Mitsubishi Products)

(b) GOT-A900 series

The GOT specifies the target communication station connected to the MELSECNET/10 PLC to PLC network by the network No. and station No. It is necessary to create a screen to switch station No. of systems A and B to monitor when system switching occurs.

For details, refer to the following manual.

GOT-A900 Series User's Manual (GT Works2 Version2/GT Designer2 Version2 compatible Connection System Manual)

MELSEG Q series





6.3.4 When Connecting GOTs to a Ethernet

The GOT is connected to Ethernet module mounted on the main base unit or Ethernet module mounted on the extension base unit.

(1) GOT Connection Methods

Connect GOTs to a Ethernet via "Ethernet connection".

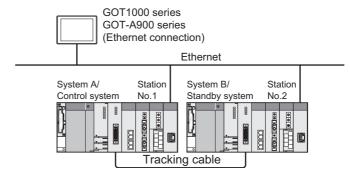


Diagram 6.38 GOT Connection Type (when Mounting to Main Base Unit)

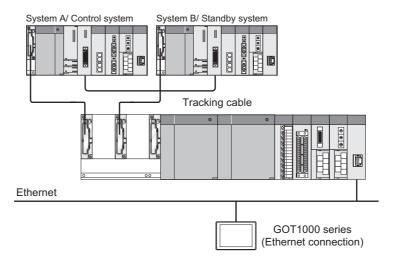


Diagram 6.39 GOT Connection Type (when Mounting to Extension Base Unit)



(2) Communication method

(a) GOT1000 series

The GOT can monitor the control system of the redundant system by setting the Q redundant setting.

The monitoring target can be changed automatically even when system switching occurs. (When connecting via the extension base unit, the control system is always monitored.)

For the function to enable this automatic changing of the monitoring target at the GOT, refer to the following manual.

GOT1000 Series Connection Manual (Mitsubishi Products)

(b) GOT-A900 series

The GOT specifies the target communication station connected to Ethernet by the network No. and station No.


It is necessary to specify the station No. of systems A and B when communicating with the redundant system in the GOT. It is also necessary to create a screen to switch station No. of systems A and B to monitor when system switching occurs in the redundant system.

For details, refer to the following manual.

GOT-A900 Series User's Manual (GT Works2 Version2/GT Designer2 Version2 compatible Connection System Manual)

MELSEG Q series

REDUNDANT SYSTEM NETWORKS



In a system using CC-Link IE Controller Network, MELSECNET/H, MELSECNET/10 or Ethernet, use of GX Developer or MC protocol allows communication with a redundant CPU by specifying "control system", "standby system", "System A" or "System B". Note that when accessing a redundant CPU from another network (network of different network No.), there are the following restrictions on the CPU modules that can be used as relay stations. (FF Table6.8)

Table 6.8 CPU Modules Applicable to Relay Stations for Communication with Redundant CPU from Other Networks

Serial No. of CPU module		06051 or earlier			06052 or later						
System specification		Not specified	Control system	Standby system	System A		Not specified	Control system	Standby system	System A	System B
CPU module model name	Q00JCPU Q00CPU Q01CPU Q02CPU Q02HCPU Q06HCPU Q12HCPU Q25HCPU Q12PHCPU Q25PHCPU	0	×	×	×	×	0	0	0	0	0

 \bigcirc : Applicable, \times : Inapplicable



REDUNDANT SYSTEM NETWORKS



[Example]

Diagram 6.40 shows a system configuration example for making communication by specifying the "control system" of a redundant system by GX Developer and MC protocol of other networks.

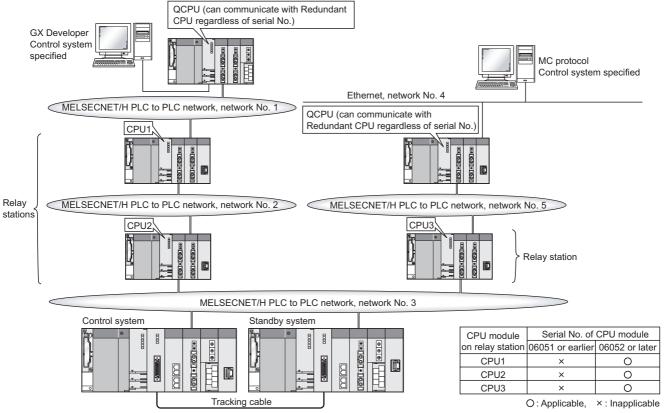


Diagram 6.40 System Configuration for Communication from Other Networks with "Control System" Specified

6.5 Precautions for Writing Device Data from Other Station

(1) Operation When System Switching Occurs Until Tracking Is Completed

When the devices of the control system CPU module where data have been written are set to within the tracking range, the device data written in the control system CPU module are also tracked to the standby system CPU module.

However, if system switching occurs due to any of the following reasons from when write of device data to the control system CPU module is completed until tracking is completed, the device data written in the control system CPU module are not tracked to the standby system CPU module.

· Control system power off

REDUNDANT SYSTEM NETWORKS

- · Control system CPU module reset
- Control system hardware fault
- · Control system CPU module stop error

At this time, the new control system CPU module after system switching uses the old device data for control.

(2) Checking for system switching after device data write

After writing device data to the control system CPU module by GX Developer or other means, check for system switching occurrence.

System switching can be checked by either of the following methods.

(a) Checking for system switching by verifying written device data

After write of device data to the control system CPU module is completed, read the written device data from the control system CPU module to check whether system switching occurred or not.

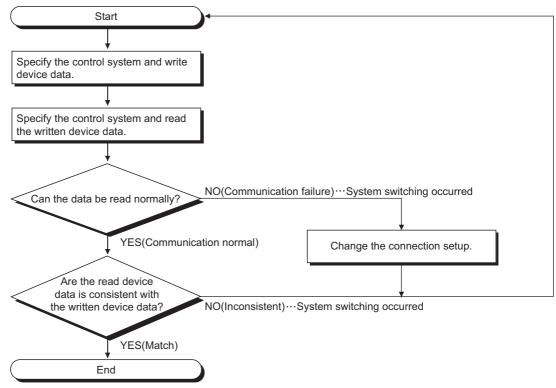


Diagram 6.41 Flowchart for Checking for System Switching with the Written Device Data



(b) Checking for system switching by system A and system B identification flags

Whether system switching occurred or not can be confirmed by checking the system A and system B identification flags before and after write of device data.

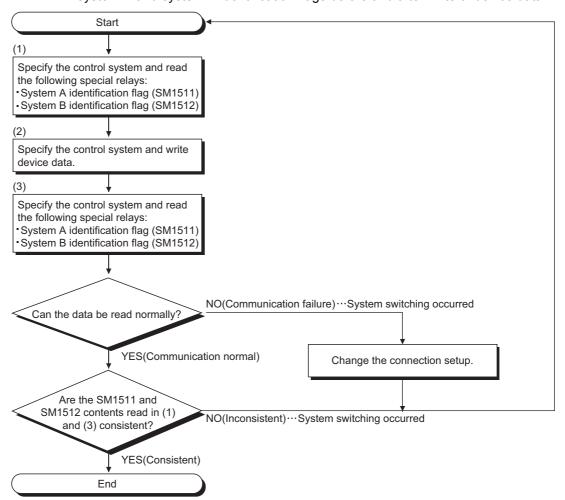


Diagram 6.42 Flowchart for Checking for System Switching with the system A and system B identification Flags

CHAPTER7 PROGRAMMING CAUTIONS

This chapter provides the programming cautions (restrictions on instructions, and fixed-scan clocks and fixed scan execution type programs).

7.1 Instructions Restricted in Use for Redundant System

Some instructions are restricted in use to a redundant system as indicated below.

(1) Instructions Requiring a Certain Number of Scans

(a) Instruction Operations

Some instructions require a certain number of scans from start to completion of the execution. If system switching conditions are satisfied while this kind of instruction is being executed, the CPU stops the execution and the relevant processings will not be completed.

In this case, it is necessary to use the user program to execute that instruction again after system switching.

Table 7.1 Instructions Requiring a Certain Number of Scans

Instruction Classification		Instruction Symbol	Execution Completion Signal
Data-processing	Sort	• SORT	Present
Instructions	Soit	• DSORT	Present
Character String	Read	COMRD	Present
Processing	Reau	COMIND	Fieseni
Other Convenient	Write data to specified file	SP.FWRITE	Present
Instructions	Read data to specified file	SP.FREAD	Present
Instructions Dedicated	to Intelligent Function Modules *1	_	Present

^{* 1:} Refer to the manual of the intelligent function module used, for the instructions dedicated to intelligent function modules.



(b) Countermeasures

 The instruction that includes the complete signal can be executed again by the new control system CPU module, if it has been suspended due to system switching.*2

However, note that the same instruction might be executed twice.

[Example]

In the following program example, when system switching occurs during execution of the REMFR instruction (M201 : ON) in an MELSECNET/H remote I/O system, the REMFR instruction is re-executed by the new control system CPU module.

System configuration
 Diagram 7.1 shows the system configuration for the example of the
 REMFR instruction programming.

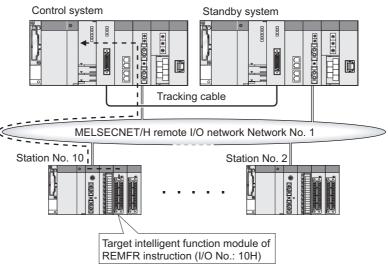


Diagram 7.1 System Configuration

· Relevant devices

Table 7.2 indicates the devices used in the program example for the REMFR instruction.

Table 7.2 Devices Used for Execution of REMFR Instruction

Device No.	Name	Remarks		
SB20	Module status	Refer to the following manual for details of		
SB47	Baton pass status of host	the link special relays (SB) and link special		
SB48	Status of host	registers (SW).		
SB49	Data link status of host	Q Corresponding MELSECNET/H		
SW70.9	Baton pass status of each station (10th station)	Network System Reference Manual		
SW74.9	Data link status of each station (10th station)	(Remote I/O Network)		
SM1518	Standby system to control system switching			
3111316	status flag			
M200	Read request flag			
M201	REMFR instruction execution flag			
M202	System switching-triggered REMFR instruction	Change the device number according to the		
IVIZOZ	re-request flag	system.		
M203	REMFR instruction completed flag			
M204	REMFR instruction abnormally completed flag			

^{* 2:} The complete signal is not tracked even it is set for tracking.

Program example
 Diagram 7.2 shows a program that reads data from the intelligent function module on the remote I/O station by the REMFR instruction.

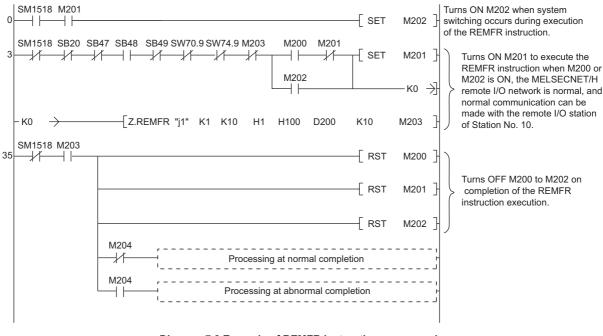


Diagram 7.2 Example of REMFR instruction programming

 The instruction that includes no execution completion signal or write instruction needs to be executed again, as it is difficult to determine if its execution is completed or not.

However, note that the same instruction might be executed twice.



(2) Rise Instruction

If signal flow memory has not been tracked, after system switching, the rise instruction is processed as explained below.

(a) Processing

When the systems are switched, the new control system CPU module turns on data in the signal flow memory.

For this reason, the CPU module does not execute the rise instruction even though the rise instruction execution condition is satisfied before the systems are switched.

(b) Relevant Instructions

- LDP,ANDP,ORP
- MEP
- PLS
- □ P (Examples: MOVP, INCP, etc.)
- SP. \square ,GP. \square ,ZP. \square ,JP. \square (Intelligent Function Module Dedicated Instructions)
- FF, LEDR, DUTY, TRACE, TRACER

(3) Fall Instruction

If signal flow memory has not been tracked, after system switching, the fall instruction is processed as explained below.

(a) Processing

When the systems are switched, the new control system CPU module turns on data in the signal flow memory.

For this reason, the CPU module executes the fall instruction again if the fall instruction execution condition is turned off before the systems are switched.

(b) Relevant Instructions

- LDF,ANDF,ORF
- MEF
- PLF

(4) SCJ Instruction

Note that jump processing for the specified pointer (P) varies with whether tracking signal flow memory has been tracked or not, if the SCJ instruction contact turns ON during system switching processing.


(a) When signal flow memory has not been tracked

Jumping is executed from the first scan after system switching.

(b) When signal flow memory has been tracked

Jumping is executed from the second scan or later after system switching.

(When Signal flow memory is not tracking)

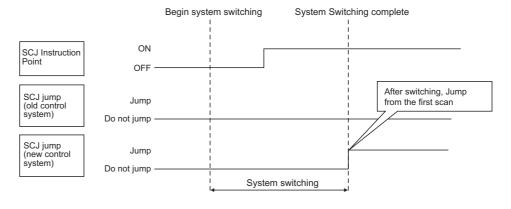

(When Signal flow memory is tracking)

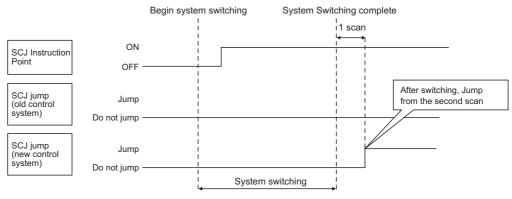


Diagram 7.3 ON/OFF Operation of SCJ Instruction When Signal Flow Has Been Tracked



(5) Instructions that Change CPU Status

When the instruction listed in Table7.3 is executed and the control system CPU module status changes, the information of the changed status will not be sent to the standby system CPU module.

Therefore, if system switching occurs, it is necessary to use the user program to execute that instruction in the new control system CPU, as necessary.

Table 7.3 Instructions that Change CPU Status

Instruction	Instruction Symbol	
	Disable Interrupt	DI
Program Execution Control	Enable Interrupt	El
	Interrupt Disable/Enable Setting	IMASK
	File Register Block No. Change	RSET
Change Instruction	File Register File Set	QDRSET
	Comment File Set	QCDSET
Application Instruction	Timing Clock	DUTY

(6) Restrictions when Using Special Relay (SM1518) "Standby System to Control System Switching Status Flag"

This section explains how the rise instruction, for which SM1518 has been set as its execution condition, is processed after system switching, on the assumption that signal flow memory has not been tracked.

(a) Processing

When system switching occurs, the control system CPU module turns on signal flow memory in all steps.

Therefore, the rise instruction, for which SM1518 has been set as its execution condition, cannot be executed after system switching.



Diagram 7.4 Program for DUTY Instruction Using SM1518

Create a program to be executed at the time of SM1518 shutdown using shutdown pulse operation contact as shown in the diagram below when startup execution instructions with SM1518 execution conditions are executed.

The instruction is executed at the second scan after system switching, in order that the fall instruction will be executed upon SM1518 fall.



Diagram 7.5 Program That Executes DUTY Instruction on the Falling Edge of SM1518

(b) Relevant Instructions

- PLS
- □ P(Examples: MOVP,INCP, etc.)
- SP. \square ,GP. \square ,ZP. \square ,JP. \square (Intelligent Function Module Dedicated Instructions)

(7) Restrictions on Use of COM and ZCOM Instructions

The COM and ZCOM instructions execute refresh between the Redundant CPU and network module during program execution.

In a redundant system, there are restrictions on the selection of the refresh items by the COM and ZCOM instructions.

Table 7.4 shows the refresh items by the COM and ZCOM instructions and whether they can be selected or not in the redundant system.

Table7.4 Refresh Items by COM and ZCOM Instructions and Whether They Can Be Selected or Not in Redundant System

Instruction symbol	Refresh item ^{*3}	Selection in redundant system
	I/O refresh	0
	Network module refresh	× *1
COM	Auto refresh of intelligent function module	×*2
	Auto refresh of CPU shared memory	×
	General data processing	0
ZCOM	Network module refresh	× *1
ZGOIVI	Auto refresh of intelligent function module	×* ²

 \bigcirc : Selectable, imes : Not selectable

* 1: Tracking is not executed when the COM or ZCOM instruction is executed. If system switching occurs due to any of reasons for system switching indicated in No. 1 of Table7.5 from when the COM instruction or ZCOM instruction is executed until tracking is completed, system switching is done without tracking being performed. Hence, any change made to the output to the network module by the COM/ZOM instruction in the control system CPU module will not be reflected on the standby system CPU module. Since the new control system CPU module provides the old output to the network module after system switching, the output from the network module may change.

Table 7.5 Reasons for System Switching and Output Changes at System Switching

No	Reasons for System switching	Output change when COM/ ZCOM instruction is used	
	Control system power off	Since system switching is	
1	Control system CPU module reset	executed without tracking, the	
'	Control system hardware fault	output may change at the time	
	Control system CPU module stop error	of system switching.	
	System switching request from network module	Since system switching is done	
2	System switching instruction execution	after tracking, the output does	
	System switching request from GX Developer or OPS	not change at system switching.	

- * 2: Not selectable since an intelligent function module cannot be mounted on the main base unit in the redundant system.
- * 3: For the COM instruction, select the refresh item with the special relay "Link refresh selection during COM instruction execution (SM775)" and special register "Link refresh selection during COM instruction execution (SD778)".



Rei	ma	rk

Refer to the following manual for details of the COM instruction and ZCOM instruction.

MELSEC-Q/L Programming Manual (Common Instruction)

(8) Dedicated instructions for intelligent function module mounted to extension base unit

The dedicated instructions for the intelligent function module mounted to the extension base unit cannot be used.

If used, a stop error "OPERATION ERROR" (error code: 4122) occurs.



For the dedicated instructions for the intelligent function module, refer to the manual for the intelligent function module to be used.

OVERVIEW

SYSTEM CONFIGURATION

TRACKING CABLE


7.2 Cautions on Fixed-Scan Clocks and Fixed Scan Execution Type **Programs**

(1) Fixed-scan Clocks (SM409 to SM415)

When system switching occurs, fixed-scan clock measurement is suspended until system switching is complete.

When system switching is complete, the new control system CPU module starts all fixed-scan clocks from OFF.

Therefore, the OFF time is extended (T+t') as shown in Diagram 7.6. The maximum value of the extension time when t=t' is (T+t).

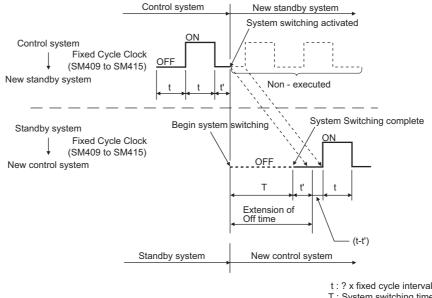

- T: System switching time
- t' : period between start of fixed cycle clock OFF and beginning of system switching $(0 \le t' < t)$

Diagram 7.6 Operations of Fixed-scan Clocks at System Switching

(2) Fixed-scan Clocks (SM420 to SM424)

When system switching is complete, SM420 to SM424 remain OFF in the new control system CPU module.

Execute the DUTY instruction in the new control system CPU module to make SM420 to SM424 usable in the new control system CPU module.

[Example]

A program starting an SM420 timing clock (1 scan: ON, 3 scan: OFF) by executing the DUTY instruction in the new control system CPU module.



Diagram 7.7 Program That Executes Fixed-scan Clock (SM420) after System Switching

* 1 : This is the contact point for 1 scan: ON in the new control system after SM1518 system switching.

If DUTY instructions are executed for SM1518 shutdown, the DUTY instructions are executed on the second scan following system switching.



(3) Fixed scan execution type Program

When system switching occurs, the execution of fixed scan execution type programs is suspended until system switching is complete.

When system switching is complete, the new control system CPU module starts counting the fixed-scan interval time from 0.

Therefore, the fixed scan execution interval time is increased (T+ α ') as shown in Diagram 7.8.

The maximum value for the extension time is (T+ α) when α = α '.

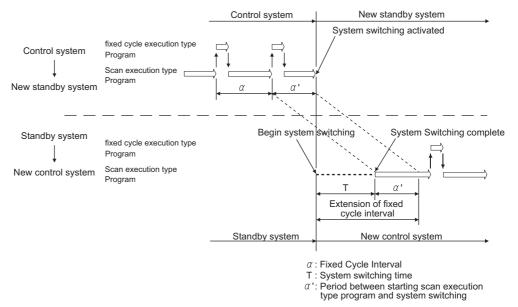


Diagram 7.8 Operations of Fixed Scan Execution Type Programs at System Switching

(4) Interrupt by the Internal Timer (I28 to I31)

When system switching occurs, execution of interrupt is suspended until system switching is complete.

Also, interrupt from the module mounted on the extension base unit cannot be made. When system switching occurs, the new control system CPU module starts counting the interrupt interval time from 0.

Therefore, the fixed scan execution interval is increased (T+ α ') as shown in Diagram 7.9.

The maximum value for the extension time is (T+ α) when α = α '.

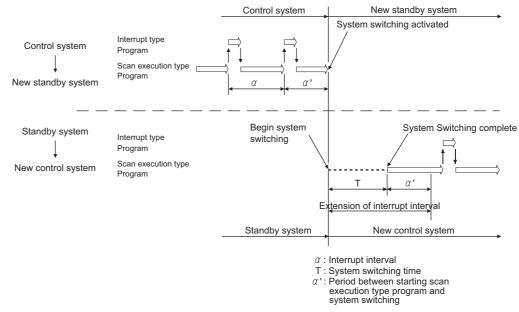


Diagram 7.9 Operations of Interrupts by Internal Timers at System Switching



(5) Interrupt from Network module

Execution of the interrupt program that corresponds to the interrupt factor sent from a network module varies according to the following conditions.

(a) When the Operation Mode is Backup Mode

1) When System Switching Occurs before Execution of the Interrupt Program

The control system CPU module holds the received interrupt factor, even when it becomes the standby system CPU module through system switching before the interrupted program is executed.

When switching is done again and the standby system CPU module returns to the control system CPU module, it executes the interrupt program for the held interrupt factor.

Since the interrupt factor accepted by the control system CPU module is not taken over by the new control system CPU module, the new control system CPU module does not execute the interrupt program of the interrupt factor accepted by the control system CPU module.

2) When the Standby System CPU Module receives an interrupt

The standby system CPU module holds the interrupt factor received from an intelligent function module.

When the standby system CPU module becomes the new control system CPU module through system switching, it executes the interrupt program for the held interrupt factor.

⊠POINT -

The interrupt program corresponding to the held interrupt factor is executed when the standby system CPU module becomes the control system CPU module through system switching.

If multiple interrupt factors are held in the standby system CPU module, the scan time is widely extended.

(b) When the Operation Mode is Separate Mode

Both control system CPU module and standby system CPU module execute interrupt programs for the interrupt factors sent from a network module.

(c) When the Operation Mode is Debug Mode

The control system CPU module executes an interrupt program for the interrupt factor sent from a network module.

(6) Interrupt during Tracking Processing

If interrupt is enabled (EI status) during END processing, when an interrupt is issued during tracking processing, the CPU will stop the tracking processing and execute the interrupt program.

Therefore, both data of before and after interrupt program execution might be tracked.

[Example]

The operations for interrupted (I31) execution via an internal timer are shown in Diagram 7.10.

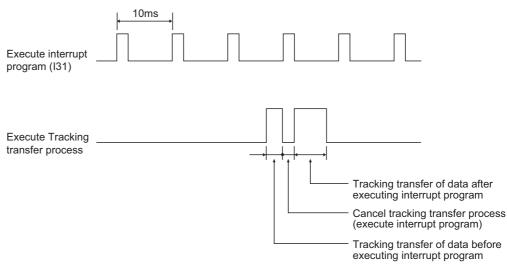


Diagram 7.10 Operations When Interrupt Is Executed by Internal Timer

When execution of programs interrupted during tracking processing is not done, execute DI instructions, then execute EI instructions at step 0 before executing END instructions, as shown in the program in the Diagram 7.11.

As interrupt is disabled during END processing (including tracking processing), the CPU will not execute the interrupt program.

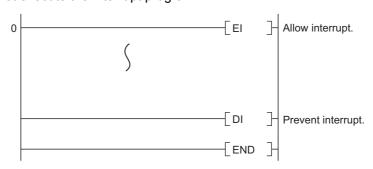


Diagram 7.11 Program Example That Disables Interrupts during END Processing

OVERVIEW

SYSTEM CONFIGURATION

გ 3

TRACKING CABLE

PROCEDURE FOR STARTING UP A REDUNDANT SYSTEM

REDUNDANT SYSTEM FUNCTIONS

REDUNDANT SYSTEM NETWORKS



7.3 Precautions for Using Annunciator (F) in Redundant System

The annunciator defaults to no tracking.

In the tracking setting of the Redundant parameter dialog box, the annunciator can be set to within the tracking range.

Table 7.6 provides an operation example of the control system and standby system CPU modules when the annunciator is set to within the tracking range and the annunciator (F10) is turned ON in the control system CPU module.

Table 7.6 Operations of Control System and Standby System CPU Modules When F10 Is Turned ON in Control System CPU Module

	Item	Control System CPU Module	Standby System CPU Module
F10	Annunciator	ON	ON
SM62	Annunciator detection	ON	OFF
SD62	Annunciator No.	The annunciator No. turned on is stored.	No change
SD63	No. of annunciators	Number of annunciators turned on is stored.	No change
SD64 to SD79	Annunciator detection number table	The annunciator No. turned on is stored.	No change
"USER" LED		On	Off

If system switching occurs when the annunciator (F10) turns on in the control system CPU module, whether the annunciator is on or not cannot be checked by the USER LED since the USER LED is off in the new control system CPU module.

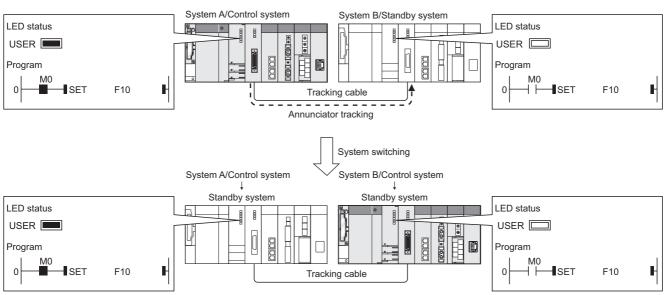


Diagram 7.12 Operation of USER LED When Annunciator (F10) Turns On

MELSEG Q series

Create the following program to turn on the "USER" LED of the new control system CPU module at occurrence of system switching.

(1) When turning on another annunciator at system switching to turn on the "USER" LED

When tracking the annunciator, create the following program to also turn on the "USER" LED of the new control system CPU module.

[Program example]

When any of the used 32 annunciators F0 to F31 is on in the new control system CPU module, the "USER" LED is turned on.

To turn off the "USER" LED, turn on the "USER" LED off command (M100).



Diagram 7.13 Program That Turns on the "USER" LED after System Switching

(2) When turning on the annunciators in the new control system CPU module at system switching

By turning on the annunciators in the new control system, the "USER" LED can be turned on.

(a) When turning on the annunciators by the "OUT" instruction

By tracking the "OUT" instruction execution condition, the annunciators can also be turned on in the new control system CPU module at system switching.




Diagram 7.14 Program That Turns on the Annunciators by the OUT Instruction after System Switching



(b) When turning on the annunciators by the "SET" instruction

By creating the following program and tracking the "SET" instruction execution condition, the annunciators can also be turned on in the new control system CPU module at system switching.

```
Tracking is executed

| \overline{M0} | SM1518 |
| SET | F10 |
| \overline{M1} | SM1518 |
| SM1518 |
| SET | F10 |
| \overline{M1} | SM1518 |
| SM1518 |
| SET | F10 |
| \overline{M0} | SM1518 |
| \overline{M1} | SM1518 |
| \overline{M
```

Diagram 7.15 Program That Turns on the Annunciators by the SET Instruction after System Switching

* 1: SM1518 is a contact that turns on in the new control at occurrence of system switching and remains ON for one scan.

7.4 Precautions at System Switching Occurrence

(1) Precautions regarding access to intelligent function module and external device


Depending on timing of system switching occurrence such as turning power supply OFF, tracking transfer processing may be discontinued, and the device data may not be reflected to the new control system CPU module after switching systems. In this case, the data output and the device data of the new control system CPU module may mismatch.

When the CPU module communicates with the intelligent function module or external device using the output (Y) and the buffer memory, a program may not operate properly due to device data mismatch after switching systems.

Diagram 7.17 shows operations when the system switching occurs before the tracking transfer processing is completed after outputting the output (Y).




· Input is returned corresponding to output



[Program example]



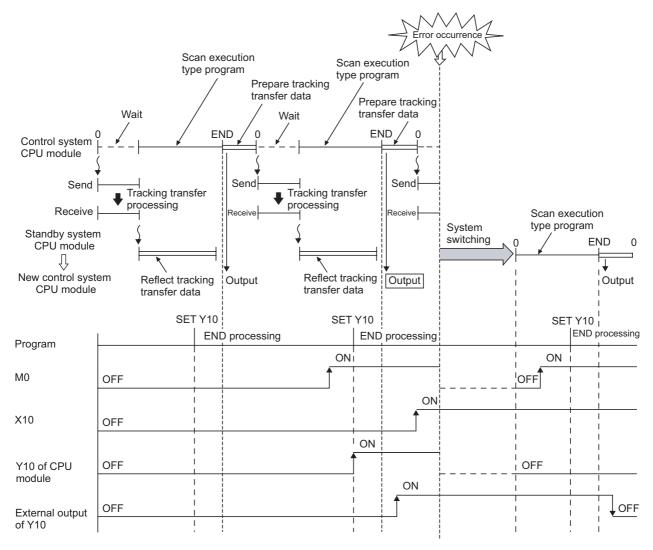


Tracking setting is set to M, X, and Y

Diagram 7.16 Data Output is Not Reflected to New Control System CPU Module

Diagrams 7.18 and 7.19 show a program example which delays the output by one scan from the command output condition establishment.

(a) Input is returned corresponding to output



[Program example]

(Before measures)

```
M0 X10 Y10 

| SET Y10 }

M10 X10 Y10 

| RST Y10 }
```

(After measures)

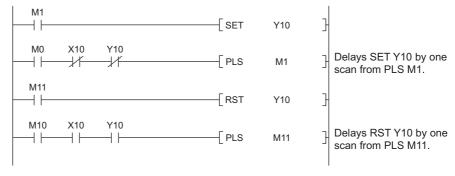


Diagram 7.17 Program Example when there is Response (Input) to Output

OVERVIEW

SYSTEM CONFIGURATION

TRACKING CABLE

PROCEDURE FOR STARTING UP A REDUNDANT SYSTEM

REDUNDANT SYSTEM FUNCTIONS

REDUNDANT SYSTEM NETWORKS

(b) Output is returned corresponding to external input



[Program example]

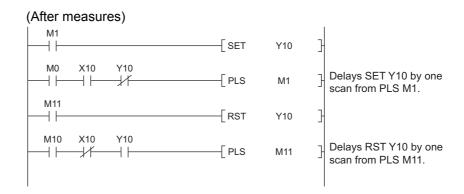


Diagram 7.18 Program Example when there is Response (Output) to External Input

⊠POINT

Set [Do tracking] of [Signal flow memory tracking setting] at [Tracking settings] of [Redundant parameter].

(2) Precautions regarding timer

Pay attention to the following points regarding timer at the time of system switching occurrence.

- 1) The present value of timer at the first scan of the new control system CPU module at the time of system switching occurrence.
- 2) Depending on timing of system switching occurrence such as turning power supply OFF, tracking transfer processing may be discontinued, and the device data may not be reflected to the new control system CPU module after switching systems.

In this case, the timer whose time is up before switching systems may not be recognized even after the first scan after system switching.

OVERVIEW

SYSTEM CONFIGURATION


TRACKING CABLE

3) When output (output (Y), writing to buffer memory) is performed from the timer contact, the timer goes into the above-mentioned 2) status, which leads to chattering of the output.

When the CPU module communicates with the module or external device using the output (Y) and buffer memory, the program may not operate normally due to chattering of the output after system switching.

The operation for the case where the system switching occurs before the tracking transfer processing is completed after outputting the output (Y) from the timer contact is shown in Diagram 7.19.

[Program example]



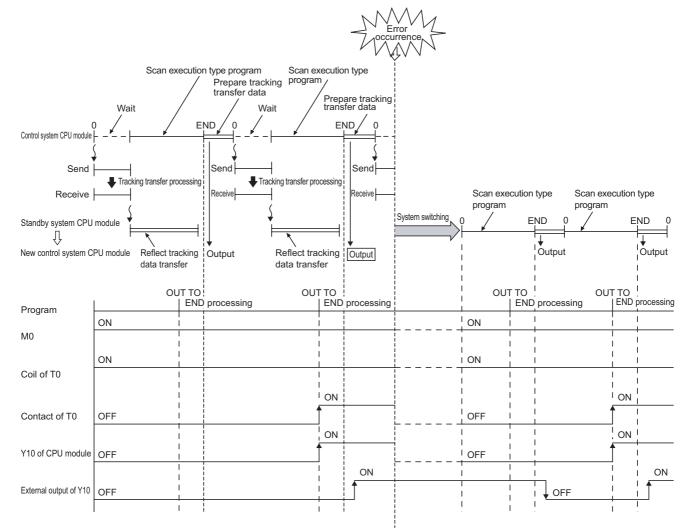


Diagram 7.19 Chattering Occurs to Output by Timer Contact



When outputting the output (Y) or writing buffer memory to a module or external device, consider time required for tracking transfer from the control system CPU module to the standby system CPU module.

The program example to output, delaying one scan from the time up of the timer, is shown in Diagram 7.20.

[Program example]

(Before measures) T0 Y10 T10 Y10 (After measures) M1 SET Y10 T0 Delays SET Y10 by one PLS M1 scan from PLS M1. M11 4 + Y10 T10 Delays RST Y10 by one PLS M11 scan from PLS M11.

Diagram 7.20 Program Example when Outputting by timer contact

⊠POINT

Set [Do tracking] at [Signal flow memory tracking setting] on [Tracking settings] in redundant parameter.

(3) Precautions regarding writing data from the GOT and external device etc.

Pay attention to the following points regarding writing data from the GOT and external device etc.

 The tracking data may not be reflected to the new control system CPU module depending on the timing of the system switching occurrence such as turning power supply OFF.

In this case, data written immediately before switching systems by the GOT or external device may disappear. Rewrite data after switching systems.

7.5 Precautions of Programming when Connecting Extension Base Unit

This section describes the precautions of programming when connecting the extension base unit.

(1) Precautions for using PX Developer

As for the following functions, use the dedicated instructions. Do not use them to Ethernet module mounted to the extension base unit.

- · Communication control FB (SEND, RECV)
- · Event notification

(2) Functions applicable in GX Developer and PX Developer

MELSOFT products connectable to a module mounted on the extension base unit are GX Developer and PX Developer. However, there are restrictions on applicable functions.

For details, refer to the following manuals.

GX Developer Version 8 Operating Manual

PX Developer Version 1 Operating Manual (Programming Tool)

(3) Tracking device setting

When tracking device setting is not set, the program is executed using the value before refresh is performed at the first scan after switching systems Set the following devices at the tracking device setting.

- Device which performs auto refresh setting to the intelligent function module mounted on the extension base unit by GX Configurator
- Device that makes auto refresh setting to the CC-Link master module on the extension base unit

(4) Availability of interrupt pointer

When interrupting from the intelligent function module mounted to the extension base unit, an interrupt pointer cannot be used.

If set, "CAN'T EXECUTE(I)" (error code: 4225) occurs at the time of start-up.



CHAPTER8 TROUBLESHOOTING

This chapter provides troubleshooting methods of redundant system.

Error codes, special relays, and special registers of redundant CPU are not covered in this manual. Refer to the following manual, for error codes, special relays, and special registers of redundant CPU.

GCPU User's Manual (Hardware Design, Maintenance and Inspection)

The CPU module status can be confirmed by the LEDs, which are situated on the front face of the CPU module. The CPU module LEDs necessary for troubleshooting of redundant system are explained here.

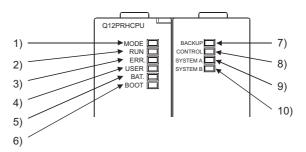


Diagram 8.1 CPU Module LEDs

Table8.1 LED Names and Explanations

No.	Name	Explanation
1)	MODE LED	Indicates the CPU module mode.
		On (Green) : Q Mode.
		Flashing (Green): External I/O Forced ON/OFF has been registered.
2)	RUN LED	Indicates the CPU module operation status.
		On : The CPU is Running. The RUN/STOP switch: RUN position.
		Off : The CPU has Stopped. The RUN/STOP switch: STOP position.
		The standby system CPU module in backup mode.
		(The RUN/STOP switch: RUN position.)
		An error that stops operation has been detected.
		Flashing : The RUN/STOP switch is set to the STOP position to write parameters/
		programs into CPU, and then the switch is returned from the STOP to
		RUN position. The standby system CPU module for which the operation
		mode is switched from backup mode to separate mode.
3)	ERR.LED	On : The self diagnostics error that does not stop the operation (other than
		battery error) is detected.
		(The settings have been made by the parameter so that the operation is
		continued when an error is detected.)
		Off : Normal.
		Flashing : An error that stops operations has been detected.
		Automatic write to the standard ROM is completed (BOOT LED is also
		flashing.)

Table8.1 LED Names and Explanations (Continued)

No.	Name	Explanation		
	USER LED	On : An error has been detected with the CHK instruction, or annunciator F		
5)		turns on.		
		Off : Normal.		
		Flashing : Latch clear is executed.		
		On : A battery error has occurred due to battery voltage drop in the CPU		
	BAT.LED	module or memory card.		
		Off : Normal.		
6)	BOOT LED	On : Boot operation has started.		
		Off : Boot operation has not been executed.		
		Flashing: Automatic write to the standard ROM is completed. (The ERR.LED is also		
		flashing.)		
		Indicates the operation mode , i.e., backup mode or separate mode.		
		On (Green) : Backup mode.		
		On (Red) : Unable to continue the control (RUN) because of system switching.		
		On (Amber): Separate mode.		
		Off : Debug mode.		
7)	BACKUP LED	Indicates as shown below, when the memory copy from control system to standby		
,,	BACKOF LED	system is being executed.		
		Back up mode operation Separate mode operation		
		Control system Standby system Control system Standby system		
		Executing memory copy Lit (Red) Flashing (Red) Lit (Amber) Flashing (Amber)		
		Memory copy successfully Lis (Pad) Lis (Arabar) Lis (Arabar)		
		Completed		
	CONTROL LED	Indicates the system of the CPU module, i.e., control system or standby system.		
8)		On : Control system (System switching is possible, as the standby system is		
		normal.)Debug mode.		
		Off : Standby system.		
	SYSTEM A LED	Indicates the system A CPU module status.		
		On : Operating as system A		
		Debug mode		
0)		Flashing: The tracking cable has been disconnected while the CPU module is		
9)		normally operating as system A (Flashing until the system A connector of the tracking cable is		
		connected.)		
		,		
		Off : Not operating as system A, i.e., operating as system B. (The SYSTEM B LED is On.)		
		Indicates the system B CPU module status.		
	SYSTEM B LED	On : Operating as system B		
		Flashing: The tracking cable has been disconnected while the CPU module is		
		normally operating as system B.		
10)		(Flashing until the system B connector of the tracking cable is		
10)		connected.)		
		Off : Not operating as system B, i.e., operating as system A. (The SYSTEM A		
		LED is On.)		
		·		
		Debug mode.		



8.1 Troubleshooting Flow

This section provides the troubleshooting for each possible case.

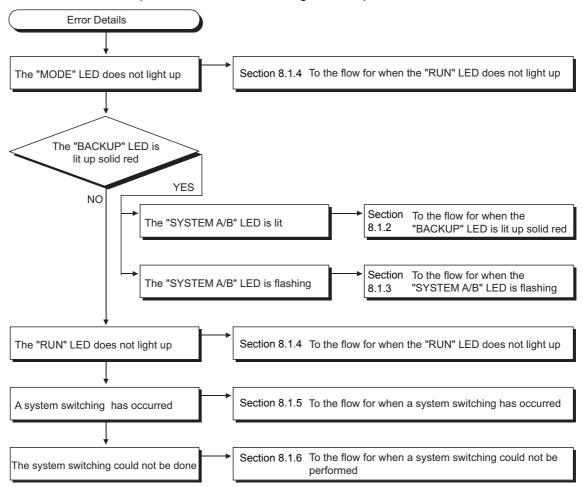


Diagram 8.2 Troubleshooting Flow

8.1.1 Flow for the Case where the "MODE" LED is not ON

TROUBLESHOOTING

Diagram 8.3 is for the case where the "MODE" LED does not turn on when the PLC is powered on.

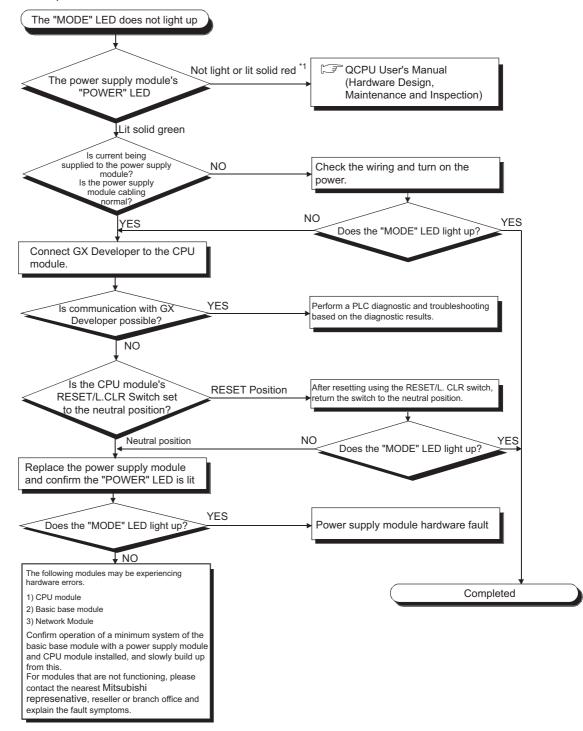



Diagram 8.3 Flow for the Case where the MODE LED is not On


^{* 1 :} Relevant to the redundant power supply module.



8.1.2 When the CPU Module "BACKUP" LED is ON (Red)

The following flow (Diagram 8.4) is for the case where the "BACKUP" LED of the CPU module is on (red) while the redundant system is running.

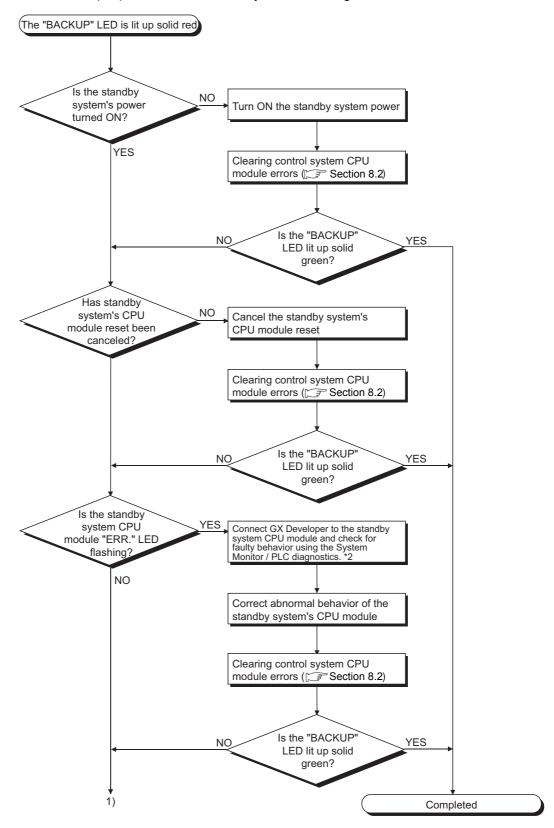

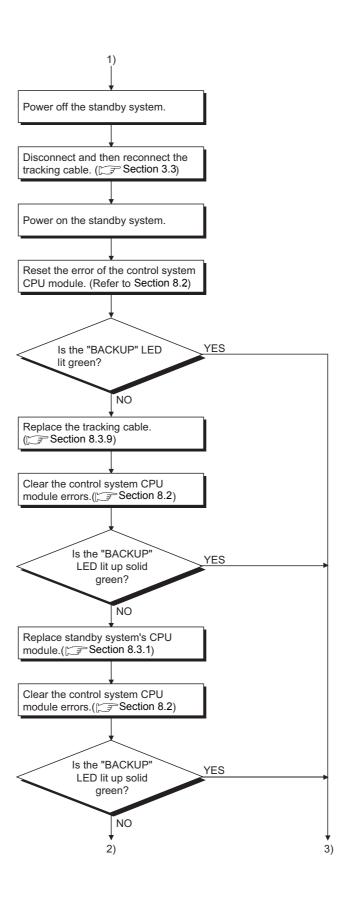

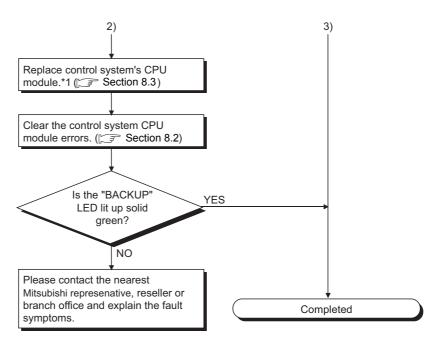



Diagram 8.4 Flow for the Case where the CPU Module BACKUP LED is ON (Lit Red)

- * 1: The control system, of which CPU module has been replaced, might start up as the standby system.
 - Make sure to check the control system BACKUP LED after replacing the CPU module.
- * 2: When using the CPU module whose first 5 digits of serial No. is "09012" or later, refer to Sections 8.1.9 and 8.1.10 for the description of error detected by the standby system.

8.1.3 When the "SYSTEM A/B" LED is flashing

TROUBLESHOOTING

The following flow (Diagram 8.5) is for the case where the control system CPU module "SYSTEM A/B" LED is flashing while the redundant system is running.

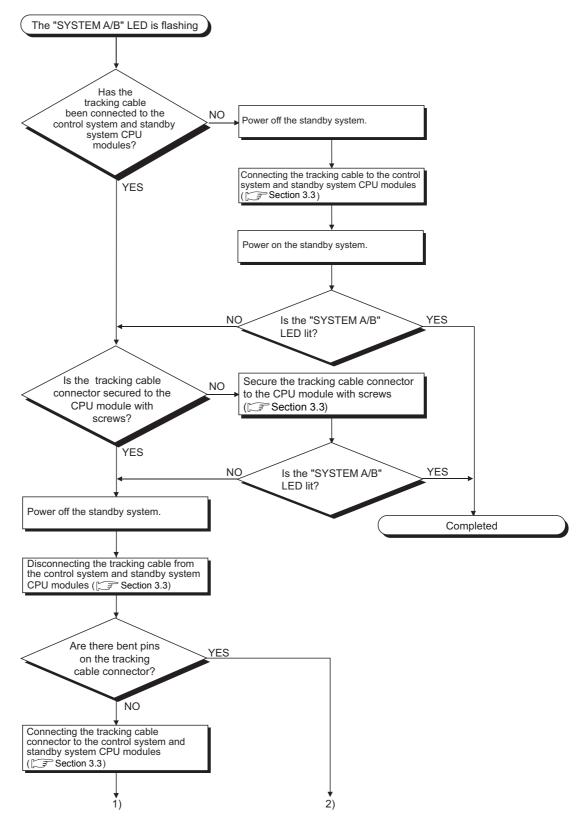




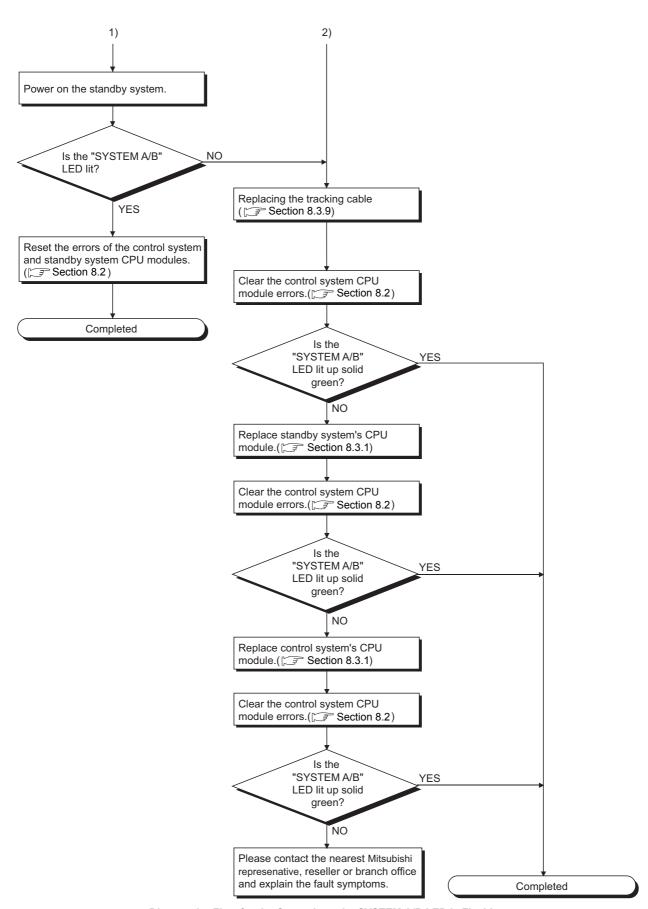


Diagram 8.5 Flow for the Case where the SYSTEM A/B LED is Flashing

8.1.4 When the System A/System B CPU module "RUN" LED is not ON

The following flow (Diagram 8.6) is for the case where the System A/System B CPU module "RUN" LED is not on.

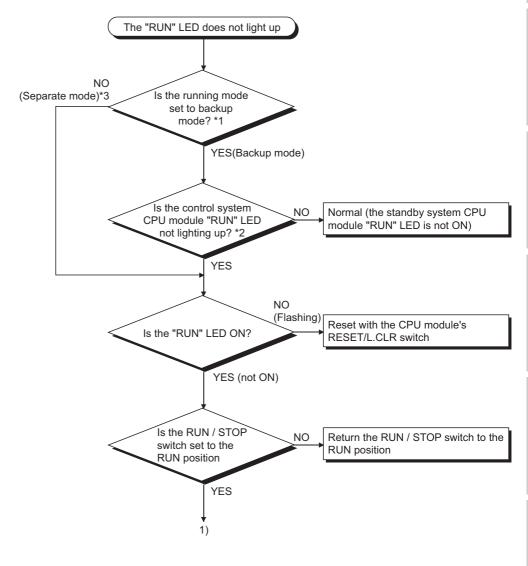

- * 1: The operation mode can be confirmed by the "BACKUP" LED. (FOR CHAPTER 8)
- * 2: The control system CPU module can be identified by the "CONTROL" LED. ([] CHAPTER 8)
- * 3: When the "RUN" LED of the standby system CPU module is flashing in the separate mode, set the RUN/STOP switch of the standby system CPU module from RUN to STOP to RUN.
- * 4: When using the CPU module whose first 5 digits of serial No. is "09012" or later, refer to Sections 8.1.9 and 8.1.10 for the description of error detected by the standby system after switching systems.

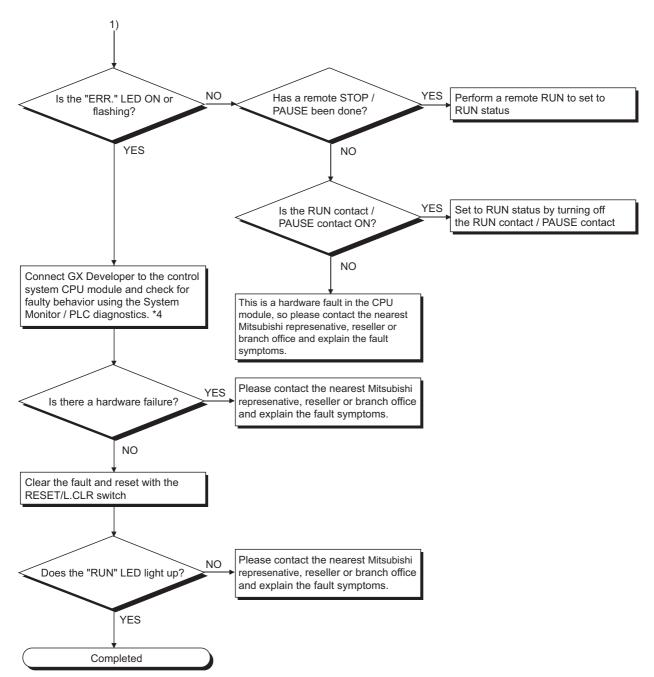



Diagram 8.6 Flow for the Case where the System A/System B CPU Module "RUN" LED is not ON

MELSEG Q series

8.1.5 When System Switching has Occurred

TROUBLESHOOTING

The following flow (Diagram 8.7) is for the case where system switching has occurred while the redundant system is running.

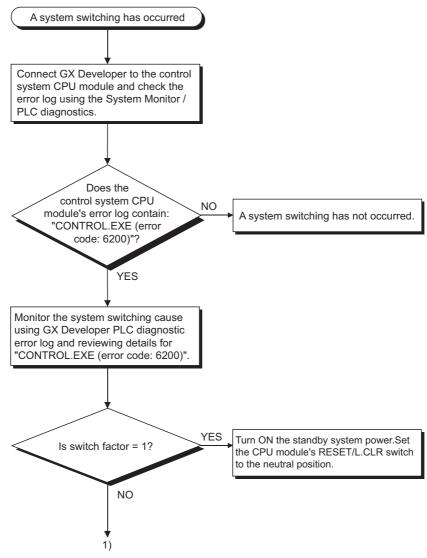



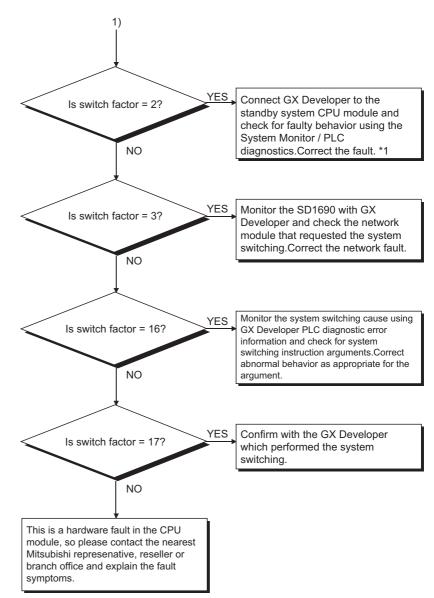


Diagram 8.7 Flow for the Case where System Switching Occurred

* 1: When using the CPU module whose first 5 digits of serial No. is "09012" or later, refer to Sections 8.1.9 and 8.1.10 for the description of error detected by the standby system after switching systems.

MELSEG Q series

8.1.6 When System Switching has failed

TROUBLESHOOTING

The following flow (Diagram 8.8) is for the case where system switching has failed, even though a system switching condition was satisfied while the redundant system was running.

(1) In the Case of System Switching by GX Developer


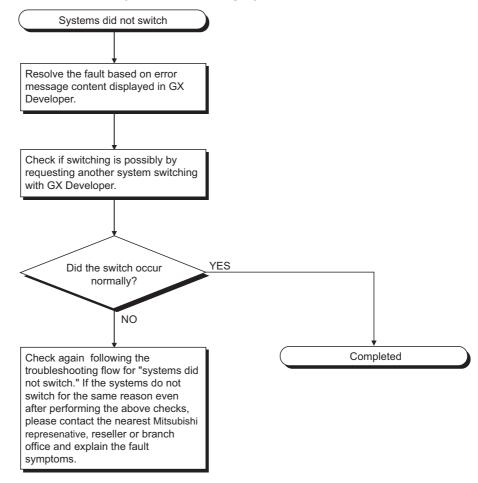



Diagram 8.8 Flow for the Case where System Switching Has Failed



(2) In the Case of System Switching due to Control System Error or System Switching Instruction Execution

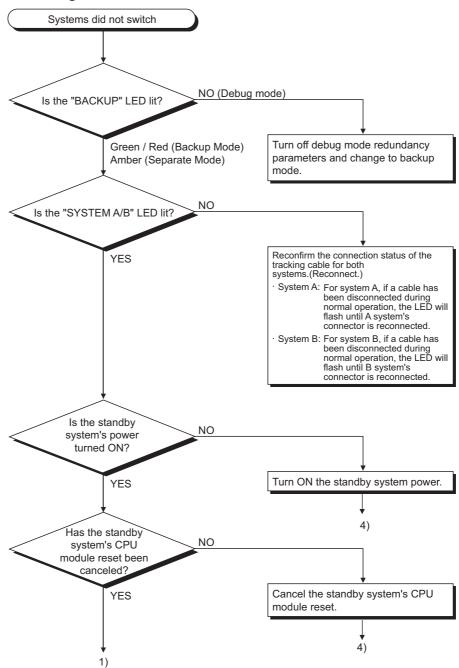


OVERVIEW

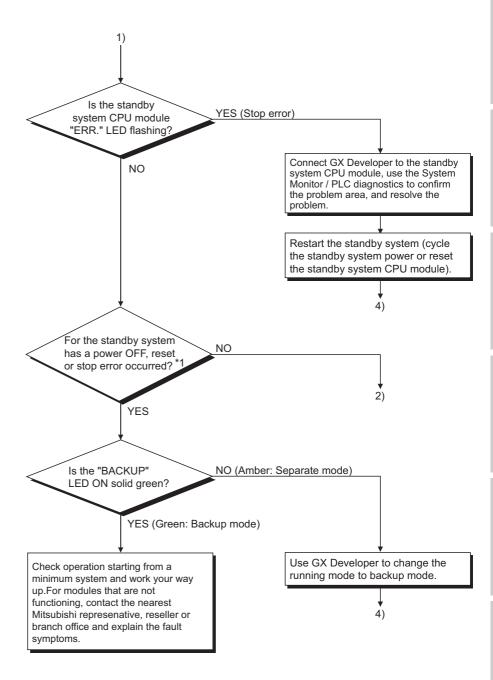

* 1 : The CPU module ERR. LED is flashing when a stop error has occurred.



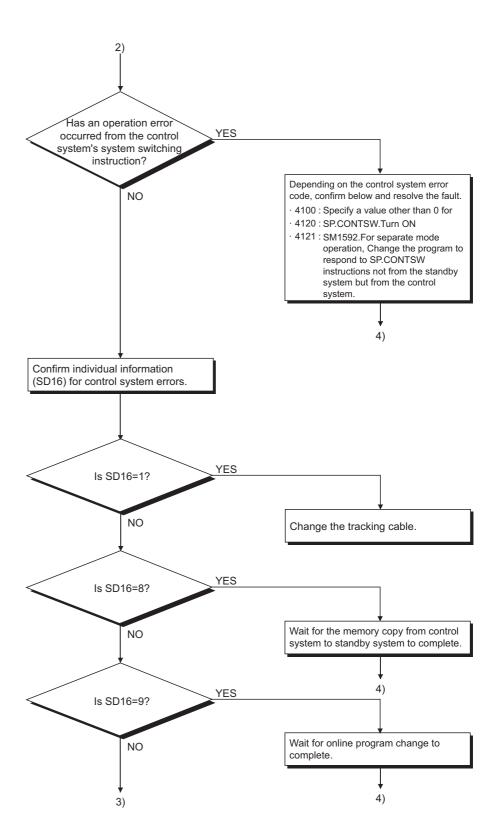

OVERVIEW

PROGRAMMING CAUTIONS

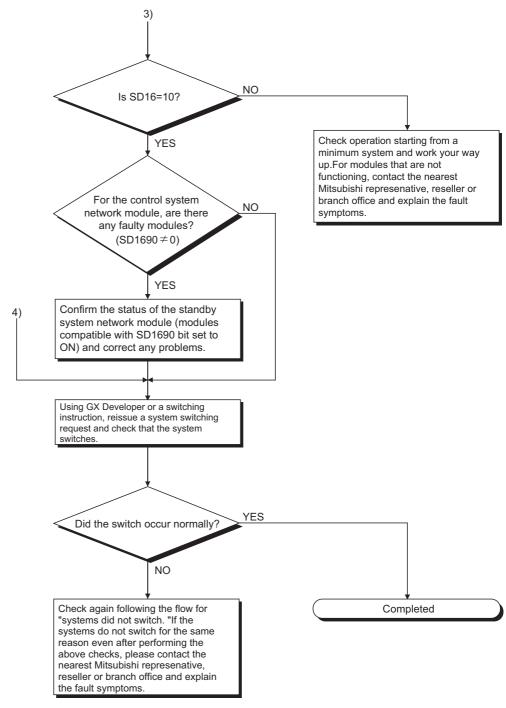


Diagram 8.9 Flow in the Case of System Switching due to Control System Error or System Switching Instruction Execution



8.1.7 When "TRK. INIT. ERROR (error code: 6140)" Occurred at Redundant System Startup

(1) "TRK. INIT. ERROR" occurrence conditions

- (a) This error occurs when either of the following operations is performed during starting the redundant system and before the "BACKUP" LED turns green.
 - Either system was powered off.
 - · The CPU module in either system was reset.
- (b) This error may occur in the system using the redundant type extension base unit if extension cables are not connected and the system is not powered on as the procedures shown in Chapter 4.

(2) Corrective action for "TRK. INIT. ERROR"

If "TRK. INIT. ERROR" has occurred during a startup of the redundant system, restart the system by performing either of the following operations.

(a) Power on System A and System B again

- 1) When System A/System B has been powered off, power on System A and System B again simultaneously.
- 2) The System A CPU module starts as a control system and the System B CPU module as a standby system.

(b) Set the RESET switches of System A and System B CPU modules to the neutral position simultaneously

- When the System A/System B CPU module has been reset, reset the System A and System B CPU modules and then set their RESET switches to the neutral position simultaneously.
- 2) The System A CPU module starts as a control system and the System B CPU module as a standby system.

8.1.8 When "CONTROL SYS. DOWN (error code: 6310 to 6312)" Occurred at Redundant System Startup

(1) "CONTROL SYS. DOWN" occurrence conditions

"CONTROL SYS. DOWN" occurs when either of the following operations is performed until the BACKUP LED is lit green during a startup of the redundant system.

· Either system was powered off.

TROUBLESHOOTING

 The CPU module in either system was reset and then its RESET switch was set to the neutral position.

(2) Corrective action for "CONTROL SYS. DOWN"

If "CONTROL SYS. DOWN" has occurred during a startup of the redundant system, restart the system by performing either of the following operations.

(a) Power on System A and System B again

- 1) Power on System A and System B again simultaneously.
- 2) The System A CPU module starts as a control system and the System B CPU module as a standby system.

(b) Set the RESET switches of System A and System B CPU modules to the neutral position simultaneously

- 1) Reset the System A and System B CPU modules and then set their RESET switches to the neutral position simultaneously.
- 2) The System A CPU module starts as a control system and the System B CPU module as a standby system.



8.1.9 When "ETX.CABLE ERR." Occurs

The following shows the flowchart for when "EXT.CABLE ERR." occurs during operation of the redundant system.

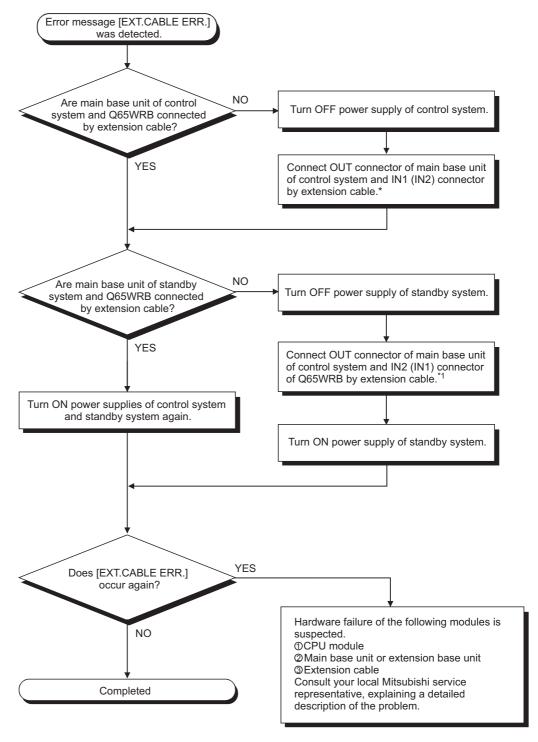



Diagram 8.10 Flowchart for when "EXT.CABLE ERR." occurs

^{* 1 :} As for IN1 connector and IN2 connector of the redundant type extension base unit, connect one to the control system and connect the other to the standby system.

TROUBLESHOOTING

8.1.10 When "BASE LAY ERROR" Occurs

The following shows the flowchart for when "BASE LAY ERROR" occurs during operation of the redundant system.

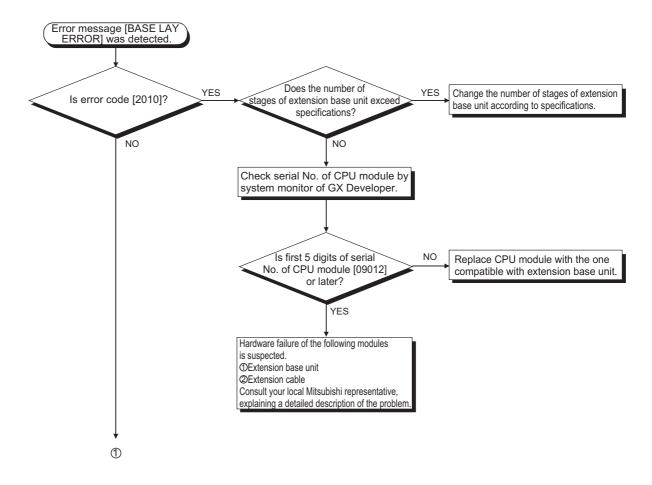



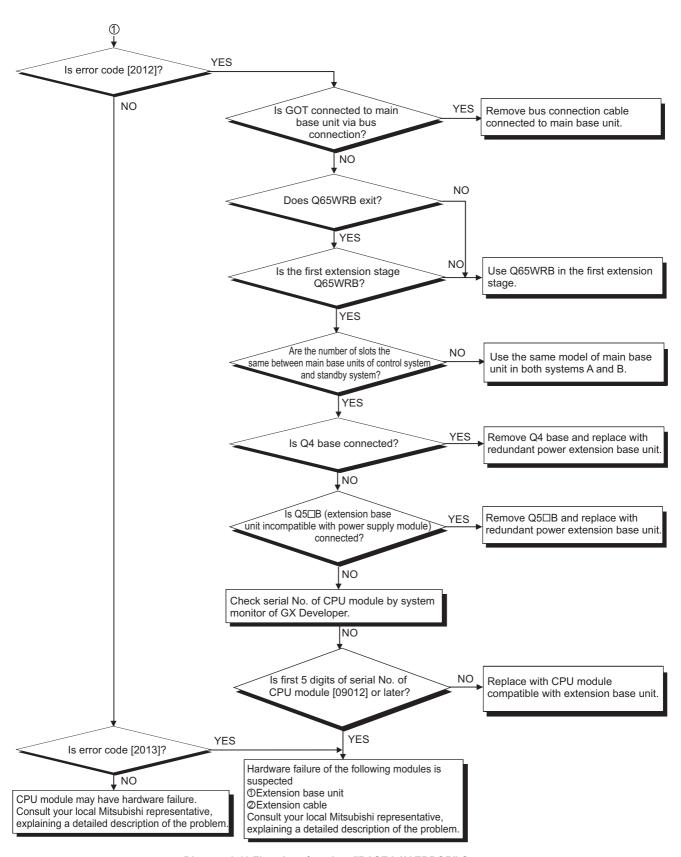


Diagram 8.11 Flowchart for when "BASE LAY ERROR" Occurs

TROUBLESHOOTING



The following shows the flowchart for when "UNIT LAY. DIFF." occurs during operation of the redundant system.

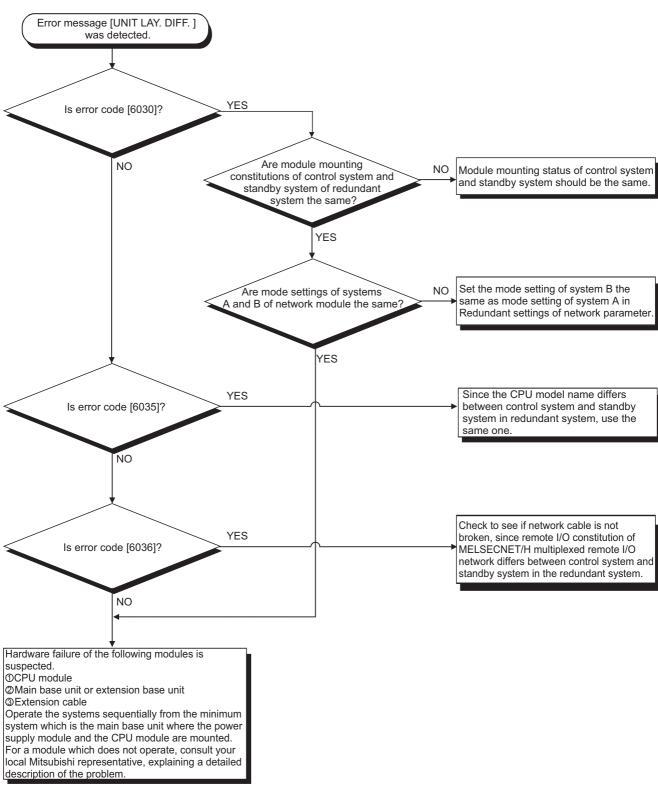


Diagram 8.12 Flowchart for when "UNIT LAY. DIFF." Occurs



8.1.12 When "SP. UNIT DOWN" Occurs

The following shows the flowchart for when "SP. UNIT DOWN" occurs during operation of the redundant system.

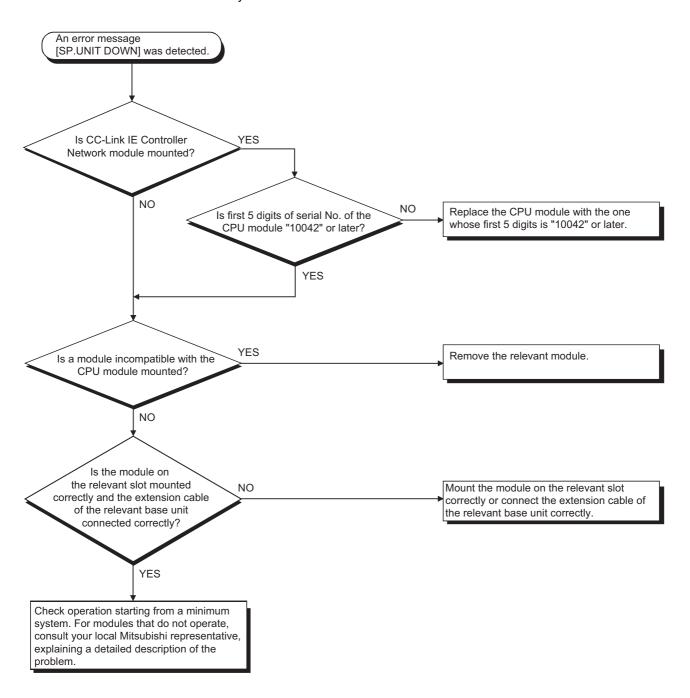


Diagram 8.13 Flowchart for when "SP. UNIT DOWN" Occurs

8.1.13 When "SP. UNIT LAY ERROR" Occurs

TROUBLESHOOTING

The following shows the flowchart for when "SP. UNIT LAY ERROR" occurs during operation of the redundant system.


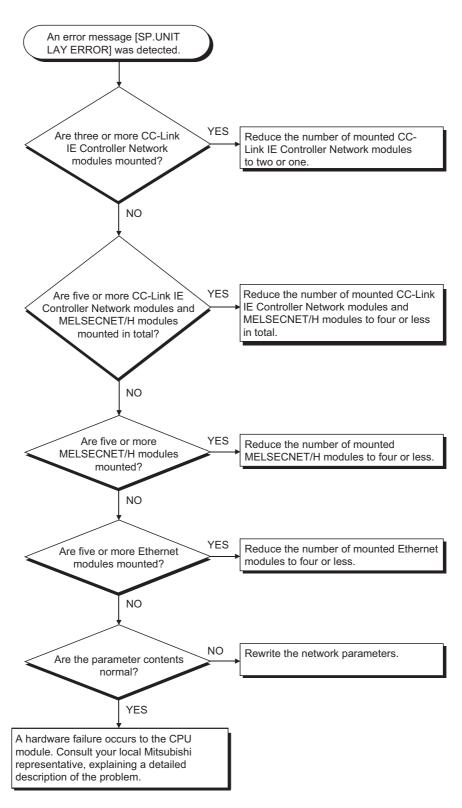


Diagram 8.14 Flowchart for when "SP. UNIT LAY ERROR" Occurs

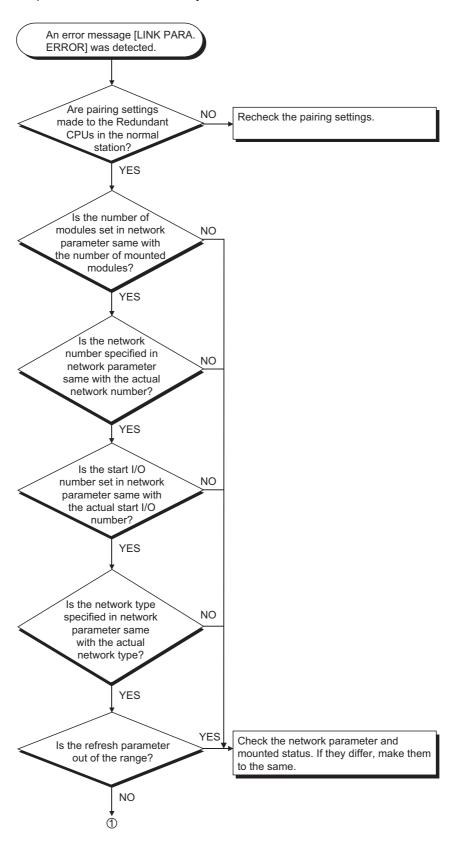

8.1.14 When "LINK PARA. ERROR" Occurs

The following shows the flowchart for when "LINK PARA. ERROR" occurs during operation of the redundant system.



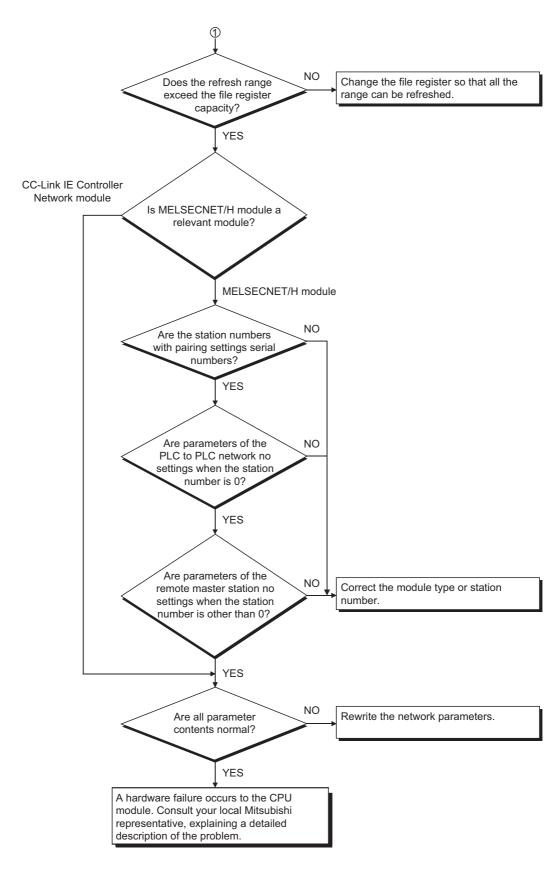


Diagram 8.15 Flowchart for when "LINK PARA. ERROR" Occurs



8.1.15 When "SP. UNIT VER. ERR." Occurs

The following shows the flowchart for when "SP. UNIT VER. ERR." occurs during operation of the redundant system.

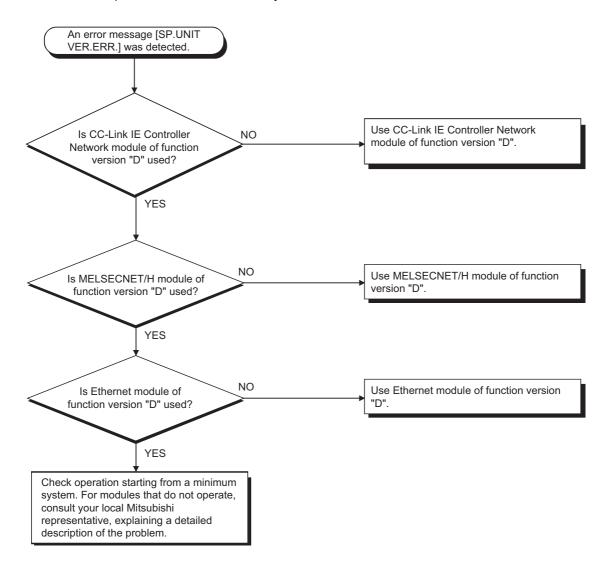


Diagram 8.16 Flowchart for when "SP. UNIT VER. ERR." Occurs

8.1.16 When "CAN'T SWITCH" Occurs to Control System CPU Module due to Communication Error when Turning ON/OFF Power Supply of CPU Module or Booting and Shutting Down Personal Computer in CC-Link IE Controller Network or MELSECNET/H

(1) Cause of "CAN'T SWITCH" occurrence

In the redundant system where CC-Link IE Controller Network or MELSECNET/H is used, CC-Link IE Controller Network or MELSECNET/H module of the control system may issue a switching request, detecting a communication error due to turning power supply ON/OFF of the other station (including the standby system) CPU module or booting and shutting down the personal computer where CC-Link IE Controller Network interface board or MELSECNET/H board is mounted.

For details of function requesting to switch system to the control system CPU module, refer to the following manuals.

CC-Link IE Controller Network Reference Manual

Q Corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)

Q Corresponding MELSECNET/H Network System Reference Manual (Remote I/O network)

Note that "CAN'T SWITCH" may be detected in the control system CPU module when the above-mentioned system switching is requested before the control system of the redundant system is started up. Although the control system operates normally even in this case, how to cancel "CAN'T SWITCH" is shown below.



(2) How to cancel "CAN'T SWITCH"

Cancel "CAN'T SWITCH" detected by the control system CPU module after checking that the standby system and the CC-Link IE Controller Network module or MELSENET/H module operate normally by the special register.

A sample program to cancel an error by the error cancel command (M100) at the time of "CAN'T SWITCH" occurrence is shown in Diagram 8.17.

In this sample program, when "CAN'T SWITCH" occurs to the control system CPU module due to system switching request from the network module, an error "CAN'T SWITCH" can be cancelled by turning ON the error cancel command (M100) after checking that the standby system CPU module, CC-Link IE Controller Network module, or MELSECNET/H module operate normally.

However, when systems cannot be switched by "other than system switching request", "CAN'T SWITCH" cannot be cancelled in this sample program.

[Program example]

An error "CAN'T SWITCH" (No.6220) is cancelled when the system cannot be switched normally (SD1589≠0), system error information (SD1600), and system switching request module No. from the host system or other system network module (SD1590 and SD1690) are all normal in the system switching request by the network module (SD1588=3).

Diagram 8.17 Sample Program to Cancel an Error "CAN'T SWITCH"

When executing the error cancel command automatically, change error cancel command (M100) in Diagram 8.17 to be always ON (SM400).

(3) Programming of CC-Link IE Controller Network or MELSECNET/H

CC-Link IE Controller Network or MELSECNET/H network detects a temporary communication error depending on conditions such as power supply ON/OFF or cable and noise. Create the program using CC-Link IE Controller Network or MELSECNET/H so that it will not stop control even when the temporary communication error is detected.

For details, refer to the following manuals.

- CC-Link IE Controller Network Reference Manual
- Corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)
- Corresponding MELSECNET/H Network System Reference Manual (Remote I/O network)

MELSEG Q series



8.2 Error Clear

In a redundant system, the errors that continue the CPU module operation can be cleared.

The following methods for error clear are available in a redundant system.

- Clearing the host CPU module error
- Clearing the standby system CPU module error by the control system CPU module

(This includes clearing the standby system CPU module error by GX Developer connected to the control system CPU module.)

(1) Clearing Host CPU Module Error

The host CPU module error can be cleared using a special relay (SM50) and a special register (SD50).

(a) Procedure

Error clear is performed according to the following procedure.

- 1) Remove the cause of target error.
- 2) Store the corresponding error code into a special register (SD50).
- 3) Turn special relay SM50 from OFF to ON.
- 4) The target error is cleared.

If the error is cleared and the CPU module returns to normal, the relevant special relay, special register and LED return to the previous statuses.

If the same error occurs again after that, it will be re-registered in the failure history.

(b) Cautions

1) When the corresponding error code is stored in SD50 and error clear is performed, the last digit of the code No. will be ignored.

When multiple errors, of which codes are different in the last digit only, occur, the errors can be simultaneously cleared.

[Example]

If errors that correspond to error codes 2100 and 2101 occur, both of them will be simultaneously cleared when either one is cleared.

In the case of errors that correspond to error codes 2100 and 2111, both of them will not be simultaneously cleared even when either one is cleared.

2) If an error has occurred due to a problem other than that of the CPU module it will not be removed even when clearing the error is attempted using SM50 and SD50.

[Example]

The cause of the SP. UNIT DOWN error cannot be removed by performing error clear operation using SM50 and SD50, as the error could have occurred in a base unit (including extension cables), intelligent function module, etc.

Remove the cause of the error by referring to the error code list.

3) If the cause of the error is not removed after error clear has been performed, the same error will be detected.



4) Error clear processing is performed by END processing. Therefore, an error cannot be cleared unless the END instruction is executed with SM50 ON.

(2) Clearing the Standby System CPU Module Error by the Control System CPU Module

A standby system CPU module error is cleared with the user program of the control system CPU module, using SM1649 and SD1649.

When using GX Developer connected to the control system CPU module to clear a standby system CPU module error, SM1649 and SD1649 are also used.

(a) Procedure

Error clear is performed according to the following procedure.

- 1) Remove the cause of the target error from the standby system.
- Store the corresponding error code into SD1649 in the control system CPU module.
- 3) Turn SM1649 in the control system CPU module from OFF to ON.
- 4) The target error is cleared from the standby system.

(b) Cautions

 Error clear using SM1649 and SD1649 is enabled in the control system CPU module only.

If this method is executed in the standby system CPU module, the standby system error will not be cleared.

The operation modes applicable to this error clear method are shown in Table8.2.

Table8.2 Operation Modes Applicable to Clearing the Standby System Error using SM1649 and SD1649

Operation Mode	CPU Module Performing Error Clear		
Operation mode	Control System CPU Module	Standby System CPU Module	
Backup Mode	0	×	
Separate Mode	×	×	
Debug Mode	-	-	

○: Standby System Error Clear Enabled, ×: Standby System Error Clear Disabled,-: Irrelevant as Standby System Does not Exist

2) When the corresponding error code is stored in SD1649 and error clear is performed, the last digit of the code No. will be ignored.

When multiple errors, of which codes are different in the last digit only, occur, the errors can be simultaneously cleared.

[Example]

If errors that correspond to error codes 2100 and 2101 occur, both of them will be simultaneously cleared even when either one is cleared.

In the case of errors that correspond to error codes 2100 and 2111, both of them will not be simultaneously cleared even when either one is cleared.

and SD1649.

The cause of the SP. UNIT DOWN error cannot be removed by performing error clear operation using SM1649 and SD1649, as the error could have occurred in a base unit (including extension cables), network module, etc. Remove the cause of the error by referring to the error code list.

- 4) If the cause of the error is not removed after error clear has been performed, the same error will be detected.
- 5) Error clear processing is performed by END processing. Therefore, an error cannot be cleared unless the END instruction is executed with SM1649 ON.

(c) Sample Program for Clearing Standby System CPU Module Error

The following shows a sample program for clearing the standby system error by the control system CPU module.

[Sample Program]

A continuation error currently occurring in the standby system is cleared when the error clear command (M100) turns ON.

(Create the control system's program that enables the ON/OFF status of SM1649 to be held for one scan or longer so that the standby system will detect the SM1649 change, i.e., SM1649 turns from OFF to ON or OFF to ON.)

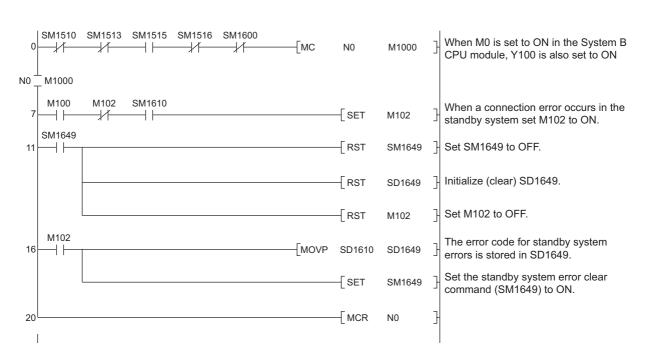


Diagram 8.18 Sample Program for Clearing Standby System CPU Module Error

OVERVIEW

SYSTEM CONFIGURATION

TRACKING CABLE

PROCEDURE FOR STARTING UP A REDUNDANT SYSTEM

REDUNDANT SYSTEM FUNCTIONS

REDUNDANT SYSTEM NETWORKS



(3) Corrective Actions When LEDs Do not Return to Status Prior to Error Occurrence

If error clear is performed but LEDs do not return to the status prior to the error occurrence, this might indicate that multiple continuation errors have occurred simultaneously or multiple annunciators are ON.

The following explains the methods of checking whether multiple continuation errors have occurred simultaneously or whether multiple annunciators are ON, and the method of clearing the errors.

(a) Continuation Errors other than Annunciator (F) ON (error code: 9000)

The error code of the latest continuation error is stored in a special register (SD0/SD1610).

If the LEDs do not return to the status prior to the error occurrence even when error clear operation has been performed for the error, which corresponds to the error code stored in special register (SD0/SD1610), check the error history information in the online PLC diagnostics of GX Developer.*1

Clear the latest errors and any errors that occurred simultaneously in the error history.

* 1: When error clear operation is performed and the error is cleared, the SD0/SD1610 information shows "No Errors".

Therefore, the errors that occurred simultaneously with the latest one cannot be confirmed by SD0/SD1610.

(b) Annunciator (F) ON (error code: 9000)

Whether Annunciator (F) is ON (error occurrence is detected) and the number of annunciators that detected errors can be checked using the special relay and special register below.

- SM62 (Detection of annunciator ON)
- SD63 (Number of annunciators ON)

Perform error clear operation repeatedly until SM62 will be off, or SD63 will be 0, then turn all annunciators from ON to OFF.

OVERVIEW

8.3 Replacing Module in Redundant System

8.3.1 CPU Module Replacement

(1) CPU Module Replacement

The control system CPU module cannot be replaced while redundant systems are running.

When replacing the control system CPU module, use GX Developer to switch its system to the standby system, then, start the replacement operation.

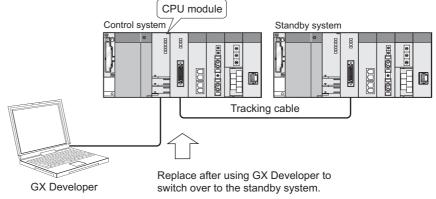


Diagram 8.19 System where Control System CPU Module is Replaced

Replace the standby system CPU module after powering off the standby system.

The standby system can be powered off even while the redundant system is running.


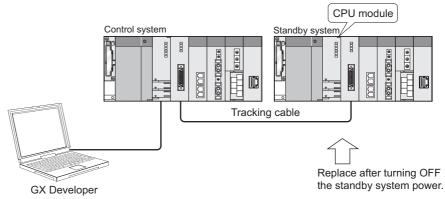


Diagram 8.20 System where Standby System CPU Module is Replaced

(2) Replacement Procedure

The procedure for replacing the CPU module is shown in Diagram 8.21.



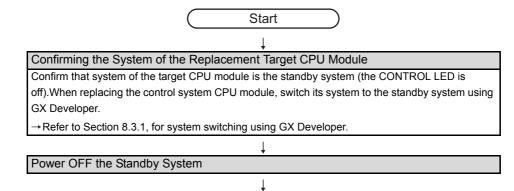

Disconnecting the Tracking Cable

Disconnect the tracking cable from the standby system CPU module.

→ Refer to Section 3.3, for disconnecting the tracking cable.

Replacing the Standby System CPU Module

- 1) Remove the standby system CPU module from the main base unit.
- Mount an alternative CPU module (the same model as the control system CPU module) to the main base unit.
- 3) Connect the CPU module battery connector to the battery connector pin.
 - → Refer to the QCPU User's Manual (Hardware Design, Maintenance and Inspection), for removing/mounting the CPU module and battery connection.

Connecting the Tracking Cable

Connect the tracking cable connector to the standby system CPU module.

→ Refer to Section 3.3, for connecting the tracking cable

Power ON the Standby System

- 1) Set the RUN/STOP switch of the standby system CPU module to the STOP position.
- 2) Set the RESET/L.CLR switch of the standby system CPU module to the central position (reset switch neutral position).
- 3) Power on the standby system.

Confirming the POWER LED of the Power Supply Module

Confirm that the POWER LED of the power supply module is ON (lit green) and the module is being properly powered

Executing the Memory Copy from Control System to Standby System

Perform the memory copy from control system to standby system using the GX Developer connected to the control system CPU module, and write the memory content from the control system CPU module to the standby system CPU module.

Resetting the Standby System CPU Module

Set the RESET/L.CLR switch of the standby system CPU module to the RESET position.

Setting the Switch of the Standby System CPU Module to That of the Control System

Set the RUN/STOP switch of the standby system CPU module to the same position of that of the control system CPU module.

Setting the Reset Switch of the Standby System CPU Module to Neutral Position

Set the RESET/L.CLR switch of the standby system CPU module from the RESET position to the central position (reset switch neutral position).

Start standby system

Diagram 8.21 CPU Module Replacement Procedure

⊠POINT

When the standby system is powered OFF, the control system CPU module develops STANDBY SYS.DOWN (error code: 6300) continuation error. After the replacement of the standby system CPU module is complete, clear the error in the control system CPU module as necessary. Refer to Section 8.2 for the error resetting method.

8.3.2 Power Supply Module Replacement Procedure

(1) Power Supply Module Replacement*1

The control system power supply module cannot be replaced while redundant systems are running.

When replacing the control system power supply module, switch its system to the standby system by GX Developer, then, start the replacement operation.

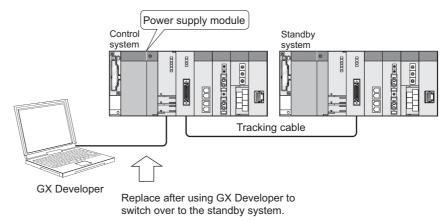


Diagram 8.22 System where Control System Power Supply Module is Replaced

Replace the power supply module for the standby system after turning the power supply for the standby system OFF.

The standby system power supply can be turned off even when the redundant system is active.

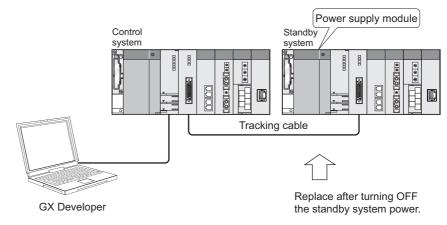


Diagram 8.23 System where Standby System Power Supply Module is Replaced

* 1: When a pair of redundant power supply modules is used in each system, one redundant power supply module can be replaced at a time while the redundant system is running.

([] Section 8.3.3)

SYSTEM CONFIGURATION

TRACKING CABLE

PROCEDURE FOR STARTING UP A REDUNDANT SYSTEM

REDUNDANT SYSTEM FUNCTIONS

REDUNDANT SYSTEM NETWORKS



(2) Replacement Procedure

The procedure for replacing the power supply modules is shown in Diagram 8.24.



Confirming the System for the Power Supply Module to be Replaced

Confirm that the power supply module to be replaced is for the standby system (CONTROL LED OFF). When the control system power supply module is to be replaced, switch it to the standby system using GX Developer.

→ Refer to Section 5.2, for system switching using GX Developer.

Turn the Standby System Power Supply OFF

Removing the wiring

Disconnect the power supply cable from the standby system power supply module

Replacing the Standby System Power Supply Module

- 1) Remove the power supply module from the main base unit
- 2) Mount the alternative power supply module to the main base unit.
 - → Refer to the QCPU User's Manual (Hardware Design, Maintenance and Inspection), for removing/mounting the power supply module.

Wiring

Connect the power supply cable to the power supply module.

Power ON the Standby System

- 1) Confirm that the RUN/STOP switch of the standby system CPU module is in the same position as that of the control system CPU module.
- 2) Confirm that the RESET/L.CLR switch of the control system CPU module is in the center position (reset switch neutral position).
- 3) Power on the control system.

Confirm the Power Supply Module's POWER LED

Confirm that the power supply module POWER LED is lit (green), and that power is being supplied properly.

Start standby system

Diagram 8.24 Power Supply Module Replacement Procedure


⊠POINT

When the standby system is powered OFF, the control system CPU module develops in a STANDBY SYS.DOWN (error code: 6300) continuation error. After the replacement of the standby system CPU module is complete, reset errors in the control system CPU module as necessary.

Refer to Section 8.2 for the error resetting method.


8.3.3 Redundant Power Supply Replacement Procedure

When a pair of redundant power supply modules is used in each system, one redundant power supply module can be replaced at a time after powering off the module, while the redundant system is running. This operation can be performed in both systems. System control can be continued while the power supply module is being replaced, because another power supply module supplies power to the modules mounted on the same base unit.

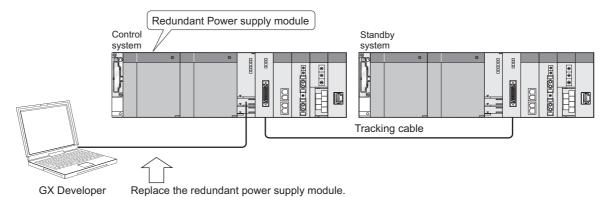

(1) Procedure for Replacing Redundant Power Supply Modules

The procedure for replacing redundant power supply modules is shown in the Diagram 8.25.

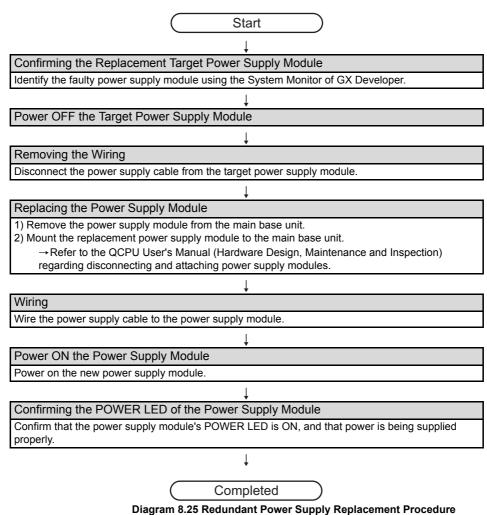



8.3.4 I/O Module Replacement Procedure

(1) Module Replacement during Power OFF

When replacing the control system I/O module, switch its system to standby system, power off the standby system, and then start the replacement operation. System switching is not necessary when replacing the standby system I/O module. Make sure to power off the standby system before replacing the I/O module. The standby system can be powered off while the redundant system is running.

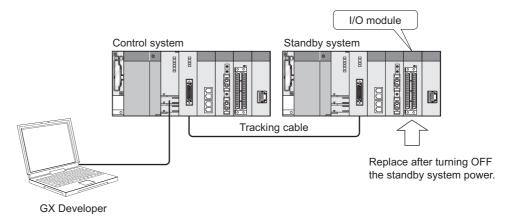


Diagram 8.26 I/O Module Replacement System during Power OFF

(2) Module Replacement during Power ON

By using the online module change of GX Developer, the I/O module can be replaced while the redundant system is running, regardless of its system, i.e., control system or standby system.

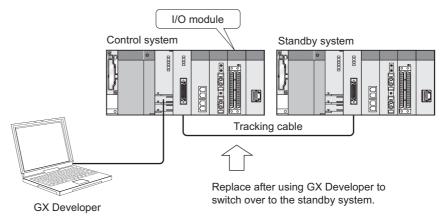


Diagram 8.27 I/O Module Replacement System during Power ON

⊠POINT

The I/O modules of control system and standby system cannot perform online module change (hot swapping) using GX Developer when connecting the extension base unit to the CPU module whose first 5 digits of serial No. is 09012 or later

When replacing modules online using GX Developer in other than above cases, refer to the following manual.

GCPU User's Manual (Hardware Design, Maintenance and Inspection)

(3) Replacement Procedure during Power OFF

The I/O module replacement procedure is shown in Diagram 8.28.

Start

Confirm the I/O Unit Targeted for Replacement

Confirm that the I/O unit to be replaced is the standby system (CONTROL LED is off). When replacing the I/O unit for the control system, use GX Developer to switch it to the standby system.

→ Refer to Section 5.2, for system switching using GX Developer.

Turn the Standby System's Power Supply OFF

Removing the Terminal Block/Connector from the I/O module

Remove the terminal block/connector from the I/O module.

Replace the Standby System's I/O Unit

- 1) Disconnect the I/O module from the main base unit.
- Mount an alternative I/O module (the same model as the control system I/O module) to the main base unit
 - → Refer to the QCPU Module User's Manual (Hardware Design, Maintenance and Inspection), for mounting/removing the I/O module.

Mounting the Terminal Block/Connector to I/O module

Mount the terminal block/connector to the I/O module.

Turn on the Standby System

- 1) Align the position of the standby system CPU module's RUN/STOP switch with that of the control system RUN/STOP switch.
- 2) Set the standby system CPU module's RESET/L.CLR switch to the central position (reset switch neutral position).
- 3) Turn the standby system's power supply ON

Confirm the Power Supply Module's POWER LED

Confirm that the power supply module's POWER LED is ON (green) and that power is being supplied properly.

Start standby system

Diagram 8.28 I/O Module Replacement Procedure

⊠POINT

When the standby system is powered OFF, the control system CPU module develops in a STANDBY SYS.DOWN (error code: 6300) continuation error. After the replacement of the standby system CPU module is complete, reset errors in the control system CPU module as necessary.

Refer to Section 8.2 for the error resetting method.



8.3.5 Network Module Replacement Procedure

(1) Network Module Replacement

The control system network module cannot be replaced while the redundant system is running.

In this case, switch its system to the standby system, then, start the replacement operation.

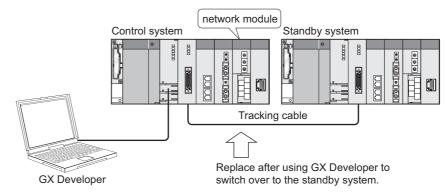


Diagram 8.29 System where Control System Network Module Is Replaced

Perform replacement of the standby system's network module after switching the standby system's power supply OFF.

The power supplies of standby systems can be turned OFF even when the redundant system is active.


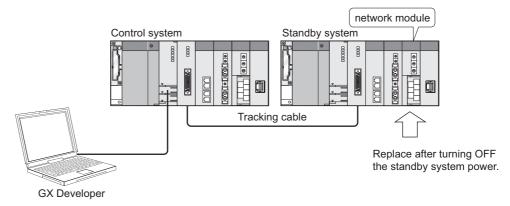


Diagram 8.30 System where Standby System Network Module Is Replaced

(2) Replacement Procedure

The replacement procedure for network modules is indicated in Diagram 8.31.

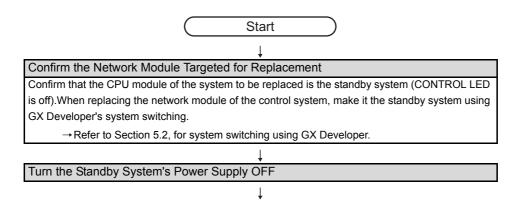

Disconnecting the Cable

Disconnect the network cable from the target network module.

ightarrow Refer to the manual of the network module, for disconnecting the network cable.

Replacing the Standby System's Network Module

- 1) Disconnect the network module from the main base unit.
- 2) Attach the replacement network module (a network module of the same type as the control system network module).

For removal and installation of the network module, refer to the manual of the used network module.

Wiring

Connect the network cable to the network module.

→ Refer to the manual of the network module, for connecting the network cable.

Turn on the Standby System's Power Supply

- 1) Match the position of the standby system CPU module's RUN/STOP switch with that of the control system.
- 2) Set the control system CPU module's RESET/L.CLR switch to the central position
- 3) Turn the standby system power supply ON.

Confirm the Power Supply Module's POWER LED

Confirm that the power supply module's POWER LED is ON (green), and that power is being supplied properly.

Confirming the Network Module Status

Confirm that the new network module has not developed an error by using the System Monitor of GX Developer.

Start standby system

Diagram 8.31 Network Module Replacement Procedure

POINT

When the standby system is powered OFF, the control system CPU module develops in a STANDBY SYS.DOWN (error code: 6300) continuation error. After the replacement of the standby system CPU module is complete, reset errors in the control system CPU module as necessary. Refer to Section 8.2 for the error resetting method.



8.3.6 Main Base Unit Replacement Procedure

(1) Main Base Unit Replacement

The control system main base unit cannot be replaced while the redundant system is running.

In this case, switching its system to the standby system, then replace that main base unit.

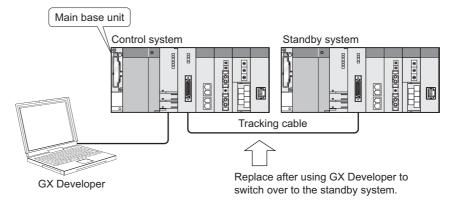


Diagram 8.32 System where Control System's Main Base Unit Is Replaced

Perform replacement of the standby system's main base unit after turning the standby system's power supply OFF.

The power supply for the standby system can be turned OFF even when the redundant system is active.

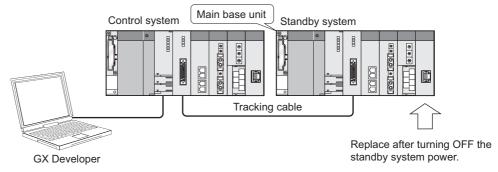


Diagram 8.33 System where Standby System's Main Base Unit Is Replaced

(2) Replacement Procedure

The replacement procedure for the main base unit is indicated in Diagram 8.34.



Confirming the Main Base Unit Targeted for Replacement

Confirm that the main base unit to be replaced is for the standby system (CONTROL LED is off). When replacing the control system's power supply module, switch it to be the standby system using GX Developer's system switching.

→ Refer to Section 5.2 regarding system switching via GX Developer.

Turn the Standby System's Power Supply OFF

Disconnect the Cable

- 1) Disconnect the tracking cable from the standby system CPU module.
 - → Refer to Section 3.3, for disconnecting the tracking cable.
- 2) Disconnect the power supply cable from the standby system power supply module.
- 3) Disconnect the network cable from the network module.
 - → Refer to the manual of the network module, for disconnecting the network cable.
- 4) Remove the connector/terminal block from the I/O module.
- 5) Disconnect the extension cable for mounting the main base unit of the standby system.

Removing Modules

Remove the modules from the main base unit.

→ Refer to the QCPU User's Manual (Hardware Design, Maintenance and Inspection), for removing modules.

Replacing the Main Base Unit

- 1) Remove the main base unit from the control panel, etc.
- 2) Mount an alternative main base unit to the control panel, etc.

Mounting Modules

Mount the module that was removed from the previous base unit to the new one. (Mount the modules to the main base unit so that they will be located the same as those of the control system.)

→ Refer to the QCPU User's Manual (Hardware Design, Maintenance and Inspection), for mounting modules.

Wiring

- 1) Connect the tracking cable to the standby system CPU module.
 - → Refer to Section 3.3, for connecting the tracking cable.
- 2) Connect the power supply cable to the power supply module.
- 3) Connect the network cable to the network module.
 - → Refer to the manual of the network module, for connecting the network cable.
- 4) Mount the terminal block/connector to the I/O module.
- 5) Connect the extension cable for mounting to the main base unit of the standby system.





Turn on the Standby System's Power Supply

- 1) Align the position of the standby system CPU module's RUN/STOP switch with that of the control system.
- 2) Set that standby system CPU module's RESET/L.CLR switch to the central position (reset switch neutral position).
- 3) Turn the standby system's power supply ON.

Confirm the Power Supply Module's POWER LED

Confirm that the power supply module's POWER LED is it (green), and that power is being supplied properly.

Start standby system

Diagram 8.34 Main Base Unit Replacement Procedure

⊠POINT -

When the standby system is powered OFF, the control system CPU module develops in a STANDBY SYS.DOWN (error code: 6300) continuation error. After the replacement of the standby system CPU module is complete, reset errors in the control system CPU module as necessary. Refer to Section 8.2 for the error resetting method.

8.3.7 Procedure for Replacing Module mounted on the I/O Station of Redundant System

By using the online module change of GX Developer, the module mounted on the MELSECNET/H remote I/O network remote I/O station can be replaced while the redundant system is running .

Following modules can be replaced by using this method.

- I/O Module *1
- Intelligent Function Module *2
 (Analog module, temperature input module, temperature control module, pulse input module)
- * 1: Refer to the following manual, for module replacement by using online module change of GX Developer.
 - Q-Corresponding MELSECNET/H Network System Reference Manual (Remote I/O network)
- * 2: Refer to the manual of the intelligent function module, for module replacement by using online module change of GX Developer.

⊠POINT

TROUBLESHOOTING

Intelligent function modules other than the above cannot be replaced online using GX Developer.

When replacing these intelligent function modules, power off the remote I/O station in advance.



8.3.8 Replacement of Modules Mounted to Extension Base Unit

A module mounted to the extension base unit can be replaced online using GX Developer during operation of the system.

The following shows modules where online module change (hot swapping) can be performed using GX Developer.

- I/O module *1
- Intelligent function module *2 (Analog module, temperature input module, temperature regulating module, and pulse input module)
- * 1: For changing modules online (hot swapping) using GX Developer, refer to the following manual.

 QCPU User's Manual (Hardware Design, Maintenance and Inspection)
- * 2: For changing modules online (hot swapping) using GX Developer, refer to the manual for the intelligent function module used.

⊠POINT -

- When connecting the extension base unit, use the Redundant CPU whose first 5 digits of serial No. is "09012" or later in both systems. In addition, connect the redundant type extension base unit to the first extension stage.
- 2. The intelligent function module other than the analog module, temperature input module, temperature regulating module, and pulse input module are not compatible with online module change (hot swapping) using GX Developer. For the intelligent function module which is not compatible with online module change (hot swapping) using GX Developer, turn OFF power supply of the power supply module before replacing modules.




8.3.9 Tracking Cable Replacement

(1) Tracking Cable Replacement

The tacking cable cannot be replaced while both systems are running.

After powering off the standby system (or keeping the standby system CPU module reset), replace the tracking cable.

The standby system can be powered off or reset while the redundant system is running.

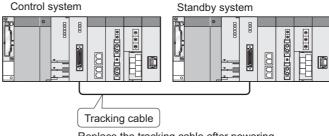


Replace the tracking cable after powering off the standby system or while keeping the standby system CPU module reset.

Diagram 8.35 System where Tracking Cable Replacement



(2) Replacement Procedure

The procedure of replacing the tracking cable is shown in the Diagram 8.36.



Power OFF the Standby System

Power off the standby system. (Or, set the RESET/L.CLR switch to the RESET position (reset).

Tacking Cable Replacement

- (1) Disconnect the tracking cable from the control system CPU module.
 - → Refer to Section 3.3, for disconnecting the tracking cable.
- (2) Disconnect the tracking cable from the standby system CPU module.
- (3) Connect the tracking cable connector to the standby system CPU module.
 - → Refer to Section 3.3, for disconnecting the tracking cable.
- (4) Connect the tracking cable connector to the control system CPU module.

Power ON the Standby System

- (1) Confirm that the RUN/STOP switch of the standby system CPU module is in the same position as that of the control system CPU module.
- (2) Power on the control system.(OR Set the RESET/L.CLR switch of the standby system CPU module to the central position (reset switch neutral position).

Confirm the Power Supply Module's POWER LED

Confirm that the power supply module POWER LED is lit (green), and that power is being supplied properly.

Start standby system

Diagram 8.36 Tracking Cable Replacement

⊠POINT

Make sure to replace the tracking cable after powering off the standby system (or setting the RESET/L.CLR switch to the RESET position (reset).

If the tracking cable is connected or disconnected while both systems are running, it may result in either of the followings.

- The scan time is extended and the "WDT ERROR (ERROR CODE: 5000, 5001) occurs.
- The "TRK.CIR.ERROR (ERROR CODE: 1112, 1113, 1116)" occurs and the redundant CPU operation stops.

8.3.10 Replacement Procedures of Extension Cable

(1) Replacement of extension cable

An extension cable which connects the main base unit and the redundant type extension base unit of the control system cannot be replaced during operation of the redundant system.

Before replacing the extension cable, always switch the control system to the standby system by GX Developer.

(2) Replacement procedures

The replacement procedure of the extension cable is shown in Diagram 8.37.



Checking the system where the extension cable to be replaced is connected

Check that the extension cable to be replaced is connected to the standby system (CONTROL LED is turned OFF).

When connecting an extension cable of the control system, switch system to the standby system by GX Developer.

Turning OFF power supply of standby system

Replacement of an extension cable of the standby system

Disconnect an extension cable from the main base unit.

Connect the extension cable to be replaced to the main base unit.

Turning ON power supply of standby system

- (1) Check that RUN/STOP switch of the standby system CPU module is set to RUN/STOP position.
- (2) Check that RESET/L. CLR switch of the control system CPU module is set to center position (reset cancel).
- (3) Turn ON power supply of the standby system.

Checking POWER LED of the power supply module

Check that POWER LED of the power supply module is turned ON (green) and power supply is supplied normally.

Start standby system

Diagram 8.37 Replacement Procedures of Extension Cable

SYSTEM CONFIGURATION

OVERVIEW

SYS

TRACKING CABLE

PROCEDURE FOR STARTING UP A REDUNDANT SYSTEM

REDUNDANT SYSTEM FUNCTIONS

REDUNDANT SYSTEM NETWORKS

PROCESSING TIME FOR REDUNDANT SYSTEMS



CHAPTER9 PROCESSING TIME FOR REDUNDANT SYSTEMS

The scan time for redundant system control system CPU modules is the total time for I/O refresh and instruction execution added to the tracking time for END processing.

Refer to the following manual regarding I/O refresh instruction execution time, and END processing for control CPU module (redundant CPUs).

CPU User's Manual (Function Explanation and Program Fundamentals)

The method for adding tracking time is explained here.

The time required for system switching will also be explained.

9.1 Extension of Scan Time due to Tracking

PROCESSING TIME FOR REDUNDANT SYSTEMS

Refer to Table9.1 for the calculation of extended scan time of control system CPU module due to tracking.

Table 9.1 Extension of Scam Time due to Tracking

		Scan Time Extension Time (ms)	
Synchronized Tracking Mode		Sequence Control system Tra O Sequence Tra O Sequence Trb Trb Adjust Tracking transfer data	Ts = Tra + Trb + α
Program Priority Mode	Tp >= Trb	Sequence Control system Tra O Sequence Tra Trb Trb Tracking transfer process Standby system Adjust Tracking transfer data	Ts = Tra + α
	Tp < Trb	Extension of Scam Time Sequence Tra Tra Tra Tra Tra Tra Adjust Tracking transfer data	Ts = Tra + Trb - Tp + α

Ts: Scan Time Extension Time

Tra: Tracking Data Preparation Time

Trb: Tracking Processing Time
Tp: Program Execution Time

 α : Overhead time for tracking transfer (according to the right table)

Condition	α (ms)
Both systems are normal	Max. 4
When a momentary power failure or power-off occurs in the standby system	Momentary power failure time to max.
While communication is executed via tracking cable	Max. 30

PROCESSING TIME FOR REDUNDANT SYSTEMS



(1) Tracking Data Preparation Time (Tra)

Tracking data preparation time is calculated as shown below.

Tra = 1 + Tra1 + Tra2 + Tra3 + Tra4 (ms)

Tra :Tracking Data Preparation Time

Tra1 to Tra4 :Transfer Data Processing Time Shown in

Table9.2

Table 9.2 Processing Times of Tra1 to Tra4

	Transfer Data		Processing Time (ms)
Tra1	Signal Flow Memory	Time Set Using Redundant	1+0.13x10 ⁻³ × Z
IIai	Signal Flow Memory	Parameter Tracking	1+0.13x10 °×2
Tra2	SFC Information	SFC Program Execution Time	1 (Fixed)
Tra3 P	PID Control Instructions	PIDINIT Instruction Execution	0.5 (Fixed)
		Time	
		S.PIDINIT Instruction	0.5 (Fixed)
		Execution Time	
Tra4	Device Data	-	X1+X2+X3 ^{*1}

Z: Number of Program Steps

•X1:Processing time according to number of device points for tracking settings

 $X1=(D1 \times K1) + (D2 \times K2) + (D3 \times K3) + (D4 \times K4)$ [ms]

•X2:Processing time according to number of device ranges for tracking settings

 $X2=(E1\times K5) + (E2\times K6) + (E3\times K7) + (E4\times K8)$ [ms]

 $\bullet \text{X3:} \textbf{Processing time according to number of tracking blocks for tracking settings} \\$

 $X3=(F1 \times K9) + (F2 \times K10) + (F3 \times K11)$ [ms]

D1 to D4, E1 to E4, F1 to F3, and K1 to K11 are values used in Table9.3

^{* 1:} X1 to X3 are calculated as follows.

Table 9.3 Counting Value of D1 to D4, E1 to E4, F1 to F3, and K1 to K11

Symbol	Content	System Number Symbol	Counting Value
D1	Number of Tracking Device Points outside of Index Register	K1	0.09×10^{-3}
D2	Number of Tracking Device Points for Index Register	K2	0.15×10^{-3}
D3	Number of Tracking Device Points for Standard RAM File Register	K3	0.09 × 10 ⁻³
D4	Number of Tracking Device Points for SRAM Card File Register	K4	0.42 × 10 ⁻³
E1	Number of Tracking Device Ranges outside of Index Register	K5	4 × 10 ⁻³
E2	Number of Tracking Device Ranges for Index Register	K6	5 × 10 ⁻³
E3	Number of Tracking Device Ranges for Standard RAM File Register	K7	5 × 10 ⁻³
E4	Number of Tracking Device Ranges for SRAM Card File Register		5 × 10 ⁻³
F1	Number of Blocks not Including File Register	K9	1×10 ⁻³
F2	Number of Blocks Including Standard RAM File Register	K10	25 × 10 ⁻³
F3	Number of Blocks Including SRAM Card File Register	K11	*2

^{* 2:} The value of K11 differs depending on QnPRHCPU Serial No.

Round up the fractional portion of G calculated by the above expression.

Use the following value as the size of one cluster.

•Q2MEM-1MBS: 256 words (512 bytes)

•Q2MEM-2MBS: 512 words (1024 bytes)

[•]QnPRHCPU whose first digits of serial No. is "06081" or before: (120+3 \times G*3) \times 10⁻³

[•]QnPRHCPU whose first digits of serial No. is "06082" or later: 120×10^{-3}

^{* 3:} G is the number of clusters of the specified file register. Calculate it using the following expression.

G = (file register capacity)/(size of one cluster)

PROCESSING TIME FOR REDUNDANT SYSTEMS



(2) Tracking Processing Time (Trb)

Tracking processing time is calculated as shown below.

Trb = $0.26 \times 10^{-3} \times (N1 + N2 + N3 + N4)$ (ms)

Tr :Tracking Processing Time

N1 to N4 :Number of data transferred for transfer data shown

in Table9.4 (Unit: Word)

Table 9.4 Number of N1 to N4 Data Transferred

	Transfer Data		Number of Data Transferred (Words)
N1	 Signal-flow Memory	Time set for redundant	Σ (Number of steps for
N2	SFC Information	parameter tracking settings SFC program execution time	each program/16)*1 13312 (13k) (Fixed)
No	PID Control Instruction	PIDINIT Instruction Execution Time	1024 (1k) (Fixed)
N3	Information	S.PIDINIT Instruction Execution Time	1024 (1k) (Fixed)
N4	Device Data	_	4+D1+D2+D3+D4 D1: Inside Device (except Index Register) D2: Index Register D3: File Register (Standard RAM) D4: File Register (SRAM Card)

^{* 1:} Fractions are rounded up

9



MELSEG Q series

9.2 System Switching Time

System switching time is the time required from detection of the switching condition for the control system to the start of the new control system CPU's control.

Calculate the system switching time using the following expression.

 $Tsw = \alpha + T\alpha m + Trc (ms)$

Tsw: System Switching time*3

Trc : Reflection time for tracking data using the standby system

CPU module

 $T\alpha m$: CC-Link IE Controller Network, MELSECNET/H, CC-Link,

PROFIBUS-DP automatic refresh time (T α m)

(Refer to the manual for the network module being used.)

lpha : When the extension base unit is connected

- Signal flow memory is not tracking-transferred: 31.5ms
- Signal flow memory is tracking-transferred: 12.5ms

When the extension base unit is not connected

- Signal flow memory is not tracking-transferred: 20.5ms
- · Signal flow memory is tracking-transferred: 1.5ms

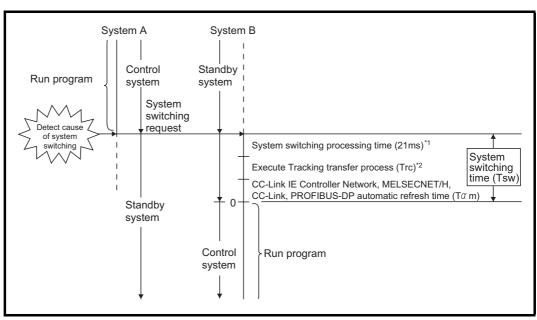


Diagram 9.1 System Switching Timing

- * 1: This indicates the system switching processing time for the case where the signal-flow memory is set to "No tracking" in "Tracking settings" of "Redundant parameter".
- * 2: This is 0 ms when tracking processing is not complete.
- * 3: The maximum system switching time is shown.

PROCESSING TIME FOR REDUNDANT SYSTEMS



(1) Tracking Data Reflection Time (Trc)

The reflection time for tracking data is calculated as shown below.

Trc = 1 + Trc1 + Trc2 + Trc3 + Trc4 (ms)

: Tracking data preparation time

: Processing time for transfer data shown in Trc1 to Trc4

Table9.5

Table 9.5 Processing Times of Tra1 to Tra4

	Transfer Data		Processing Time (ms)
Trc1	Signal Flow Memory	Setting time for redundant	1+0.13 × 10 ⁻³ × Z
1101	Signal Flow Memory	parameter tracking settings	1+0.13 × 10 ° × Z
Trc2	SFC Information	SFC program execution time	1(Fixed)
Trc3	PID Control Instructions	PIDINIT instruction execution	0.5 (Fixed)
		time	
		S.PIDINIT instruction	0.5 (Fixed)
		execution time	
Trc4	Device Data	-	X1 + X2 + X3 ^{*1}

Z: Number of Program Steps

- •X1:Processing time according to number of device points for tracking settings X1=(D1 \times K1) + (D2 \times K2) + (D3 \times K3) + (D4 \times K4) [ms]
- •X2:Processing time according to number of device ranges for tracking settings $X2=(E1 \times K5) + (E2 \times K6) + (E3 \times K7) + (E4 \times K8)$ [ms]
- •X3:Processing time according to number of tracking blocks for tracking settings X3=(F1 \times K9) + (F2 \times K10) + (F3 \times K11) [ms]

D1 to D4, E1 to E4, F1 to F3, and K1 to K11 are values used in Table9.6

^{* 1:} X1 to X3 are calculated as follows.

APPENDICES

- * 2: The value of K11 differs depending on QnPRHCPU Serial No.
 - •QnPRHCPU whose first digits of serial No. is "06081" or before: $(120+3\times G^{*3})\times 10^{-3}$
 - •QnPRHCPU whose first digits of serial No. is "06082" or later: 120×10^{-3}
- * 3: G is the number of clusters of the specified file register. Calculate it using the following expression.
 - G = (file register capacity)/(size of one cluster)
 - Round up the fractional portion of G calculated by the above expression.
 - Use the following value as the size of one cluster.
 - •Q2MEM-1MBS: 256 words (512 bytes)
 - •Q2MEM-2MBS: 512 words (1024 bytes)



APPENDICES

Appendix 1 Comparison of Q4ARCPU and QnPRHCPU

A comparison of Q4ARCPU and QnPRHCPU redundant systems is shown in Table App.1.

Table App.1 Comparison of Q4ARCPU and QnPRHCPU Redundant Systems

Item		QnPRHCPU Redundant System	Q4ARCPU Redundant System
		Internal device 48k Word Setting Time	Internal device 48k Word Setting Time
	Tracking Time	Synchronized Tracking Mode: 41 ms *1	-
Performance	Tracking Time	-	Batch Transfer Mode: 68.4 ms
		Program Priority Mode: 21 ms *1	• Repeat Mode: 34.2 ms *1
	System Switching Time	Tsw=21 + T + Trc (Refer to Section 9.2)	300ms
	A Series Modules	N/A	Applicable
	QnA Series Modules	N/A	Applicable
	CC-Link Auto Refresh	Applicable (Maximum 4 Modules)	N/A (Performed using FROM/TO
	Setting	Applicable (Maximum + Modules)	instruction)
System Configuration	Maximum Number of Modules Mounted on Main/ Extension Base Unit	< <first "09011"="" 5="" digits="" earlier="" is="" no.="" of="" or="" serial="">> 11 modules (Main base unit only) → Modules which are not duplicated are mounted to MELECNET/H remote I/O station (Number of mountable modules on remote I/O station: 64 modules per station) <<first "09012"="" 5="" digits="" is="" later="" no.="" of="" or="" serial="">> Up to 63 modules (Main base unit + extension base unit: 7 stages)</first></first>	58 Modules (main base unit + extension base unit : 7 stages)

^{* 1:} Q4ARCPU repeat mode results in program priority mode on QnPRHCPU.

Table App.1 Comparison of Q4ARCPU and QnPRHCPU Redundant Systems (Continued)

	Item	OnPRHCPU Redundant System	Q4ARCPU Redundant System
System Configuration	System Extension via Extension Base Unit	 CAPRHCPU Redundant System <ld> <ld> <ld> <ld></ld></ld></ld></ld>	Applicable (Extension base units: Maximum 7 stages)
	Single CPU System	Applicable (Debug mode only)	Applicable

- * 2: MELSECNET/H remote I/O stations have a limit for the maximum number of parameters that can be set with GX Configurator as intelligent function modules.
 - •The maximum number of parameter settings for initialization settings: 512
 - •The maximum number of parameter settings for automatic refresh settings: 256



Table App.1 Comparison of Q4ARCPU and QnPRHCPU Redundant Systems (Continued)

Item			QnPRHCPU Redundant System	Q4ARCPU Redundant System
		Bus Connection	N/A	Applicable
		CPU Direct Connection	Applicable (Communication with the CPU module connected to the GOT only.)	Applicable
		Computer Link Connection	N/A	Applicable
	GOT Connection Type	MELSECNET/ H Remote I/O Station Connection	Applicable (N/A for extension base unit)	N/A
	Турс	CC-Link Connection	Applicable	Applicable
System		MELSECNET/ H PLC to PLC Network Connection	Applicable (N/A for extension base unit)	N/A
Configuration		Ethernet Connection	Applicable	Applicable
	Mounting I/O module or network module on slot 0		Disabled (Slot 1 becomes I/O number "0") → Mount I/O modules and network modules on slots 1 and later.	Enabled
	16 character LED display (auto diagnostics information and comments are displayed.)		N/A → Auto diagnostics error information and comments, etc. can be confirmed using GX Developer.	Available
	Manual System Switching		System switching by the system switching instructions or redundant operation of GX Developer	System switching using switches of bus switching module (A6RAF)
	Manual operational mode switching		Operation mode change by redundant operation of GX Developer	Operation mode change using switches of bus switching module (A6RAF)
	CPU module damage external output		Power supply module error contact output	System management module (AS92R) CPU/ALRAM/WDT contact point output
	Q6PU		N/A	Applicable
	SW_IVD-0	GPPQ	N/A	Applicable
Programming	GX Develo	per	Version 8.18U and later is applicable	SW0D5C-GPPW and later is applicable
Tool	MX Links		N/A	
	MX Monito	r	→ Substituted with MX Component. (PC-side	Applicable
	MX Chart		application program correction necessary.)	
	Connection Port		RS-232,USB	RS422 (RS-232/RS-422 converter)

Table App.1 Comparison of Q4ARCPU and QnPRHCPU Redundant Systems (Continued)

	Item		QnPRHCPU Redundant System	Q4ARCPU Redundant System
	Instruction Restrictions		Instructions shown in Table App.2 are inapplicable	-
	Special Relay		Some special relays are different. *3	-
	Special Re	gister	Some special registers are different. *3	-
Program	A-compatible Special Relay (SM1000 and later)		N/A → Must be changed to a special relay applicable for QnPRHCPU. *3	Applicable
3	A-compatib	ole Special	N/A	
	Registers (SD1000 and		→Must be changed to a special register applicable	Applicable
	later)		for QnPRHCPU. *3	
	Number of Steps		Number of steps for some instructions are different	-
	Low-speed Execution Type Program		N/A	Applicable
	Status Latch		N/A	Applicable
	Program Trace		N/A	Applicable
	Simulation		N/A	Applicable
Debug Function	Oimalation		→ Substituted with GX Simulator	Аррисавіс
		Sequence	N/A	
	Step Execution	Program	→ Substituted with GX Simulator	Applicable
		SFC Program	N/A	

^{* 3:} Refer to the following manual for

QCPU User's Manual (Hardware Settings, Maintenance and Inspection)

Table App.2 Instructions Inapplicable for QnPRHCPU

Instruction symbol	Instruction Name	Instruction symbol	Instruction Name
LED	LED Display of ASCII code	PR	Print ASCII code
LEDC	LED display of Comments	PRC	Print Comments
SLT	Status Latch Set	KEY	Numerical Key Input
SLTR	Status Latch Reset	UDCNT1	1-phase Input Up/Down Counter
STRA	Sampling Trace Set	UDCNT2	2-phase Input Up/Down Counter
STRAR	Sampling Trace Reset	TTMR	Teaching Timer
PTRAEXE(P)	Program Trace Execution	STMR	Special Function Timer
PTRA	Program Trace Set	ROTC	Rotary Table Near Path Rotation Control
PTRAR	Program Trace Reset	RAMP	Ramp Signal
MSG	Message Displayed on Peripheral Devices	SPD	Pulse Density Measurement
PKEY	Peripheral Device Keyboard Input	PLSY	Pulse Output
RFRF	Read From Remote I/O Station Special Function Module	PWM	Pulse Width Modulation
RTOP	Write To Remote I/O Station Special Function Module	MTR	Matrix Input



Appendix 2 Comparison of Qn(H)CPU and QnPRHCPU

A Comparison of Qn(H)CPU and QnPRHCPU is shown in Table App.3.

Table App.3 Comparison of Qn(H)CPU and QnPRHCPU

Item		QnPRHCPU	QnHCPU
Performance	Scan Time	Scan time is increased by the tracking time. Inside device 48 k word setting time Synchronized tracking mode: 41 ms Program priority mode: 21 ms	-
	A Series Module	N/A	Applicable
System Configuration	Maximum Number of Modules Mounted on Main/Extension Base Unit	< <first "09011"="" 5="" digits="" earlier="" is="" no.="" of="" or="" serial="">> 11 modules (Main base unit only) → Modules which are not duplicated are mounted to MELECNET/H remote I/O station (Number of mountable modules on remote I/O station: 64 modules per station) <<first "09012"="" 5="" digits="" is="" later="" no.="" of="" or="" serial="">> Up to 63 modules (Main base unit + extension base unit: 7 stages)</first></first>	64 Slots (Main base unit + Extension base unit: 7 stages)

Table App.3 Comparison of Qn(H)CPU and QnPRHCPU (Continuation)

Item	QnPRHCPU	QnHCPU
System System Expansion Extension Base	< <first "09011"="" 5="" digits="" earlier="" is="" no.="" of="" or="" serial="">> N/A → Modules for the expanded system are mounted to MELSECNET/H remote I/O station. [Restrictions on Mounting Modules on Remote I/O Stations] FROM/TO instructions and intelligent function module devices (U□\G□) are inapplicable. Use REMFR/REMTO for accessing. Or, in GX Configurator, configure the settings for intelligent function modules on remote I/O stations.*1 The following modules cannot be mounted to remote I/O stations: CC-Link IE Controller Network module, MELSECNET/H network module, interrupt module, Web server module, MES interface module, PROFIBUS-DP slave module, PROFIBUS-DP interface module, DeviceNet master module. </first>	Applicable (Extension base units: maximum 7 levels)

- * 1: MELSECNET/H network system remote I/O stations have a limit for the maximum number of parameters that can be set with GX Configurator as intelligent function modules.
 - The maximum number of parameter settings for initialization settings: 512
 - The maximum number of parameter settings for automatic refresh settings: 256



Table App.3 Comparison of Qn(H)CPU and QnPRHCPU (Continuation)

Item			QnPRHCPU	QnHCPU
	Multi CPU S	ystem	N/A	Applicable
	Single CPU	System	Applicable (Debug mode only)	Applicable
		Bus Connection	N/A	Applicable
		CPU Direct	Applicable (Communication with the CPU module connected to	Applicable
		Connection	the GOT only)	Терпоиле
		Computer Link Connection	N/A	Applicable
		Ethernet Connection	Applicable	Applicable
	GOT Connection	CC-Link IE Controller Network Connection	Applicable (N/A for extension base unit)	Applicable
System Configuration	Туре	MELSECNET/ H PLC to PLC Network Connection	Applicable (N/A for extension base unit)	Applicable
		CC-Link Connection	Applicable	Applicable
		MELSECNET/H Remote I/O Station Connection	Applicable (N/A for extension base unit)	Applicable
	Mounting I/O module or network module on slot 0		Disabled (Slot 1 becomes I/O number "0") → Mount I/O modules and network modules on slots 1 and later.	Enabled
	Restriction on the applicable intelligent function modules		Applied → The Ethernet modules and MELSECNET/H modules of serial No. "06052" or later are applicable.	Not applied
Programming Tool	GX Develo	per	Version 8.18U or later is applicable	Version 4 or later is applicable.
	Instruction restriction Floating point calculations		Instructions shown in Table App.4 cannot be used. Instructions shown in Table App.5 can be used under restrictions.	-
Program			Only internal operation processing with single precision. (Internal operation processing precision level (single/double) is not selectable)	Internal operation processing precision level (single/double) is selectable.
	High-speed	d interrupt (I49)	N/A	Applicable
	Slow-speed program	d execution-type	N/A	Applicable

Series

Table App.4 Instructions Inapplicable for QnPRHCPU

Instruction symbol	Instruction Name	Instruction symbol	Instruction Name
PLOADP	Program Load from Memory Card	PLSY	Pulse Output
PUNLOADP	Program Unload from Memory Card	PWM	Pulse Width Modulation
PSWAP	Load + Unload	MTR	Matrix input
PR	Print ASCII code	S.TO	Write To Host Station CPU Shared Memory
PRC	Print Comments	S(P).SFCF	Request of Motion SFC Program Startup
KEY	Numerical Key Input	S(P).SVST	Request of Servo Program Startup
UDCNT1	1-phase Input Up/Down Counter	D(P).CHGV	Axis Speed Change during Positioning and JOG
ODCNTT			operation
UDCNT2	2-phase Input Up/Down Counter	D(P).CHGT	Torque Control Value Change during Operation and
ODCN12	2-phase input op/Down Counter		Suspension in Real Mode
TTMR	Tooching Timer	D/D) CHCA	Current value Change of Halted Axis/Synchronized
I I IVIE	Teaching Timer	D(P).CHGA	Encoder/Cam axis
STMR	Special Timer	D(P).DDWR	Write Other CPU Device Data into Host CPU
ROTC	Rotary Table Near Path Rotation Control	D(P).DDRD	Reads other CPU device data into the host CPU
RAMP	Ramp Signal	D(D) CINIT	Paguage of Other CDLI Interrupt Program Startus
SPD	Pulse Density Measurement	D(P).GINT	Request of Other CPU Interrupt Program Startup.

Table App.5 Instructions Restricted for QnPRHCPU

Instruction Symbol	Instruction Name	Remark	
COM	Selection Refresh	For restrictions on COM and ZCOM, refer to Section 7.1 (7).	
ZCOM	Refresh of Specified Module		



Appendix 3 Comparison of QnPHCPU and QnPRHCPU

A comparison of QnPHCPU and QnPRHCPU is shown in Table App.6.

Table App.6 Comparison of QnPHCPU and QnPRHCPU

	Item	QnPRHCPU	QnPHCPU
Performance	Scan Time	Scan time is increased by the tracking time. Internal device 48 k word setting time • Synchronized tracking mode: 41 ms • Program priority mode: 21 ms	-
System Configuration	Maximum Number of Modules Mounted on Main/ Extension Base Unit	< <p><<first "09011"="" 5="" digits="" earlier="" is="" no.="" of="" or="" serial="">> 11 modules (Main base unit only) → Modules which are not duplicated are mounted to MELECNET/H remote I/O station (Number of mountable modules on remote I/O station: 64 modules per station) <<first "09012"="" 5="" digits="" is="" later="" no.="" of="" or="" serial="">> Up to 63 modules (Main base unit + extension base unit: 7 stages)</first></first></p>	64 Slots (Main base unit + Extension base unit: 7 stages)

Table App.6 Comparison of QnPHCPU and QnPRHCPU (Continued)

Item		QnPRHCPU	QnPHCPU	
System Configuration	System expansion using extension base units	< <first "09011"="" 5="" digits="" earlier="" is="" no.="" of="" or="" serial="">> N/A → Modules for the expanded system are mounted to MELSECNET/H remote I/O station. [Restrictions on Mounting Modules on Remote I/O Stations] FROM/TO instructions and intelligent function module devices (U□\G□) are inapplicable. Use REMFR/REMTO for accessing. Or, in GX Configurator, configure the settings for intelligent function modules on remote I/O stations.*1 The following modules cannot be mounted to remote I/O stations: CC-Link IE Controller Network module, MELSECNET/H module, interrupt module, Web server module, MES interface module, PROFIBUS-DP slave module, PROFIBUS-DP interface module, DeviceNet master module, DeviceNet slave module, and AS-i master module. For Ethernet modules, dedicated instructions, interrupt pointers, e-mail function, communication by the fixed buffer, FTP server function, web server function is not usable. <<first "09012"="" 5="" digits="" is="" later="" no.="" of="" or="" serial="">> Applicable (Extension base units: Up to 7)</first> The following modules cannot be mounted: Interrupt module, CC-Link IE Controller Network module, MELSECNET/H module, Ethernet module (function version: B or earlier), Web server module (first 5 digits of serial No.: "09011" or earlier), PROFIBUS-DP master module, PROFIBUS-DP slave module, PROFIBUS-DP interface module, DeviceNet master module, and DeviceNet slave module. For intelligent function modules, dedicated instructions and interrupt pointers are not usable. </first>	Applicable (Extension base units: maximum 7 levels)	

- * 1: MELSECNET/H remote I/O stations have a limit for the maximum number of parameters that can be set with GX Configurator as intelligent function modules.
 - The maximum number of parameter settings for initialization settings: 512
 - The maximum number of parameter settings for automatic refresh settings: 256



Table App.6 Comparison of QnPHCPU and QnPRHCPU (Continued)

	Item		QnPRHCPU	QnPHCPU
	Multi CPU System		N/A	Applicable
	Single CPU System		Applicable (Debug mode only)	Applicable
		Bus Connection	N/A	Applicable
		CPU Direct Connection	Applicable (Communication with the CPU module connected to the GOT only)	Applicable
		Computer Link Connection	N/A	Applicable
		Ethernet Connection	Applicable	Applicable
	GOT Connection Type	CC-Link IE Controller Network Connection	Applicable (N/A for extension base unit)	Applicable
System Configuration		MELSECNET/ H PLC to PLC Network Connection	Applicable (N/A for extension base unit)	Applicable
		CC-Link Connection	Applicable	Applicable
		MELSECNET/ H Remote I/O Station Connection	Applicable (N/A for extension base unit)	Applicable
	Mounting I/O module or network module on slot 0		Disabled (Slot 1 becomes I/O number "0".) → Mount I/O modules and network modules on slots 1 and later.	Enabled
	Restriction on the applicable intelligent function modules		Applied → The Ethernet modules and MELSECNET/H module of serial No. "06052" or later are applicable.	Not applied
Programming	GX Develo	per	Version 8.18U or later is applicable.	Version 7 or later is applicable.
Tool	PX Develop	per	Version 1.06G or later is applicable	Version 1.00A or later is applicable.
	Instruction	restriction	Instructions listed in Table App.7 are inapplicable.	-
Program	Low-speed Program	Execution Type	N/A	Applicable

Table App.7 Instructions Inapplicable for QnPRHCPU

Instruction Symbol	Instruction Name	Instruction Symbol	Instruction Name	
PLOADP	Program Load from Memory Card	PLSY	Pulse Output	
PUNLOADP	Program Unload from Memory Card	PWM	Pulse Width Modulation	
PSWAP	Load + Unload	MTR	Matrix Input	
PR	Print ASCII code	S.TO	Write To Host Station CPU Shared Memory	
PRC	Print Comments	D(P).SFCF	Request of Motion SFC Program Startup	
KEY	Numerical Key Input	D(P).SVST	Request of Servo Program Startup	
UDCNT1	1-phase Input Up/Down Counter	D(P).CHGV	Axis Speed Change during Positioning and JOG	
		2(:):::::::	operation	
UDCNT2	2-phase Input Up/Down Counter	D(P).CHGT	Torque Control Value Change during Operation and	
	P P	2(.).00.	Suspension in Real Mode	
TTMR	Teaching Timer	D(P).CHGA	Current value Change of Halted Axis/Synchronized	
TTWILE	Todoming Times		Encoder/Cam axis	
STMR	Special Timer	D(P).DDWR	Write Host CPU Device Data into Other CPU	
STIVIT	Оресіаі Тіпеі		devices	
ROTC	Rotary Table Near Path Rotation Control	D(P).DDRD	Read Other CPU Device Data into Host CPU.	
RAMP	Ramp Signal	D/D) CINT	Request of Other CPU Interrupt Program Startup.	
SPD	Pulse Density Measurement	D(P).GINT		

Table App.8 Instructions Restricted for PRHCPU

Instruction Symbol	Instruction Name	Remark
COM	Selection Refresh	For restrictions on COM and ZCOM, refer to Section 7.1 (7).
ZCOM	Refresh of Specified Module	To restrictions on cow and zoow, refer to section 7.1 (7).



Appendix 4 Sample Programs when Using CC-Link

This section explains sample programs that allow the CC-Link control to be continued when system switching occurs in a redundant system.

When connecting a redundant system to the CC-Link, create the sample program shown in Appendix 4.5.

Appendix 4.1 Sample Program System Configuration

The system configuration is shown below for the sample program, which sets the network parameters for CC-Link.

In Diagram App.1, from X/Y40 to X/Y5F are assigned to the I/O number of CC-Link master module.

(Section 2.4)

If the system being used is different from the diagram (Diagram App.1), change the settings for the sample program device Nos., and for CC-Link network parameters.

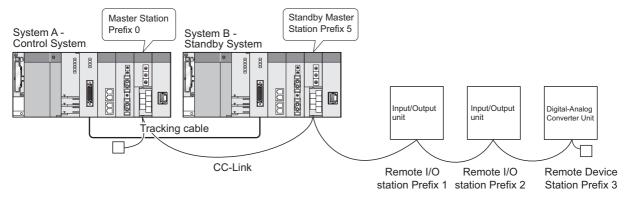


Diagram App.1 Sample Program System Configuration

Appendix 4.2 Sample Program Names

The sample program names are shown in Table App.9.

Change the program names to match the system used.

When changing the program name, the program name should also be changed in the program settings of the PLC parameter settings.

Program Name	Execution Type	Processing Content	
CHANGE Scan		A processing program that makes QJ61BT11N usable with redundant system CPUs Make the program settings in the PLC settings so that "MAIN" will be executed after "CHANGE".	
MAIN	Scan	A CC-Link control processing program	

Table App.9 Sample Program Names



Appendix 4.3 Devices Used in Programs

(1) CPU Module Devices

Device Nos. used in sample programs and their applications are shown in Table App.10 and Table App.11.

Table App.10 CPU Module Devices

Device Number	Application	Remarks	
SM400	Always On	-	
SM402	ON for 1 scan only after RUN	-	
SM1515	Control system judgment flag	Control system: SM1515:ON,SM15165:OFF	
SM1516	Standby system judgment flag	Standby system: SM1515:OFF,SM1516:ON	
SM1518	Standby system to control system switching status flag	-	
SM1592	Enable manual system switching flag	OFF : Manual switching prohibited ON : Manual system switching enabled	
M100	Enable control program execution flag	OFF : control program execution not possible ON : control program execution possible	
M101	System switching execution flag	OFF : system switching must not be executed ON : system switching executed	
M102	System B first startup system switching flag	OFF : system switching must not be executed ON : system switching executed	
M202	SP.CONTSW instruction error flag	OFF : normal ON : error	
M4531	During data link execution	OFF :Not executed data link ON :During data link execution	
D100-D107	Interrupt enable or interrupt disable (IMASK instruction)	interrupt prohibited interrupt enabled	
SD1601	System switching condition	16: system switching instruction	
SD1602	System switching instruction argument	Argument specified by SP.CONTSW instructions	
141	Pointer performed at STANDBY error	Switches the stand-by master station in CC-Link to the master station	

(2) CC-Link Master/Local Module Devices

Table App.11 CC-Link Master/Local Module Devices

Device Number *1	Application	Remarks
X40	Module error	OFF : Module normal
X40	Wodule error	ON : Module error
X41	Host data link status	OFF : Data link is stopped
741	1103t data link status	ON : Data linking in progress
X4F	Module ready	OFF : Operation not possible
X 1 1	Wodule ready	ON : Operation possible
SB40C	Forced master switching	OFF : Not requested
3D 1 0C	1 order master switching	ON : Requested
SB401	Refresh instruction at standby master switching	OFF : Not instructed
3D 4 01		ON : Instructed
SB442	Refresh instruction acknowledgment status at	OFF : Not executed
ODTTZ	standby master switching	ON : instruction acknowledged
SB443	Refresh instruction complete status at standby	OFF : Not executed
OD440	master switching	ON : Switching complete
SB45A	Master switching request acknowledgment	OFF : Not acknowledged
ODTOA	Master switching request acknowledgment	ON : Request acknowledged
SB45B	Master switching request complete	OFF : Not complete
3D - 3D	Master switching request complete	ON : Complete
SW443	Refresh instruction at standby master switching	0: Normal
34443	result	Other than 0: Stores an error code

^{* 1:} Indicates the device number on CPU side in (3) of this Section.



(3) Refresh Devices

In redundant systems, refresh of remote inputs (RX), remote outputs (RY) and remote registers (RWr, RWw) are set with the program.

Refresh settings of special relays (SB) and special registers (SW) are configured with network parameters.

The CC-Link refresh devices and refresh ranges for the system in Appendix 4.1 (using 5 stations) are shown in Table App.12.

Change the transfer range on the CC-Link side, and the device range on the CPU side to match them with the number of stations and module types on the system used.

Table App.12 Refresh Devices

	CPU Side			
Device Name	Transfer Range	Buffer Memory Head	Number of Data	Device Used
	go	Address	Transferred (Words)*1	201100 0000
Remote Input (RX)	RX0-RX9F	224(Е0н)	10	X1000-X109F
Remote Output (RY)	RY0-RY9F	352(160н)	10	Y1000-Y109F
Remote Register (RWr)	RWr0-RWr20	736(2E0H)	20	W1000-W1013
Remote Register (RWw)	RWw0-RWw20	480(1E0н)	20	W1100-W1113
Special Relay (SB)	SB0-SB1FF	-	-	SB400-SB5FF
Special Register (SW)	SW0-SW1FF	-	-	SW400-SW5FF

^{* 1:} Indicates the number of transferred data that is specified in the BMOV instruction.

PROCESSING TIME FOR REDUNDANT SYSTEMS

Appendix 4.4 Parameter Settings

The PLC parameters and network parameters for using the sample program are shown here.

(1) Program Settings

The program settings of the PLC parameter settings are shown in Diagram App.2. Set "MAIN" as a number lower than "CHANGE" in program settings.

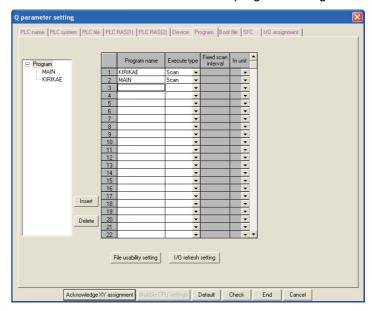


Diagram App.2 Program Setting Screen



(2) Tracking Settings

Make the settings so that the remote output (Y1000 to Y109F) and remote register (W1100 to W1113) will be tracked in the tracking settings of the redundant parameter settings.

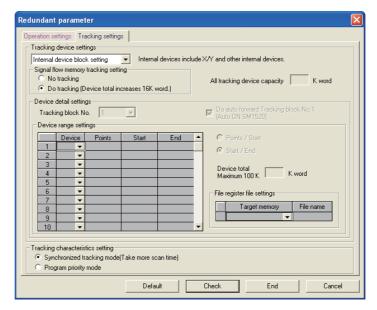


Diagram App.3 Tracking Setting Screen



(3) CC-Link Network Parameter Settings

(a) Example of CC-Link Network Parameter Settings

An example of CC-Link network parameter settings is shown in Diagram App.4. Refer to (b) for the actual settings.

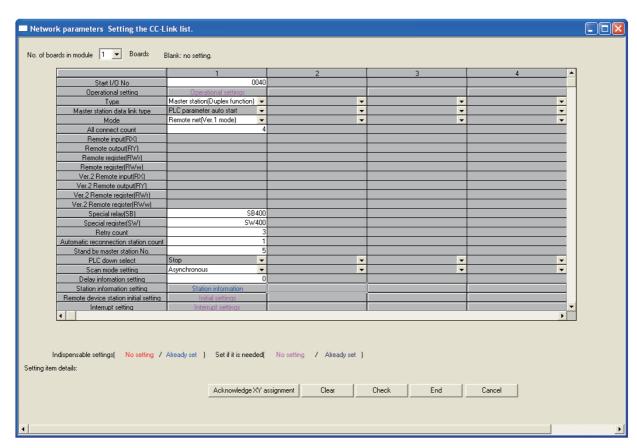


Diagram App.4 CC-Link Network Parameter Setting Screen

(b) The content of CC-Link Network Parameter Settings

The content of network parameter settings is shown below.

1) Module Count

Set module count to "1" in network parameter settings.

2) Starting I/O Number

Set the master station's starting I/O number to "40".

3) Type

Confirm that the station type is "Master Station (Duplex function)".

4) Mode

Set CC-Link's mode as "Remote Network - Ver.1 Mode".

5) All Connect Count

Set the total number of systems connected to the CC-Link system, including reserved stations to "4 (Systems)".



6) Special Relay (SB)

Set the special relay (SB) refresh device to SB400, "Special relay (SB)".

7) Special Register (SW)

Set the special register (SB) refresh device to SW400, "Special register (SW)".

8) Retry Count

Use the retry count for communication errors to "3 (Default)".

9) Automatic Reconnection Station Number

Use 1 link scan for return to system, set at "1(Default)".

10) Standby Master Station No.

Set the standby master station number to station number "5".

11) PLC Down Select

Use the data link status as "Stop (Default)" for when CPU errors occur in the master station sequence.

12) Scan Mode Setting

Use the setting for link scan for sequence scan as "Asynchronous (Default)".

13) Delay Information Setting

Use the link scan interval as "0(Default)".

14) Station Information Setting

Set the station information to "Station Information Settings" as shown in Diagram App.5.

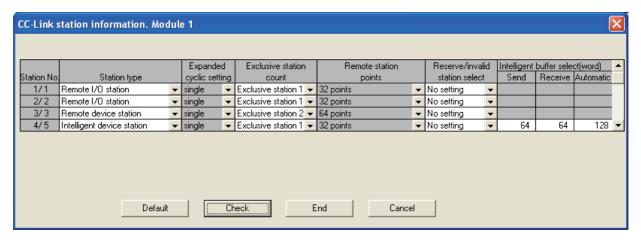


Diagram App.5 CC-Link Station Information Setting

PROCESSING TIME FOR REDUNDANT SYSTEMS

Appendix 4.5 Sample Program

- (1) When the QJ61BT11N's serial No. (first 5 digits) is "07112" or later
 - (a) Sample Program Name: CHANGE
 - 1) Sample program overview flow

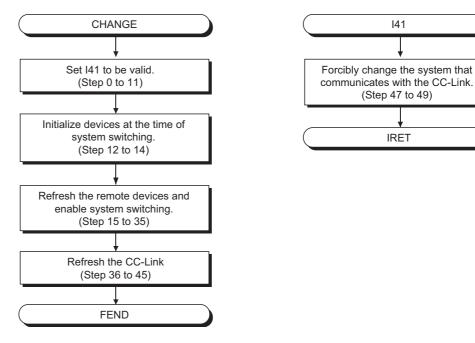


Diagram App.6 Sample program overview flow



2) Sample Program

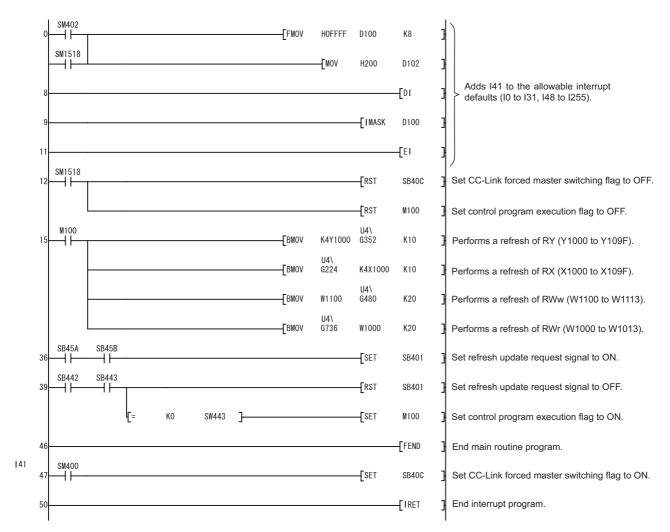


Diagram App.7 A sample program of CHANGE

(b) Sample Program Name: MAIN

1) Sample program overview flow


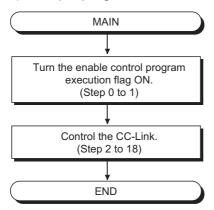


Diagram App.8 Sample program overview flow

2) Sample program



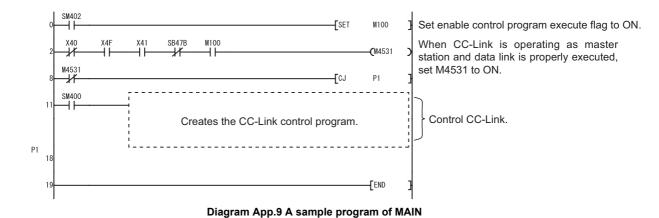

- (2) When the QJ61BT11N's serial No. (first 5 digits) is "07111" or earlier
 - (a) Sample Program Name: CHANGE
 - 1) Sample program overview flow

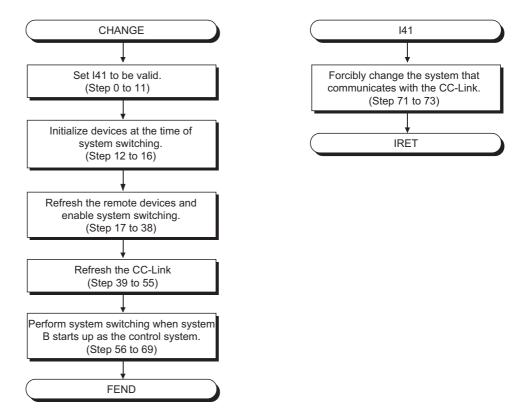


Diagram App.10 Sample program overview flow

MELSEG Q series

2) Sample Program

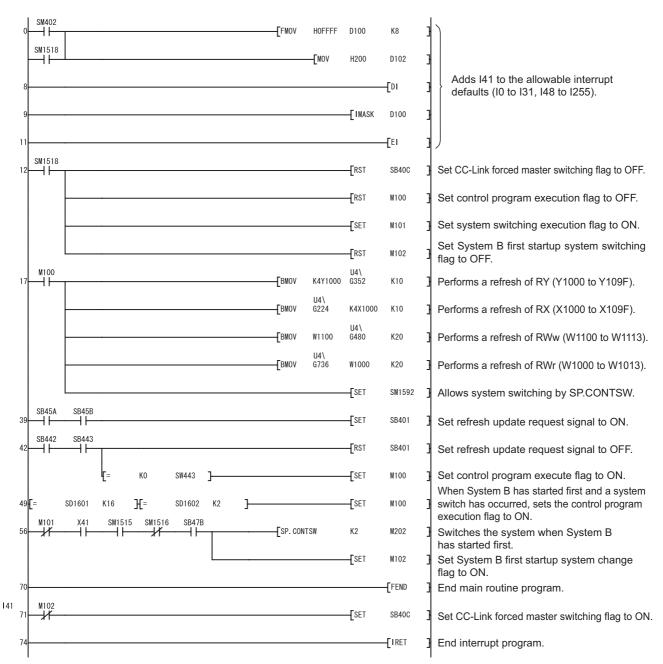


Diagram App.11 A sample program of CHANGE



(b) Sample Program Name: MAIN

1) Sample program overview flow

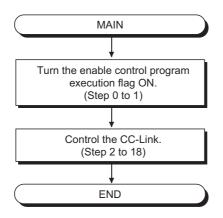


Diagram App.12 Sample program overview flow

2) Sample program

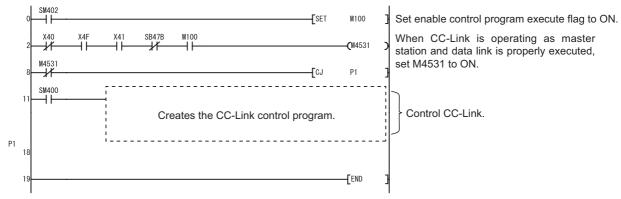


Diagram App.13 A sample program of MAIN



Appendix 5 Method for Starting up the Previous Control System

When both systems are simultaneously powered on, or when the reset switches of both system CPU modules are simultaneously set to neutral position in a redundant system, the redundant system will start up with system A as the control system.

Even when the power supplies for both systems go off temporarily due to a power failure while system B is operating as the control system, system A will start up as the control system when the power supplies of both systems are turned ON.

In order to start up with the previous control system, i.e., system B as the control system in this condition, create the following program (Diagram App.14) that uses the special relay, "Previous control system identification flag" (SM1519).

However, when mounting a network module on the main base unit or extension base unit, create an interlock circuit as shown on the programs in Diagram App.20 and Diagram App.22 before executing the SP.CONTSW instruction.

If battery error occurs in either system and device data cannot be held, the operation cannot be guaranteed.

(1) When network module is not mounted

The following program shows an operation when the previous control system starts with no network module mounted.

(a) Program Example

```
SM1519 [SP.CONTSW K1 M0]-
```

Diagram App.14 A program example

(b) Operation Image

1) System B is operating as the control system.

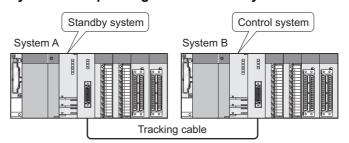


Diagram App.15 The system when System B is operating as the control system

2) Power supplies of both systems are temporarily OFF because of a power failure, etc.

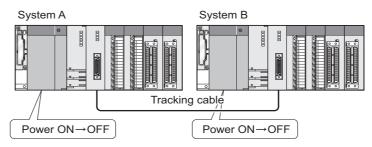


Diagram App.16 The system when power supplies of both systems are temporarily OFF

3) System A starts as the control system when both systems are simultaneously powered ON.

(The SM1519 is ON for one scan after the system A CPU module has run.)

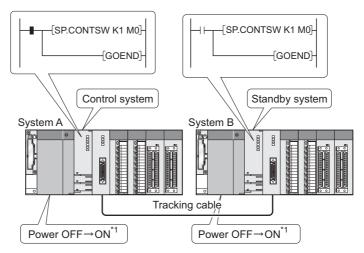


Diagram App.17 The system when both systems are simultaneously powered ON

* 1: After turning on one of the power supply modules, turn the other one on within 3 seconds.

4) Switching System B to the control system through a system switching instruction

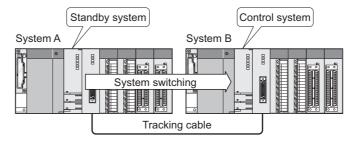


Diagram App.18 The system when System B is switched to the control system through a system switching instruction

⊠POINT

Create a system switching program while paying attention to the following points.

- Turn on the special relay, "Manual System Switching Enabled Flag" (SM1592) by executing SP.CONTSW instruction.
 An "OPERATION ERROR (error code: 4120)" will occur if the SP.CONTSW instruction is executed while SM1592 is OFF.
- Set any value other than 0 as the parameter for SP.CONTSW instruction.
 If the SP.CONTSW instruction is executed with the parameter set as 0,
 the "OPERATION ERROR (error code: 4100)" will occur.



(2) When network module is mounted

Make sure that the network module has started up, and then create a program that executes the SP.CONTSW instruction.

(a) CC-Link IE Controller Network module, MELSECNET/H module or Ethernet module is mounted on the main base unit.

[System Configuration]




Diagram App.19 System configuration when CC-Link IE Controller Network module, MELSECNET/H module or Ethernet module is mounted on the main base unit

[Program Example]

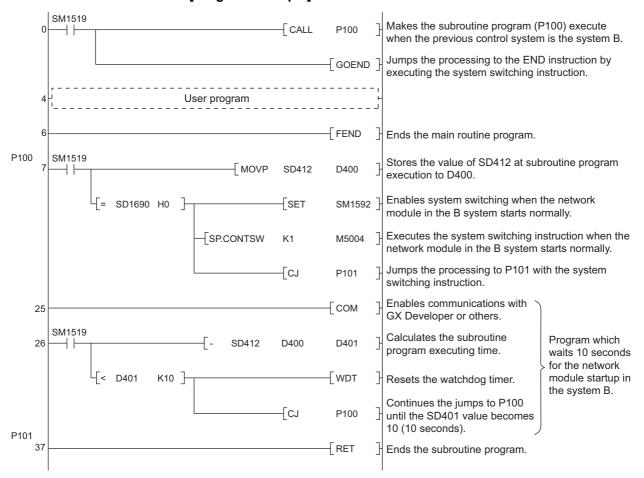


Diagram App.20 A program example

MELSEG Q series

(b) CC-Link master module is mounted on the extension base unit. [System Configuration]

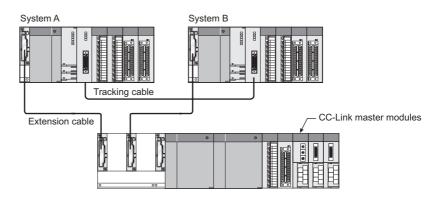


Diagram App.21 System configuration when CC-Link master module is mounted on the extension base unit

[Program Example]

(The I/O number assigned to CC-Link master module is from X100 to 11F.)

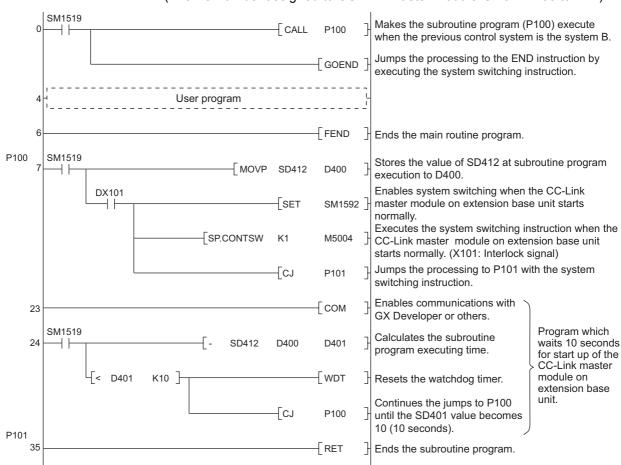


Diagram App.22 A program example



⊠POINT

- If CC-Link system master/local modules are mounted on the main base unit, system B cannot be started up as the control system.
 Start up system A as the control system.
- 2. If CC-Link system master module is mounted on the main base unit, system B cannot start as the control system.
- If all stations are faulty in CC-Link network system, A system will be control
 system since Xn1 does not turn ON. To start with the previous control system,
 power ON the programmable controller CPU after powering ON the CC-Link
 remote I/O stations.
- 4. To use the Rise/Fall execution instruction in a program of B system after system switching, set [Do tracking] at [Signal flow memory tracking setting] on [Tracking settings] in redundant parameter.



Appendix 6 Precautions for Using Serial Communication Module

The dedicated instructions of the serial communication module for the module mounted to the extension base unit cannot be used in the redundant CPU system.

For the functions to communicate using the dedicated instructions, create programs by using the FROM/TO instruction.

The dedicated instruction applicable in the serial communication module and the changeability by the FROM/TO instruction are shown in Table.App 13.

Table.App 13 Serial Communication Module Dedicated Instruction List

Instruction name	Function overview	Changeability by FROM/TO instruction	Reference section
	Sets initial setting of the unit (word/byte) of the number of send/receive data and the send/receive area size.	Applicable	Appendix 6.1
CSET	Performs PLC CPU monitoring registration/PLC monitoring cancel to use the PLC CPU monitoring function.	N/A	-
	Clears receive data without stopping the send processing in the nonprocedural protocol.	Applicable	Appendix 6.1
UINI	Switches mode, transmission specifications, and host station number.	Applicable*1	Appendix 6.2
BUFRCVS	Receives data in the interrupt program by the nonprocedural or bidirectional protocol communication.	N/A	-
SPBUSY	Reads send/receive status of data by dedicated instructions.	N/A	-
INPUT	Receives data by user arbitrary transmission format in the nonprocedural protocol.	Applicable	Appendix 6.3
PUTE	Registers user registration frame.	Applicable	Appendix 6.4
GETE	Reads user registration frame.	Applicable	Appendix 6.5
ONDEMAND	Sends data by the on-demand function of MC protocol.	Applicable	Appendix 6.6
OUTPUT	Sends data as much as specified by the nonprocedural protocol communication.	Applicable	Appendix 6.7
PRR	Sends data by user registration frame according to specification at user registration frame specification area for sending in the nonprocedural protocol communication.	Applicable	Appendix 6.8
BIDOUT	Sends data as much as specified by the bidirectional protocol communication.	Applicable	Appendix 6.9
BIDIN	Reads data received by the bidirectional protocol communication.	Applicable	Appendix 6.10

^{* 1:} Station number or operating status (independent/linked) cannot be changed.

A sample program of the serial communication module where dedicated instructions are changed to the FROM/TO instruction is described in the next section or later. For the precautions at system switching, refer to Section 7.4.



Appendix 6.1 CSET Instruction

(1) When setting initial setting of the unit (word/byte) of the number of send/receive data and the send/receive area size

(a) Setting the unit of send/receive data length

The following shows the device and buffer memory used in the sample program of the send/receive data length unit setting.

1) I/O signal

Table.App 14 List of I/O Signal

I/O signal		Signal name	Description of signal
CH1 side	CH2 side	Signal name	Description of signal
X(n+1)E		Q series C24 ready	ON: Accessible
X(n+1)F		Watchdog timer error	ON : Module error occurred
			OFF: Module being normally
		(WDT error)	operated

2) Buffer memory

Write 0 (word unit) or 1 (byte unit) to the following address.

Table.App 15 List of Buffer Memory

Buffer memory address	hexadecimal (decimal)	Buffer memory name	
CH1 side	CH2 side	Burier memory name	
96 _H (150)	136 _H (310)	Word/byte units designation	

⊠POINT

Set the send/receive data length unit setting before communication.

In addition, change the setting when the ready signal X(n+1)E of a module is ON.

The program example of send/receive data length unit setting is shown in Diagram App.23. (For the I/O signal is X/Y80 to X/Y9F)



Diagram App.23 Program Example

(b) Specification of buffer memory head address and buffer memory size used in on-demand function

For the specification, refer to Appendix 6.6.

(c) Specification of head address/area size of send area/receive area

The following shows the device and buffer memory used in the sample program of specifying the head address and area size.

1) I/O signal

Table.App 16 List of I/O Signal

I/O	signal	Signal name	Description
CH1 side	CH2 side	Signal name	
X(r	ı+1)E	Q series C24 ready	ON: Accessible
X(n+1)F		Watchdog timer error (WDT error)	ON : Module error occurred OFF: Module being normally operated

2) Buffer memory

Table.App 17 List of Buffer Memory

Buffer memory address	Hexadecimal (decimal)	Buffer memory name
CH1 side	CH2 side	Buller memory name
A2 _H (162)	142 _H (322)	Transmission buffer memory head
A2H(102)	142H(322)	address designation
A3 _H (163)	143 _H (323)	Transmission buffer memory length
A3H(103)	143H(323)	designation
A6 _H (166)	146 _H (326)	Receive buffer memory head address
A0H(100)	140H(320)	designation
A7 _H (167)	147 _H (327)	Receive buffer memory length
A1H(101)	147 H(327)	designation

POINT

When using the following functions simultaneously, be careful not to duplicate the assignment of buffer memory which stores send data and receive data dealt with the function to be used.

- On-demand function of MC protocol
- Send/receive function of nonprocedural protocol
- Send/receive function of bidirectional protocol



The program example of specifying the send area head address and the send area size is shown in Diagram App.24. (For the I/O signal is X/Y80 to X/Y9F)

Diagram App.24 Program Example

The program example of specifying the receive area head address and the receive area size is shown in Diagram App.25. (For the I/O signal is X/Y80 to X/Y9F)

Diagram App.25 Program Example



(2) When clearing receive data without stopping the send processing in nonprocedural protocol

The following shows the device and buffer memory used in the sample program of clearing receive data.

(a) Device of programmable controller CPU

Table.App 18 Device Used in the Program

Device No.	Application	Remarks	
X23	Receive data clear request command	ON: Receive data clear request	
M11	Receive processing	ON: Executing, OFF: Not executed	
M12	Send processing	ON: Executing, OFF: Not executed	
M15	Receive data clear request pulse	ON: Receive data clear request	
M16	Receive data clear request	ON: Receive data clear request	
IVITO	acceptance flag	acceptance	
M17	Receive data clear request completion	ON: Receive data clear request	
IVI I 7	flag	completion	
M18	Communication disable	ON: Communication disable	
M19	Communication enable	ON: Communication enable	

(b) I/O signal

Table.App 19 List of I/O Signal

I/O signal		Signal name	Description	
CH1 side	CH2 side	Signal name	Description	
Xn3	XnA	Reception data read request	ON: Requesting read	
Xn4	XnB	Reception abnormal detection	ON: Abnormal detection	
Yn1	Yn8	Reception data read completion	ON: Data read completed	

(c) Buffer memory

When all of the receive processing, send processing, and receive data clear processing are not executed, write 1 to the following address.

Table.App 20 List of Buffer Memory

Buffer memory address	Hexadecimal (decimal)	Buffer memory name	
CH1 side	CH2 side	Bullet memory hame	
A8 _H (168)	148 _H (328)	Receive data clear request	

⊠POINT

- 1. When using the Q series C24 (function version A), restart the data communication when 100ms has passed after the buffer memory address A8H (for CH1)/148H (for CH2) was changed from 1 to 0.
- 2. Do not execute clear request of receive data during communicating data with the external device, since data communication is discontinued when clear request is performed to the receive data.



The program example of clearing receive data is shown in Diagram App.26. (For the I/O signal is X/Y80 to X/Y9F)

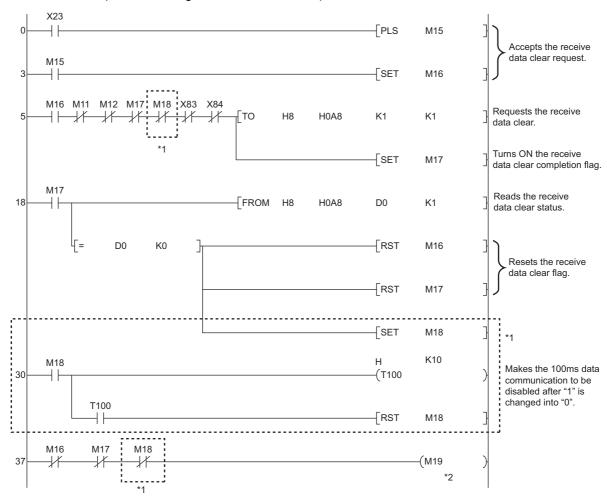


Diagram App.26 Program Example

- * 1: When using the Q series C24 (function version A), add the dotted line to the sequence program.
- * 2: Communicate data when M19 is ON



Appendix 6.2 UINI Instruction

The following shows the device and buffer memory used in the sample program for mode switching.

(1) Device of programmable controller CPU

Table.App 21 Device Used in the Program

Device No.	Application	Remarks	
X52	Mode switching request clear command	ON: Mode switching request clear	
X60	Mode switching command	ON: Mode switching	
M11	Receive processing	ON: Executing, OFF: Not executed	
M12	Send processing	ON: Executing, OFF: Not executed	
M50	Mode switching completion flag	ON: Mode switching completion	

(2) I/O signal

Table.App 22 List of I/O Signal

I/O signal		Signal name	Device to be turned ON/OFF		Timing
CH1 side	CH2 side		CPU	C24	
Xn6	XnD	Mode switching	-	0	Completed
Yn2	Yn9	Mode switching request	0	-	(Switching in execution)

Table.App 23 List of I/O Signal

I/O signal		Signal name	Description	
CH1 side	CH2 side	Signal name	Description	
Xn3	XnA	Reception data read request	ON: Requesting read	
Xn4	XnB	Reception abnormal detection	ON: Abnormal detection	
XnE		CH1 ERR. occurrence	ON: Error occurring	
XnF		CH2 ERR. occurrence	ON: Error occurring	
X(n+1)E		Q series C24 ready ON: Accessible		
X(n+1)F		Watchdog timer error	ON : Module error occurred	
		(WDT error)	OFF: Module being normally operated	

(3) Buffer memory

When all of the receive processing, send processing, and receive data clear processing are not executed, write 1 to the following address.


Table.App 24 List of Buffer Memory

address He	nemory exadecimal imal) CH2 side	Name		Setting value Stored value
90 _H (144)	130 _H (304)	For mode switching	Switching mode No. specification (Refer to (a))	• 0001 _H : MC protocol (Format 1) • 0007 _H : Bidirectional protocol • 00FF _H : GX Developer connection
91 _H (145)	131 _H (305)	specification	Transmission specification after switching (Refer to (b))	• 0000 _H : Set the same setting as the setting of GX Developer • 8000 _H to 8FFF _H : Set the setting the same as this area setting
203 _H	(515)	For switching setting and mode switching confirmation	Switch setting error, mode switching error status	0: No error Other than 0: Switch setting error, mode switching error



(a) Switching mode No. specification area (Address: 90_H, 130_H)


The mode No. after switching (0001_H to 0007_H, 00FF_H) is written to this area.



* 1: When specifying GX Developer connection mode in Switch setting of GX Developer, specify [00_H] to the communication protocol.

(b) Transmission specification area after switching (Address: 91_H, 131_H)

- 1) Specify the transmission specification after mode switching. *2
- 2) Write [0000_H] when initializing settings set by GX Developer.
- 3) When setting the arbitrary transmission specifications (transmission specifications other than set in GX Developer), write the value corresponding to ON/OFF of the relevant bit shown below. Specification of 1(ON)/0(OFF) of the relevant bit is the same as that of transmission setting of GX Developer.

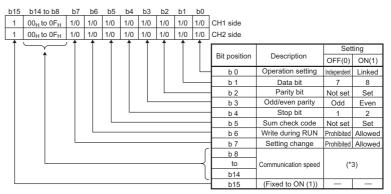

- * 2: Specify [8000_H] when selecting "GX Developer connection" for the switching mode No. specification.
- * 3: The following shows the specified value of the communication speed.

Communication speed	Bit position	Communication speed	Bit position
(Unit: bps)	b14 to b8	(Unit: bps)	b14 to b8
50	0F _H	14400	06 _H
300	00 _H	19200	07 _H
600	01 _H	28800	08 _H
1200	02 _H	38400	09 _H
2400	03 _H	57600	0A _H
4800	04 _H	115200	0B _H
9600	05 _H	230400	0C _H

- 230400bps is applicable for the CH1 side of the QJ71C24N(-R2/R4) only.
- When connecting external devices to two interfaces (CH1 and CH2), the total of communication speed of two interfaces should be within 115200bps (230400bps for the QJ71C24N(-R2/R4)).
 - When connecting an external device to either interface (CH1 or CH2), the communication speed can be set up to 115200bps (230400bps for the CH1 side of the QJ71C24N(-R2/R4). In this case, the communication speed of the interface where the external device is not connected should be 300bps.
- Set [00_H] to the interface side where "GX Developer connection" is set in the communication protocol setting. The serial communication module can operate at speed set for GX Developer side.

The program example for mode switching is shown in Diagram App.27. (For the I/O signal is X/Y80 to X/Y9F)

```
M12 X83
                                                   M50
                                          X84
                M11
                                                                                 √MOV K1
                                                                                                     D0
                                                                                                                Changes operation mode into MC protocol format 1
                                                                                          H85B0 D1
                                                                                                                Sets transmission specification
                                                                                                                Writes mode switching specification contents to
                                                                 Гто
                                                                                           D0
                                                                                                     K2
                                                                          H8
                                                                                 H90
                                                                                                                buffer memory
                                                                                           SET
                                                                                                     Y82
                                                                                                                Sets mode switching request
       X86
                                                                                           -[RST
                                                                                                     Y82
                                                                                                                Resets mode switching request signal
                                                                 FROM H8
                                                                                 H203
                                                                                          D2
                                                                                                     K1
                                                                                                                Reads error description after switching mode
                                                                                           SET
                                                                                                     M50
                                                                                                                Completes mode switching
      M50
                                                                                                                Changes setting value of communication protocol
29
                                                      Setting value change of buffer memory specific use area
                                                                                                                according to communication specifications
                                                                                           √RST
                                                                                                    M50
                                                                                                                Resets mode switching completion
       X8E
32
                                                           Error processing (LED OFF, error code clear)
       \dashv \vdash
      X52
                                                                                                    Y82
                                                                                           √RST
                                                                                                                Clears mode switching request by clear request
```

Diagram App.27 Program Example

⊠POINT

- Stop all data communication before mode switching. Data communication will be stopped when mode switching is performed during data communication.
- Note that station No. setting change and switching to linked operation/ switching from linked operation to independent mode cannot be made.



Appendix 6.3 INPUT Instruction

The following shows the device and buffer memory used in the sample program of receiving data by the nonprocedural protocol communication.

(1) I/O signal

Table.App 25 List of I/O Signal

I/O s	ignal	Signal name	Description	
CH1 side	CH2 side	Signal name	Description	
Xn3	XnA	Reception data read request	ON: Requesting read	
Xn4	XnB	Reception abnormal detection	ON: Abnormal detection	
V/n	±1\E	Watchdog timer error	ON : Module error occurred	
X(n+1)F		(WDT error)	OFF: Module being normally operated	
Yn1	Yn8	Reception data read completion	ON: Data read completed	

(2) Buffer memory

Table.App 26 List of Buffer Memory

Buffer memory address Hexadecimal (decimal)		Name	Stored value
CH1 side	CH2 side		
258 _H (600)	268 _H (616)	Data reception result	0 : Normal completion 1 or more: Abnormal completion (error code)
600 _H (1536)	A00 _H (2560)	Receive data count (Number of data for which read is requested)	0: No receive data 1 or later: Number of receive data
601 _H to 7FF _H (1537 to 2047)	A01 _H to BFF _H (2561 to 3071)	Receive data	Data received from an external device

The following shows the program example of receiving data by the nonprocedural protocol communication is shown in Diagram App.28. (For the I/O signal is X/Y80 to X/Y9F)

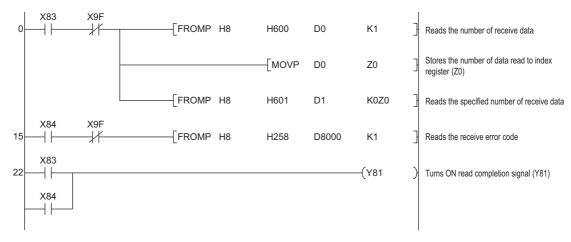


Diagram App.28 Program Example

Appendix 6.4 PUTE Instruction

The following shows the device and buffer memory used in the sample program of registering the user registration frame.

(1) Device of programmable controller CPU

Table.App 27 Device Used in the Program

Device No.	Application	Remarks	
X50	Register request command	ON: Register request	
M1	Flash ROM write request flag	ON: Flash ROM write request start	
M50	Register request set	ON: Registering	

(2) I/O signal

Table.App 28 List of I/O Signal

I/O signal		Signal name	Description
CH1 side	CH2 side	Signal name	Description
X(n-	+1)8	Flash ROM write completion	ON: Completed
Y(n-	+1)8	Flash ROM write request	ON: Requesting

(3) Buffer memory

Table.App 29 List of Buffer Memory

Buffer memory address Hexadecimal (decimal) CH1 side CH2 side		Name	Stored value
2 _H (2)	Register/read/delete instructions	0: No request 1: Registration request 2: Read request 3: Deletion request
3 _H (3)	Frame No. direction	0: No designation Other than 0: Frame No.
4 _H (4)		Registration/read/delete result storage	0: Normal completion Other than 0: Abnormal completion
5 _H (5)		Number of data bytes registered designation	0 : No designation Other than 0: Number of data bytes registered (maximum 80 bytes)
6 _H to 2D _H	(6 to 45)	User frame	0 : No designation Other than 0: Registered data (maximum 80 bytes)
2000 _H (8192)	Flash ROM write allow/ prohibit designation	0: Write prohibited 1: Write allowed



The program example of registering the user registration frame No.3E8H is shown in Diagram App.27.

(For the I/O signal is X/Y80 to X/Y9F)

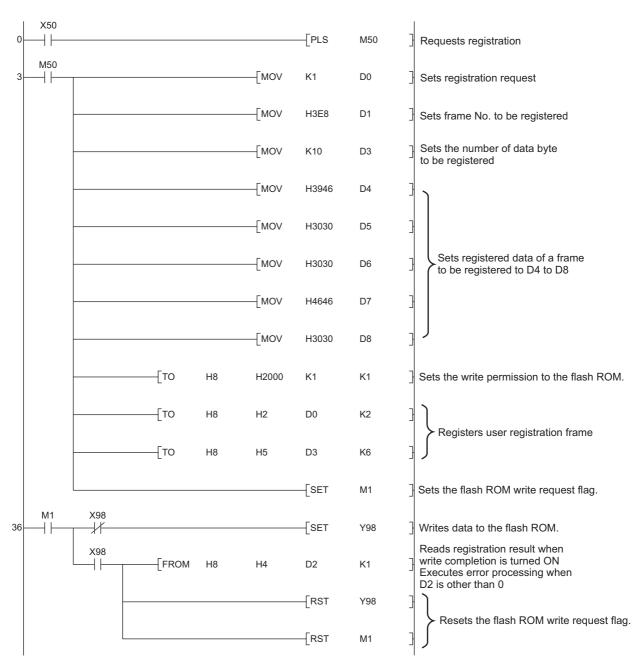


Diagram App.29 Program Example



Appendix 6.5 GETE Instruction

The following shows the device and buffer memory used in the sample program of reading the user registration frame.

(1) Device of programmable controller CPU

Table.App 30 Device Used in the Program

Device No.	Application	Remarks
X50	Read command	ON: Read command
M0	Read command acceptance	ON: Read command acceptance
M1	Read flag	ON: Reading

(2) I/O signal

Table.App 31 List of I/O Signal

I/O signal		Signal name	Description
CH1 side	CH2 side	Signal hame	Description
X(n-	+1)7	Flash ROM read completion	ON: Completed
Y(n-	+1)7	Flash ROM read request	ON: Requesting
X(n+1)E		Q series C24 ready	ON: Accessible
X(n-	+1)F	Watchdog timer error (WDT error)	ON : Module error occurred OFF: Module being normally operated

(3) Buffer memory

Table.App 32 List of Buffer Memory

Buffer memory address Hexadecimal (decimal)		Name	Stored value
CH1 side	CH2 side		
			0: No request
2 _H	(2)	Register/read/delete	1: Registration request
∠H,	(2)	instructions	2: Read request
			3: Deletion request
3 _H i	(3)	Frame No. direction	0: No designation
⊃H'	(3)	Frame No. direction	Other than 0: Frame No.
		Registration/read/delete result storage	0: Normal completion
4 _H	(4)		Other than 0: Abnormal
			completion
			0 : No designation
5 _H ((5)	Number of data bytes	Other than 0: Number of
⊃H,	(3)	registered designation	data bytes registered
			(maximum 80 bytes)
			0 : No designation
6 _H to 2D _F	₁ (6 to 45)	User frame	Other than 0: Registered
			data (maximum 80 bytes)



The program example of reading the user registration frame is shown in Diagram App.30. (For the I/O signal is X/Y80 to X/Y9F)

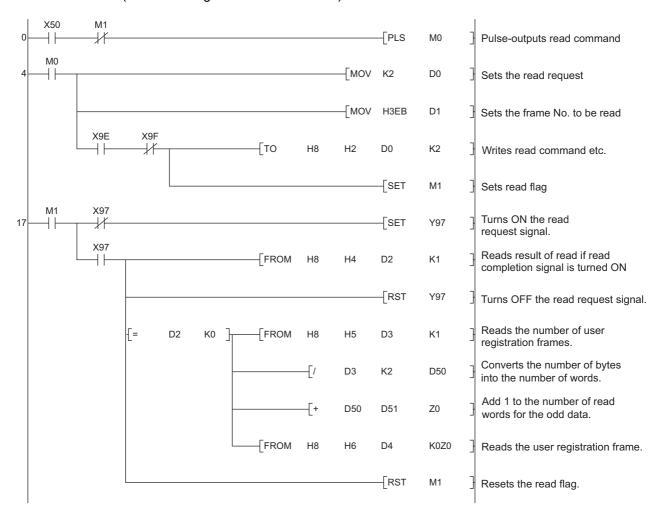


Diagram App.30 Program Example

Appendix 6.6 ONDEMAND Instruction

The following shows the device and buffer memory used in the sample program of sending data by the on-demand function.

(1) Device of programmable controller CPU

Table.App 33 Device Used in the Program

Device No.	Application	Remarks
X50	Transmission command	ON: Transmission completion
X60	Error reset command	ON: Error reset
Y20	For checking normal completion	ON: Normal completion
Y21	For checking abnormal completion	ON: Abnormal completion
M0	Transmission data set	ON: Transmission data set
M1	On-demand data set	ON: On-demand data set

(2) I/O signal

Table.App 34 List of I/O Signal

I/O signal		Signal name	Description
CH1 side	CH2 side	Signal name	Description
Xn0	Xn7	Transmission normal completion	ON: Normal completion
Xn1	Xn8	Transmission abnormal completion	ON: Abnormal completion
Xn2	Xn9	Transmission processing	Transmission in progress
XnE	XnF	ERR. occurrence	ON: Error occurring
X(n+1)E		Q series C24 ready	ON: Accessible
X(n+1)F		Watchdog timer error (WDT error)	ON : Module error occurred OFF: Module being normally operated
Yn0	Yn7	Transmission request	ON: Requesting transmission

(3) Buffer memory

Table.App 35 List of Buffer Memory

Buffer memory address Hexadecimal (decimal)		Name	Stored value
CH1 side	CH2 side		
0 _H (0)	1 _H (1)	Communication error clear	0: OFF, No initialization request
OH(O)	'H\'/	request and to turn LED off	1: OFF, Initialization requested
96 _H (150)	136 _H (310)	Word/byte units designation	0: Word units
30H(130)	130 _H (310)	Word/byte units designation	1: Byte units
AO (160)	140 (220)	Buffer memory head	400 _H to 1AFF _H
A0 _H (160)	140 _H (320)	address for on-demand	2600 _H to 3FFF _H
A1 _H (161)	141 _H (321)	On-demand data length	0000 _H to 3400 _H
201 _H	(513)	LED ON status and	0: Turned off/OFF, no error
201 _H	(313)	communication error status	1: Turned on/ON, error
256 _H (598)	266 _H (614)	On-demand execution result	0: Completed normally
230H(390)	200 _H (014)		1 or later: Error code
C00 _H to 1AFF _H		User free area	
(3072 to 6911)		USEI HEE AIEA	



The program example of sending data by the on-demand function is shown in Diagram App.31. (For the I/O signal is X/Y80 to X/Y9F)

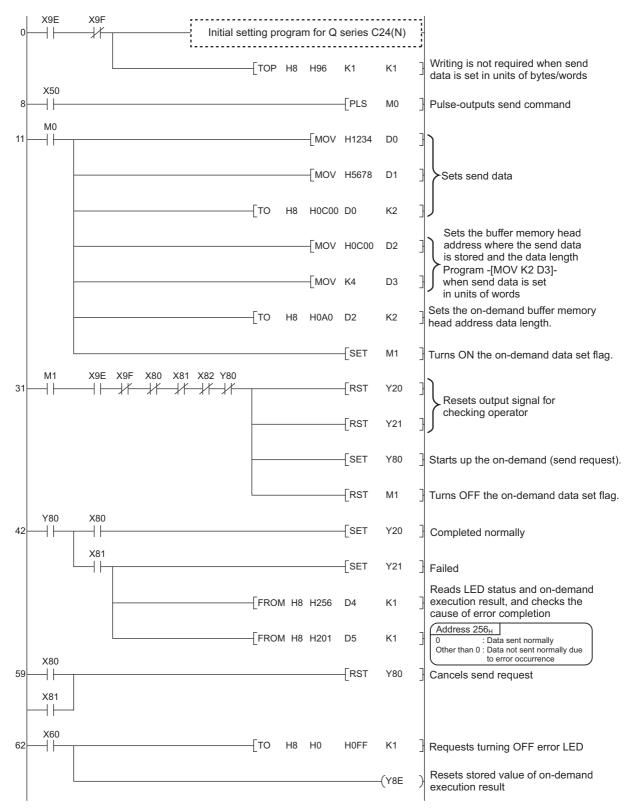


Diagram App.31 Program Example

MELSEG Q series

Appendix 6.7 OUTPUT Instruction

The following shows the device and buffer memory used in the sample program of sending data by the nonprocedural protocol communication.

(1) Device of programmable controller CPU

Table.App 36 Device Used in the Program

Device No.	Application	Remarks
X50	Transmission command	ON: Transmission completion
X60	Error reset command	ON: Error reset

(2) I/O signal

Table.App 37 List of I/O Signal

I/O signal		Signal name	Description
CH1 side	CH2 side	Signal name	Description
Xn0	Xn7	Transmission normal completion	ON: Normal completion
Xn1	Xn8	Transmission abnormal completion	ON: Abnormal completion
Xn2	Xn9	Transmission processing	Transmission in progress
XnE	XnF	ERR. occurrence	ON: Error occurring
X(n-	+1)E	Q series C24 ready	ON: Accessible
X(n+1)F		Watchdog timer error (WDT error)	ON : Module error occurred OFF: Module being normally operated
Yn0	Yn7	Transmission request	ON: Requesting transmission

(3) Buffer memory

Table.App 38 List of Buffer Memory

Buffer memory address Hexadecimal			
(deci	mal)	Name	Stored value
CH1 side	CH2 side		
			0 : Normal completion
257 _H (599)	267 _H (615)	Data transmission result	1 or more: Abnormal completion
			(error code)
400 _H (1024)	800 _H (2048)	Transmission data count	0: No designation
400H(1024)	000 _H (2040)	designation	1 or more: Number of send data
401 _H to 5FF _H	801 _H to 9FF _H	Transmission data	Data to be sent to an external
(1025 to 1535)	(2049 to 2559)	designation	device



The program example of sending data by the nonprocedural protocol communication is shown in Diagram App.32.

(For the I/O signal is X/Y80 to X/Y9F)

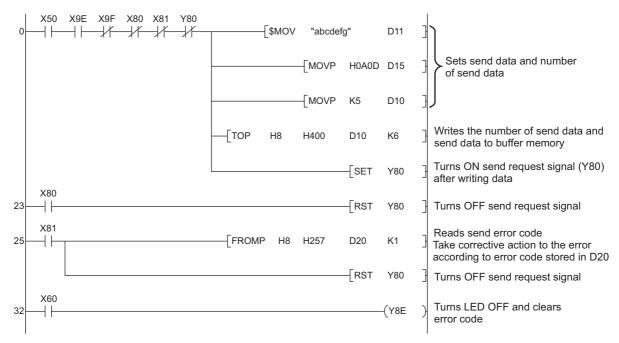


Diagram App.32 Program Example

Appendix 6.8 PRR Instruction

The following shows the device and buffer memory used in the sample program of sending data by the user registration frame of the nonprocedural protocol communication.

(1) Device of programmable controller CPU

Table.App 39 Device Used in the Program

Device No.	Application	Remarks	
X50	Transmission command	ON: Transmission completion	
X60	Transmission command pulse	ON: Read completion	

(2) I/O signal

Table.App 40 List of I/O Signal

I/O signal		Signal name	Description
CH1 side	CH2 side	Signal name	Description
Xn0	Xn7	Transmission normal completion	ON: Normal completion
Xn1	Xn8	Transmission abnormal completion	ON: Abnormal completion
Xn2	Xn9	Transmission processing	Transmission in progress
XnE	XnF	ERR. occurrence	ON: Error occurring
X(n+1)E		Q series C24 ready	ON: Accessible
X(n+1)F		Watchdog timer error (WDT error)	ON : Module error occurred OFF: Module being normally operated
Yn0	Yn7	Transmission request	ON: Requesting transmission

(3) Buffer memory

Table.App 41 List of Buffer Memory

-	dress Hexadecimal imal)	Name	Stored value	
CH1 side	CH2 side			
B7 _H (183)	157 _H (343)		CR/LF output designation 0: Do not send	
B7 _H (100)	137 H(3+3)		1: Send.	
			Output head pointer designation	
B8 _H (184)	158 _H (344)		0: No designation	
		For user frame	1 to 100: Send from nth	
		being transmitted	Output count designation	
B9 _H (185)	B9 _H (185) 159 _H (345)		0: No designation	
			1 to 100: Output n	
			Output frame No. designation (A	
BA _H to 11D _H	15A _H to 1BD _H		maximum of 100 can be specified)	
(186 to 285) (346 to 445)			0: No designation	
			1 or more: Output frame No.	
			0 : Normal completion	
257 _H (599)	267 _H (615)	Data transmission result	1 or more: Abnormal completion	
			(error code)	
400 _H (1024)	800 _H (2048)	Transmission data count	0: No designation	
400H (1024)	400H (1024) 000H (2048)		1 or more: Number of send data	
401 _H to 5FF _H	801 _H to 9FF _H	Transmission data	Data to be sent to an external	
(1025 to 1535)	(2049 to 2559)	designation	device	



The program example of sending data by the user registration frame of the nonprocedural protocol communication is shown in Diagram App.33. (For the I/O signal is X/Y80 to X/Y9F)

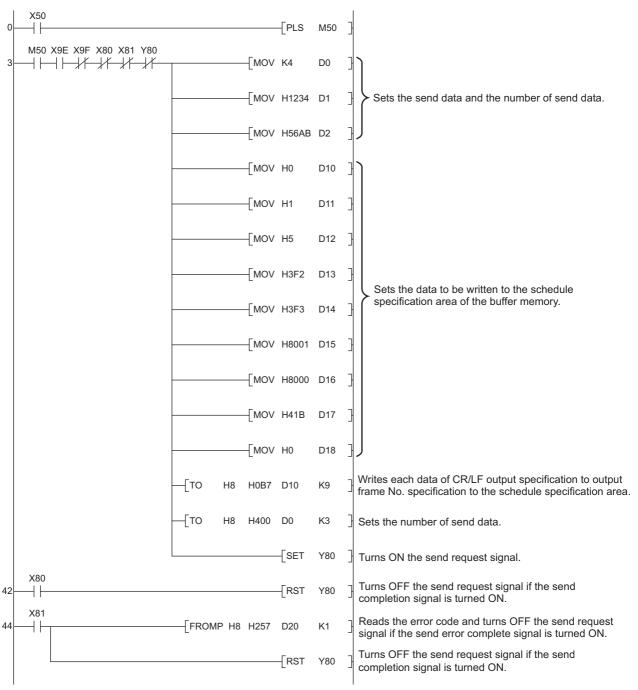


Diagram App.33 Program Example

Appendix 6.9 BIDOUT Instruction

The following shows the device and buffer memory used in the sample program of sending data by the bidirectional protocol communication.

(1) Device of programmable controller CPU

Table.App 42 Device Used in the Program

Device No.	Application	Remarks
X50	Transmission command	ON: Transmission completion
X60	Clear command	ON: Clear completion

(2) I/O signal

Table.App 43 List of I/O Signal

I/O s	ignal	Signal name	Description	
CH1 side	CH2 side	Signal name	Description	
Xn0	Xn7	Transmission normal completion	ON: Normal completion	
Xn1	Xn8	Transmission abnormal completion	ON: Abnormal completion	
Xn2	Xn9	Transmission processing	Transmission in progress	
XnE	XnF	ERR. occurrence	ON: Error occurring	
X(n-	+1)E	Q series C24 ready	ON: Accessible	
X(n-	+1)F	Watchdog timer error (WDT error)	ON : Module error occurred OFF: Module being normally operated	
Yn0	Yn7	Transmission request	ON: Requesting transmission	

(3) Buffer memory

Table.App 44 List of Buffer Memory

•	dress Hexadecimal imal)	Name	Stored value	
CH1 side	CH2 side			
			0 : Normal completion	
257 _H (599)	267 _H (615)	Data transmission result	1 or more: Abnormal completion	
			(error code)	
400 _H (1024)	800 _H (2048)	Transmission data count	0: No designation	
400H (1024)	000 _H (2040)	designation	1 or more: Number of send data	
401 _H to 5FF _H	801 _H to 9FF _H	Transmission data	Data to be sent to an external	
(1025 to 1535)	(2049 to 2559)	designation	device	



The program example of sending data by the bidirectional protocol communication is shown in Diagram App.34.

(For the I/O signal is X/Y80 to X/Y9F)

```
X50 X9E X9F X80 X81 Y80
                                                                "ABCDEFG"
                                                                                D11
                        #
                             \dashv t
                                                      -[$MOV
                                                              MOVP
                                                                        H0A0D D15
                                                                                             Sets the send data and the number of send data.
                                                               MOVP
                                                                        K5
                                                                                D10
                                                                                          Writes the send data and the number of send
                                             TOP
                                                              H400
                                                                                K6
                                                      H8
                                                                        D10
                                                                                          data to the buffer memory.
                                                                                          Turns ON the send request signal (Y80)
                                                                        √SET
                                                                                Y80
                                                                                          after the data is written.
     X80
23
                                                                        RST
                                                                                Y80
      1
                                                                                          Turns OFF the send request signal.
     X81
                                                                                          Reads the send error code.
25
                                              FROMP
                                                        Н8
                                                              H257
                                                                        D20
                                                                                K1
                                                                                          Check the error description and take corrective
                                                                                          action according to the error code stored in D20.
                                                                        -[RST
                                                                                Y80
                                                                                          Turns OFF the send request signal.
     X60
                                                                                Y8E
                                                                                          Turns OFF the LED and clears the error code.
32
```

Diagram App.34 Program Example



Appendix 6.10 BIDIN Instruction

The following shows the device and buffer memory used in the sample program of receiving data by the bidirectional protocol communication.

(1) Device of programmable controller CPU

Table.App 45 Device Used in the Program

Device No.	Application	Remarks
X30	Error code read command	ON: Error code read
X60	Clear command	ON: Clear completion

(2) I/O signal

Table.App 46 List of I/O Signal

I/O s	ignal	Signal name	Description	
CH1 side	CH2 side	Signal hame	Description	
Xn3 XnA		Reception data read request	ON: Requesting read	
V(=14)F		Watchdog timer error	ON : Module error occurred	
X(n+1)F		(WDT error)	OFF: Module being normally operated	
Yn1	Yn8	Reception data read completion	ON: Data read completed	

(3) Buffer memory

Table.App 47 List of Buffer Memory

•	dress Hexadecimal imal)	Name	Stored value	
CH1 side	CH2 side			
			0 : Normal completion	
258 _H (600)	268 _H (616)	6) Data reception result	1 or more: Abnormal completion	
			(error code)	
		Receive data count	0: No receive data	
600 _H (1536)	A00 _H (2560)	(Number of data for which		
		read is requested)	1 or more: Number of receive data	
601 _H to 7FF _H	A01 _H to BFF _H	Receive data	Data received from an external	
(1537 to 2047)	(2561 to 3071)	Receive data	device	

The program example of receiving data by the bidirectional protocol communication is shown in Diagram App.35.

(For the I/O signal is X/Y80 to X/Y9F)

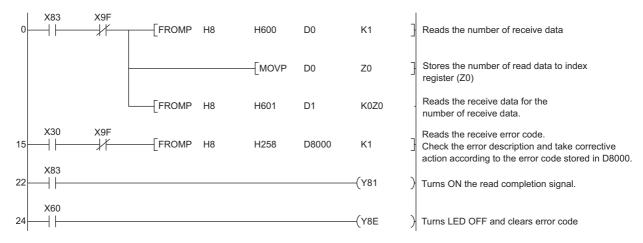


Diagram App.35 Program Example



Appendix 7 Cautions on Communications Made via Module on Extension Base Unit

(1) MC protocol frames available for communications

Use QnA-compatible 2C/3C/4C frame, QnA-compatible 3E frame, or 4E frame for the access.

(2) MC protocol commands available for communications

Table.App 48 shows whether each access target can be specified for each MC protocol command or not when communications are made via a module on an extension base unit.

Table.App 48 Applicability of connection destination specification of each command from request source

Function		Connection destination specification				
Target	Command name	Control system	Standby system	No system specification	System A	System B
	Batch read	0	0	0	0	0
	Batch write	0	0	0	0	0
	Random read	0	0	0	0	0
Device memory	Test (Random write)	0	0	0	0	0
Device memory	Monitor data registration	×	×	×	0	0
	Monitor	×	×	×	0	0
	Multiple block batch read	0	0	0	0	0
	Multiple block batch write	0	0	0	0	0
Intelligent function module	Batch read	0	0	0	0	0
mengent function module	Batch write	0	0	0	0	0
	Remote RUN	0	0	0	0	0
	Remote STOP	0	0	0	0	0
Programmable controller CPU	Remote PAUSE	\circ	0	0	0	0
Trogrammable controller of C	Remote latch clear	\circ	\circ	\circ	\circ	0
	Remote RESET	0	0	0	0	0
	CPU model name read	0	0	0	0	0
	Directory/file information read	×	×	×	0	0
	Directory/file information search	×	×	×	0	0
	New file creation	×	×	×	0	0
	File deletion	×	×	×	0	0
File	File copy	×	×	×	0	0
FIIE	File attribute change	×	×	×	0	0
	File creation data change	×	X	×	0	0
	File open	×	X	×	0	0
	File read	×	×	×	0	0
	File write	×	×	×	0	0
	File close	×	×	×	0	0

Remark

For details of each command, refer to the following manual

MELSEC-Q/L MELSEC Communication Protocol Reference Manual

(3) System switching during communication made via a module on an extension base unit

If system switching occurs during communication made via a module on an extension base unit by MC protocol or a dedicated instruction, both the old and new control systems may not be able to respond, and this may cause a communication timeout.

INDEX

[A]
Applicable devices
[B]
Backup mode 5-9 Basic concept of redundant system 5-1 Basic system configuration consistency check 5-21 Both systems operations after system switching 5-51
[C]
Canceling the debug mode ••••••5-14 Card removal/setting enable flag(SM609) •••••5-24 Cautions
Cautions when connecting a tracking cable ••••• 3-2 Handling cautions•••••••• 4-6 Cautions when connecting a tracking cable •••••• 3-2 Changing from separate mode to backup mode •••••• 5-59
Changing from the backup mode to separate mode
Confirming backup mode ••••••5-10 Confirming SM1511 and SM1512 to identify system A and system B •••••••4-13,5-4 Confirming system A/system B ••••••4-13,5-4 Confirming that the power supply is ON •••••4-12 Confirming the control system/standby system •••••4-16,5-7
Confirming the separate mode 5-11 Connecting a tracking cable 3-3,4-10 Connecting GX Developer 4-13 Connecting the Q6BAT battery connectors 4-9 Consistency check 5-16 Basic system configuration consistency check 5-21
File consistency check5-18 Memory card setting status consistency check
Operating status consistency check settings ••• 5-20 Operation status consistency check ••••• 5-19 Parameter valid drive settings consistency check ••••• 5-25
Consistency check execution conditions 5-17 Consistency check points 5-16 CONTENTS 1-11

CONTROL EXE. •••••••5-34 Control system •••••••1-22,5-5 Control/standby status flag (SM1515) •••••5-7 Control/standby status flag (SM1516) •••••5-7
[D]
Debug mode
re1
Enforced ON/OFF of external I/O •••••• 5-127 Error check••••••••4-16 Error code
6120 ••••• 5-4,5-8
6200 5-34
6210 •••• 5-34
Error details window ••••••5-34
Error detection processing ••••••5-26
Extended scan time •••••• 9-2
[F] Features ••••••••••••••••••••••••••••••••••••
[H] Hot-start mode ••••••5-30
[1]
Initial start mode ••••••5-29
Internal devices ••••••5-77
Interrupt from network module ••••••7-12
[L] LED BACKUP************************************
LIST OF GROUPES
[M]
Manual system switching ••••••5-38
System switching by the system switching instruction •••••5-39
System switching using GX Developer ••••••5-38
· · · · · · · · · · · · · · · · · · ·

Memory card setting status consistency check ••• 5-23 Memory copy from control system to standby system ••••••••••••••••••••••••••••••••••••	Redundant type extension base unit Remote I/O network 6-17 Remote latch clear 5-131 Remote operation 5-133 Remote PAUSE 5-131 Remote reset 5-131 Remote reset operation 5-134 Remote RUN 5-131 Remote STOP 5-131 Restarting system A and system B Restrictions on online module change (Hot Swapping) 2-22
[N]	REVISIONS A-9
Network module ••••••2-20	Running CPU modules ······4-16
New control system ······ 1-22	
New standby system ······ 1-22	[S]
, ,	Same system network module No. issuing system
[0]	switching request •••••5-54
	SD1588 5-54
Operating status consistency check settings ••••• 5-20 Operation mode•••••• 5-9	SD1589 •••• 5-54
Backup mode······ 5-9	SD1590 ····· 5-54
Debug mode ·······5-13	SD1595 •••• 5-112
Separate mode 5-11	SD1596 ······ 5-112
Operation mode change ••••••5-58	SD16 ····· 5-53
Operation mode change procedure 5-58	SD1600 ······ 5-55
Operation status consistency check •••••• 5-19	SD1601 ••••• 5-55
Operations when changing operation mode ••••• 5-63	SD1602 •••• 5-55
Other system diagnostic error 5-55	SD1610 5-55
Overview •••••• 1-1	SD1709 5-106
	SD5
[P]	Self diagnostics at startup of redundant CPU ••••• 5-28
Pairing Settings and relevant CPU modules •••••• 2-5	Self diagnostics function ••••••5-26 Separate mode •••••5-11
Parameter valid drive settings consistency check	Setting the debug mode ••••••5-14
•••••••••••••••••5-25	Settings of operation mode for error occurrence
Peripheral device configuration ••••••••2-12	•••••••6-24
PID control instruction data ••••••5-80	SFC data ••••••5-80
Precautions when executing the SP.CONTSW	Signal flow memory •••••••5-79
instruction ••••• 5-40	SM1511••••• 5-4
Precautions when executing the system switching	SM1512••••• 5-4
instruction ····· 5-40	SM1518 ······ 7-6
Previous control system ····· App-26	SM1590 5-53
Procedure for mounting modules •••••• 4-6	SM1591 ····· 5-53
Procedure for starting up a redundant system ••••• 4-1	SM1595***** 5-112
Processing time ······ 9-1	SM1596 5-112
Program priority mode ••••••5-92	SM1597••••• 5-112
Programming cautions ••••• 7-1	SM1709 5-106
	SM1710 5-106
[R]	SP. CONTSW instruction •••••5-39
Reason for system switching ••••• 5-34	Special register
Redundant CPU operation upon an error detection	Automatically transferred special registers ••••• 5-81
····· 5-26	Error common information ••••••5-53
Redundant power extension base unit ••••••1-21	System switching disenabling condition •••••• 5-53
Redundant power main base unit •••••• 1-21	Special registers for system switching5-53
Redundant system functions ••••• 5-1,5-32	Special relay
System switching method ••••• 5-33	Automatically transferred special relays •••••• 5-80
Redundant system overview •••••• 1-4	SM1515 5-7 SM1516 5-7
Redundant system configuration •••••• 1-4	3-/-

SM609 ······ 5-24
Standby system error detection disable flag at
Standby system error detection disable flag at system switching 5-53
System switching enable/disable flag from network module ••••••5-53
module •••••5-53
Special relays for memory copy ••••• 5-112
Special relays for system switching ••••• 5-53
STANDBY ••••• 5-34
Standby system •••••• 1-22,5-5
Start mode5-29
Hot-start mode ••••• 5-30
Initial start mode ······5-29
Starting up GX Developer4-13
Synchronized tracking mode ********5-91
System A ••••••• 1-22,5-3
System A discriminating flag (SM1511) ••••• 5-4 System B ••••••• 1-22,5-3
System B 1-22,5-3
System B discriminating flag (SM1512) ••••• 5-4
System B discriminating flag (SM1512) 5-4 System configuration 2-1
Communication via CC-Link ••••••••••••••••••••••••••••••••••••
Communication via MELSECNET/H PLC to PLC
network •••••• 2-5
Communication via MELSECNET/H Remote I/O
Communication via MELSECNET/H Remote I/O network ••••••• 2-7
Communication with a Host OPS, PC, etc. ••••• 2-4
Redundant System · · · · 2-2
System configuration cautions ••••••2-18
Modules that can be mounted on a main base unit
Modules that can be mounted on a main base unit 2-19
Number of slots occupied by a Redundant CPU2-21
2-21
Restrictions on online module change (Hot
Swapping)2-22
Restrictions on use of extension base units •••• 2-19
System A/system B configuration ••••••2-21
System fault information •••••5-55
System switch results5-55
System switching by the system switching instruction
·····5-39
System switching condition ••••• 5-54
System switching dedicated command parameter
5-55
System switching disenabling condition ****** 5-54
System switching during online program change
5-105
System switching execution possibility ••••• 5-44,5-49
System switching execution timing ••••• 5-43
System switching function ••••• 5-33
System switching method •••••• 5-33
System switching precautions ••••••5-56
System switching priority ••••••5-41
System switching requested by the network module
••••••••••••••••••••••••••••••••••••••
System switching using GX Developer 5-38
System switching when a fault occurs in the control
system ••••••5-35
.,

[T]

The case where the "BACKUP" LED of the CPU module is on (red) •••••••8-5
The case where the "MODE" LED does not turn on 8-4
The case where the control system CPU module "SYSTEM A/B" LED is flashing ************************************
Connecting a tracking cable ••••••••••••••••••••••••••••••••••••
Specifications ······ 3-1
Tracking data·····5-74 Tracking function ·····5-73 Tracking trigger ·····5-86
Transfer tracking data during online program change enable flag ····································
wı

[W]

•
Waiting time for online program change (standby
system) •••••• 5-106
Wiring to a power supply module ••••••• 4-7
Writing parameters and programs to CPU ••••••4-14

WARRANTY

Please confirm the following product warranty details before using this product.

1. Gratis Warranty Term and Gratis Warranty Range

If any faults or defects (hereinafter "Failure") found to be the responsibility of Mitsubishi occurs during use of the product within the gratis warranty term, the product shall be repaired at no cost via the sales representative or Mitsubishi Service Company.

However, if repairs are required onsite at domestic or overseas location, expenses to send an engineer will be solely at the customer's discretion. Mitsubishi shall not be held responsible for any re-commissioning, maintenance, or testing on-site that involves replacement of the failed module.

[Gratis Warranty Term]

The gratis warranty term of the product shall be for one year after the date of purchase or delivery to a designated place.

Note that after manufacture and shipment from Mitsubishi, the maximum distribution period shall be six (6) months, and the longest gratis warranty term after manufacturing shall be eighteen (18) months. The gratis warranty term of repair parts shall not exceed the gratis warranty term before repairs.

[Gratis Warranty Range]

- (1) The range shall be limited to normal use within the usage state, usage methods and usage environment, etc., which follow the conditions and precautions, etc., given in the instruction manual, user's manual and caution labels on the product.
- (2) Even within the gratis warranty term, repairs shall be charged for in the following cases.
 - 1. Failure occurring from inappropriate storage or handling, carelessness or negligence by the user. Failure caused by the user's hardware or software design.
 - 2. Failure caused by unapproved modifications, etc., to the product by the user.
 - 3. When the Mitsubishi product is assembled into a user's device, Failure that could have been avoided if functions or structures, judged as necessary in the legal safety measures the user's device is subject to or as necessary by industry standards, had been provided.
 - 4. Failure that could have been avoided if consumable parts (battery, backlight, fuse, etc.) designated in the instruction manual had been correctly serviced or replaced.
 - 5. Failure caused by external irresistible forces such as fires or abnormal voltages, and Failure caused by force majeure such as earthquakes, lightning, wind and water damage.
 - 6. Failure caused by reasons unpredictable by scientific technology standards at time of shipment from Mitsubishi.
 - 7. Any other failure found not to be the responsibility of Mitsubishi or that admitted not to be so by the user.

2. Onerous repair term after discontinuation of production

- Mitsubishi shall accept onerous product repairs for seven (7) years after production of the product is discontinued.
 - Discontinuation of production shall be notified with Mitsubishi Technical Bulletins, etc.
- (2) Product supply (including repair parts) is not available after production is discontinued.

3. Overseas service

Overseas, repairs shall be accepted by Mitsubishi's local overseas FA Center. Note that the repair conditions at each FA Center may differ.

4. Exclusion of loss in opportunity and secondary loss from warranty liability

Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation of damages caused by any cause found not to be the responsibility of Mitsubishi, loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi products, special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi products, replacement by the user, maintenance of on-site equipment, start-up test run and other tasks.

5. Changes in product specifications

The specifications given in the catalogs, manuals or technical documents are subject to change without prior notice.

Microsoft, Windows, Windows NT, and Windows Vista are registered trademarks of Microsoft Corporation in the United States and other countries.

Pentium is a trademark of Intel Corporation in the United States and other countries.

Ethernet is a trademark of Xerox Corporation.

All other company names and product names used in this manual are trademarks or registered trademarks of their

respective companies.

QnPRHCPU

User's Manual (Redundant System)

MODEL	QNPRHCPU-U-NI-E	
MODEL CODE	13JR76	
SH(NA)-080486ENG-O(1106)MEE		



HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN NAGOYA WORKS : 1-14 , YADA-MINAMI 5-CHOME , HIGASHI-KU, NAGOYA , JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.